


Please read the instructions carefully before using the speaker
Please Keep this manual for future access problems

Open the box

Please make sure the following accessories are safe

- a. a WIFI speaker
- b. a power adapter
- c. a user manual
- d. a 3.5mm audio cable

(a)

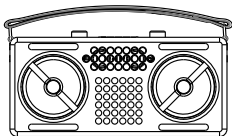

WIFI speaker

(b)



power adapter

(c)



user manual

(d)



external audio cable

Technical parameters

- WIFI solution: relink
- Connection Interface:DC/ AUX /LAN
- Manual control:MODE Play/Pause Next/Prev Vol+/- BASS+/-
- Patent App Support most Player APP
- Support OS:Andriod4.0 or above IOS 6.0 or above
- Wi-fi network compatibility:802.11n b/g/n
- Music format decoding:MP3 ACC WAV FLAC
- APE M4A support 24Bit/192Khz
- Input Power:ADAPTER:18V 2A

- Output power:20w
- Driver unit:mid woofer 4"2 8 Ohm
- Tweeter 1"2 4 Ohm
- Frequency:60Hz-20KHz
- Battery :1800MA*3
- S/N:≥75dB
- Distortions≤0.2 1W 1Khz
- Separation≥50dB(1KHz)
- Dimensions:350(L)x160(H)x150(W)

SOLDIER I

OPERATION

- Button operation;
- ⏻ long press for power on or off
- ⏭ short press for next song
- ⏮ short press for last song
- ⏸ short press for play/pause
- M mode shift button AUX-Bluetooth-WIFI

LED DESCRIPTION

1.Green is always bright in AUX/USB mode

2.When changing to Bluetooth mode

A: Blue light bright is showing the bluetooth paused status

B: When searching, twinkle blue light is showing bluetooth into the search status

After a successful connection, blue is always bright

C: In bluetooth play status, blue light is always bright

3.When changing to WIFI mode

A: White light bright is showing the WIFI paused status


B: When searching, twinkle white light is showing WIFI into the search status;

After a successful connection, white is always bright

C: In WIFI play status, white light is always bright

Mode	Status	Light
AUX/SUB	play,pause	green
WIFI	waiting for pairing	white(fast blink)
	play,pause	white
Bluetooth	waiting for pairing	blue(fast blink)
	play,pause	blue

Product Operation Introduction

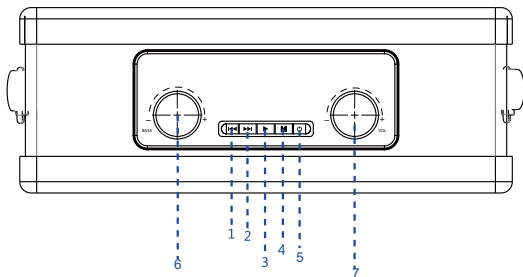

- 1.pre
- 2.next
- 3.play/pause
- 4.BT/AUX choose
- 5.On/Off
6. volume +/-
- 7.bass +/-

AVOIDING WATER

The product should not be subjected to water or water splashing, should not be placed in some objects such as vases filled with liquid. Keep the product away from vases, buckets, wash bowls. If the liquid poured into the product,

HIGH TEMPERATURE OR HUMIDITY

Do not use the product which be placed in high temperature environment (such as an ignition source, oven or similar environment)

Do not use the product which be placed in very humid or steam filled environment

When you move the product from a cold environment to a hot environment, if the product interior already with moisture, will not work. At this time, turn on the power to wait for about an hour, it can work normally after all moisture evaporation.

Attention : Our company retained the power that change the design and specifications for improve the product.

Please kindly understand that we will not notice in further.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.