
#### **PINK Fanny Pack Speaker** User Manual

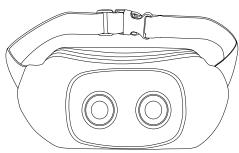


# THIS IS NOT A TOY

ONLY USE UL CERTIFIED WALL ADAPTERS AND THE UL CERTIFIED CORD INCLUDED WITH THIS PRODUCT. Model NO. 6996-1

# PINK Fanny Pack Speaker **User Manual**

1 Micro USB Charging Port (2) Light Indicator ③ Power Button (4)UL Certified USB to Micro (5) Male USB Connector (6) Micro-USB Connector

 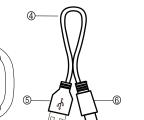


# **PINK Fanny Pack Speaker**

Model No.	6996-1
Size	10 x 3.5 x 6.25 inches Approx.
Weight	.65 lbs
Connect	Wireless
USB Charge Cord	21 Inches
Bluetooth Version	2.0
Frequency	2.402~2.48GHz
Input	DC 4.25V/400mA
Power Source	USB
Battery Type	UL Certified Lithium-Ion Polymer Battery
Capacity	400mAh
Playing Time	5hrs
Charging Time	2hrs
Signal-to-Noise	80dB
Bluetooth Distance	32 Feet
Power On/Off	Hold Down the Power Button on the back of the speaker

# **PINK Fanny Pack Speaker**

- **OALWAYS REMOVE SPEAKER FROM FANNY PACK WHEN** CHARGING
- ② Insert the Male USB port into a UL Certified USB Wall adapter or PC. \*Using a non UL certified wall adapter IS NOT recommended.
- 3 Plug Micro-USB cable into the Micro-USB Charging Port located on the top of the speaker.
- It is recommended that the speaker is fully charged before its first use/pairing.
- ⑤ A red light will illuminate, indicating the device is charging. A full charge takes up to 2 hours.
- © When the red light turns off, the speaker is fully charged.



### PINK Fanny Pack Speaker **Operating Instructions**

- Power On: Hold down the power button until you hear "Power On, Pairing"
- Pairing: Under your phone's Bluetooth settings, pair with the device named "PINK Speaker." When pairing is successful, the blue light will become solid and you will hear "Connected."
- Playing Music: Choose a song and enjoy! The blue light will flash slowly when music is playing.
- **Volume:** Use the controls on your phone to raise and lower the volume.
- Play and Pause: Press the play and pause button on your phone.
- Power Off: Hold down the power button until you hear "Power Off." The speaker will turn off in 10 minutes when not connected to a device.

### **PINK Fanny Pack Speaker Notifications**

- Phone Call: If you are receiving a phone call while the music is playing, the blue light will turn solid and the music will stop. When the call has ended, the music will resume. When you make a call, the music will stop.
- NOTE: You cannot hear the person you are talking to through the speaker.
- **Text Message:** When you receive a text message while the music is playing, the music will continue to
- Notifications: When you receive a notification while the music is playing, the music will continue to play.

FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

# **PINK Fanny Pack Speaker**

Make sure the speaker is charged. If the speaker does not pair with your phone, power off the speaker and power it back on. If the issue persists, turn off your device and restart your phone. Check these further steps if you cannot resolve the issue:

- ① Make sure Bluetooth is enabled on your phone.
- ② Check that the speaker is not connected to another device.
- 3 Make sure you are within 32 feet of the speaker with no barriers (walls, other large electronics) between the device and your phone.

For further troubleshooting steps, please contact Victoria's Secret Customer Service

## **PINK Fanny Pack Speaker** Important Safety Instructions

IF USED IMPROPERLY. RISK OF ELECTRIC SHOCK COULD When using electronic products, basic precautions should RESULT IN SERIOUS INJURY OR DEATH.

- 1. Read these instructions.
- Keep these instructions.
- 3. Please pay careful attention to all warnings.
- Follow all instructions.
- 5. Only use the UL Certified Cord supplied by the manufacturer.
- 6. Unplug this device when unused for long periods of time.

#### **PINK Fanny Pack Speaker** WARNINGS/PRECAUTIONS

always be followed:

- DANGER: To prevent fire or shock hazards, do not expose to rain or moisture.
- **DANGER:** A wet or contaminated micro-USB connector may cause excessive heat or melting and may lead to fire damage or personal injury. Always charge your speaker with a clean, dry micro-USB connector that is included with the product.
- CAUTION: Use only the supplied and manufacturer-approved chargers and unplug this device when not in use for long periods of time or during lightning storms.
- **DO NOT** modify, repair or disassemble device (especially the battery). The battery in this device may present a risk of fire or chemical burns if misused or tampered with.
- **DO NOT** use alcohol or any type of abrasives to clean the speaker. You may use a soft dry cloth.
- Avoid severe physical shocks (ex. dropping).

#### **PINK Fanny Pack Speaker WARNINGS/PRECAUTIONS - CONTINUED**

- **DO NOT** expose the speaker to contact with sharp objects as this will cause scratching and damage.
- **DO NOT** stick anything inside the speaker as this may damage internal components and cause serious injury.
- DO NOT carry this unit by its cord or use the cord as a handle.
- **DO NOT** expose or charge the device to temperatures greater than 98°F (37°C) Lithium-ion batteries contain flammable electrolytes that may vent, ignite, and produce sparks when subjected to high temperature.
- **DO NOT** place or keep this product near heat sources, such as direct sunlight, radiators, stoves or any other apparatus that produces heat. This may cause an explosion, degrade the performance and/or reduce battery life.
- DO NOT store the Bluetooth Speaker in any vehicle.
- **DO NOT** listen to the speaker while operating a vehicle. This may impair your ability to drive.
- Never allow children to play with the speaker. Small parts may be a choking hazard

#### **PINK Fanny Pack Speaker** WARNINGS/PRECAUTIONS - CONTINUED

- WARNING: If you do not intend to use the device for a certain period of time, the power cable should be unplugged from the unit to prevent fire, damage, or corrosion.
- Store the speaker in a cool dry place.
- **DANGER!:** If the speaker is cracked or damaged, do not attempt to charge. This may cause electric shock or electrocution.
- DISPOSE OF THE DEVICE PROPERLY at a recycling

MADE IN CHINA / FAIT EN CHINE / HECHO EN CHINA DISTRIBUTED BY VICTORIA'S SECRET PINK REYNOLDSBURG, OHIO, 43068, USA

FACTORY ADDRESS: IXIN GLOBAL TRADE DONG TIAN PLAZA SUITE 603, 19 HAIAN ROAD, GUANGZHOU CHINA 510627

- This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired

Caution: Changes or modifications not approved by Victoria's Secret PINK could void the user's authority to

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential insallation. This equipment generates, uses and can radiate radio requency energy and, if not installed and used in accordance with the instructions, may cause harmful erference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment