

8.5" H x 11" W

FRONT

IMPORTANT INFORMATION

- DO NOT play with RC vehicle in the stairs, street, driveways, where there is any or heavy vehicular traffic or pools.
- DO NOT stand on, sit on or throw RC vehicle as doing so can result in injury to the person and the unit.
- DO NOT run RC vehicle into furniture, walls, pets, people etc., as doing so may cause injury to the people and pets and irreparable damage to the unit.
- DO NOT allow long hair or loose apparel such as shoelaces near the turning wheels of the car.
- DO NOT drive RC vehicle through water, snow, mud, etc.
- DO NOT play near pools.
- DO NOT use this unit in a manner other than specified in instructions.
- Instruct children in the proper use of this unit.
- DO NOT allow attachment of items such as jumbo ropes, pet lashes, cables, etc., to product as they may cause a strangulation hazard.
- DO NOT drag the unit as doing so may cause irreparable damage.
- Examine the unit periodically to make sure item is in good working condition.
- Ensure play area is free from hazards.
- DO NOT leave children unattended at any time.
- Do not allow pets near this item.
- Do keep away from fire.
- Do not allow anyone to use this product who is under 3 years of age.
- Avoid direct impact with obstacles.
- Drive vehicle in a smooth clean surface.
- DISCARD PACKAGING AND REMOVE ALL ACCESSORIES BEFORE GIVING THE VEHICLE AND TRANSMITTER TO A CHILD.

NOTE: While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury resulting from use. All merchandise is sold on this condition, which no representative of the company can waive or change.

BATTERY SAFETY INFORMATION

- Changing of rechargeable batteries should only be done under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the product before recharging.
- Changing of rechargeable batteries should only be done under adult supervision with batteries removed from product.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE NOTE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Industry Canada License-exempt RSS-310. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Carrier frequency: 49.86 MHz Field strength: 75.5 dBµV/m at 3 m.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ITEM NUMBER Colors and decorations may vary.
9203/9204/9207 Keep content details for future reference.

ATTENTION: PLEASE DO NOT RETURN TO STORE.

CONTACT US DIRECTLY FOR A REPLACEMENT

For more information or questions, Please call customer service..... **1-888-752-Toyz (8699)**

Send us an email at..... **help@bettertoyz.com**

Write to us at: Better Sourcing Worldwide, Ltd. 1835 Hallandale Beach Blvd., Unit # 635 Hallandale Beach, FL 33009

MADE IN CHINA. PRINTED IN CHINA.
V: 101018
bettertoyz © 2018 Better Sourcing Worldwide, Ltd.
www.littletikes.com
© & ® The Little Tikes Company U.S. & other countries.
Design, names, characters, designs, and packaging are the property of Little Tikes, Good and Beautiful by Better Sourcing Worldwide, Ltd.

little tikes.

RC WHEELZ

3+ years

First Racers™

Item Number
9203/9204/9207

CONTENTS

- 1 Little Tikes First Racers Car or Truck
- 1 Remote Control
- 1 Instruction Sheet

Collect the Car and Truck!



Illustrations are for reference only. Styles may vary from actual contents.

NOTE: Same frequency Radio Control vehicle's can not be used at the same time. Must use different frequency vehicles 27mhz & 49mhz together.

PERFORMANCE TIPS: Wifi signal may interfere with the signal of the transmitter of your vehicle and affect its functions. Stay far away of wifi for best performance.

BATTERY REQUIREMENT

Batteries Not Included

VEHICLE:

3x 1.5V AA/LR6

(not included)

REMOTE CONTROL:

2x 1.5V AAA/LR03

(not included)

IMPORTANT! ADULT SUPERVISION REQUIRED AT ALL TIMES.

 
Tools Needed:
Phillips/cross head screwdriver (not included) required for battery replacement. Alkaline batteries recommended. Installation of batteries should only be done by an adult. Keep content details for future reference.

BACK

BATTERY INSTALLATION

Before playing, an ADULT must install fresh alkaline batteries in the CAR and REMOTE. Here's how:


1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the underside of the RC vehicle. (Fig. 1)
2. Install three (3) fresh 1.5V AA alkaline batteries (not included) in the RC vehicle making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 1)
3. Place the compartment cover back in original position and tighten the screw.

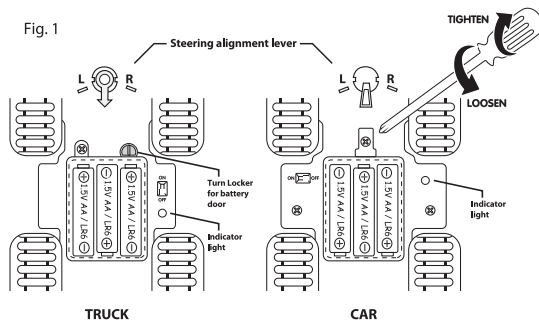

REMOTE CONTROL

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the underside of the remote. (Fig. 2)
2. Install two (2) fresh 1.5V AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
3. Replace the compartment cover back in original position and tighten the screw.

 Fig. 2

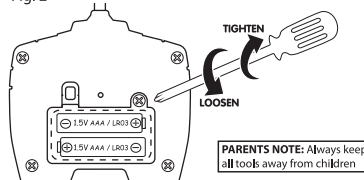

PARENTS NOTE: Always keep all tools away from children

 
QUICK START

DRIVING THE RC VEHICLE

1. Place the RC vehicle on the floor.
2. To assure your RC vehicle will pick up the correct frequency, first slide to the "ON" position located under vehicle.

NOTE: When finished playing, turn OFF the RC vehicle.

HOW TO USE YOUR REMOTE

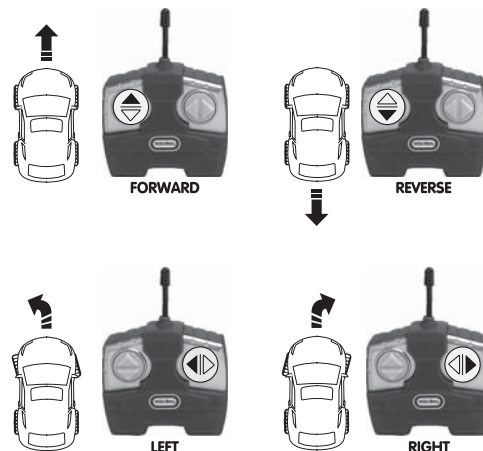

IMPORTANT NOTE:
In the event of a malfunction, reset the item by removing and replacing the batteries. If function is still not restored, replace the batteries with fresh alkaline batteries.