

# USER MANUAL

HS-PA212204



## PROFESSIONAL SPEAKER

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE SYSTEM CONNECT

## IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.

 


1. Protection of electric power supply line: Be aware that the electric power supply line is not Tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock. DO NOT pull or drag or the power supply line
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it the distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed.
3. Casing Dismantling: DO not dismantle the casing if one touches the inner components, he will probably get serious electric shock.
4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall Contact the sell shop or nearest repairing center  
Attention: This sat applies to AC 120V-240W/50Hz-60Hz power supply. Use standard power Supply. Please be sure for the correct power supply before use it

## 1-1 PRODUCT FEATURES

1. High output power;
2. With Karaoke function;
3. The treble is clear, natural and bass is powerful;
4. Compatible to DVD/VCD/CD/TAPE/VIDEO/MP4/AUX



## 2-1 FRONT PANEL FUNCTION INSTRUCTION

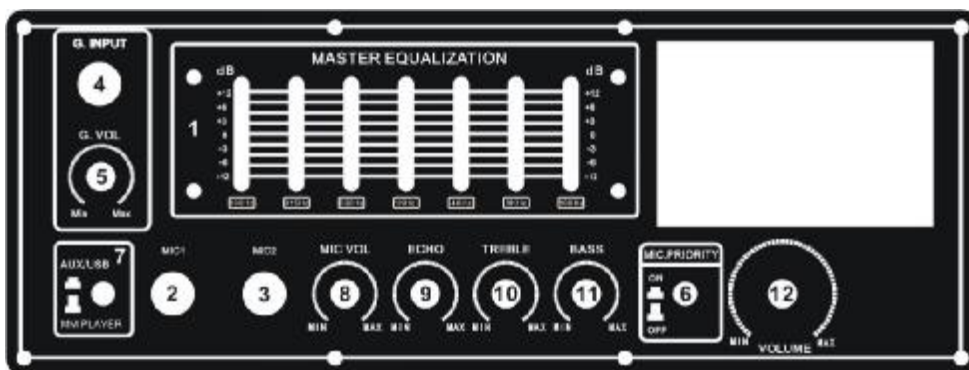

01. EQ CONTROL PANEL.
02. MIC1: CONNECT WITH 1/2" WIRE MICROPHONE.
03. MIC2: CONNECT WITH 1/2" WIRE MICROPHONE.
04. GUITAR: CONNECT WITH THE GUITAR.
05. G.VOLUME: ADJUST THE "GUITAR" VOLUME.
06. MIC PRIORITY: PRESS THIS BUTTON TO ENTER MIC PRIORITY.
07. AUX/USB/MM PLAYER: AUX/USB/MM PLAYER
08. MIC VOLUME: ADJUST THE "MIC" VOLUME.
09. ECHO: ADJUST THE "MUSIC" ECHO.
10. TREBLE: ADJUST THE "MUSIC" TREBLE.
11. BASS: ADJUST THE "MUSIC" BASS.

12. VOLUME: ADJUST THE "MUSIC" VOLUME.

  - 01. LED DISPLAY
- 02. MEMORY 1 CARD: PUT MEMORY CARD INTO THE SLOT.
- 03. MEMORY 2 CARD: PUT MEMORY CARD INTO THE SLOT.
- 04. MODE/DEL: PRESS THIS BUTTON TO SELECT MEMORY CARD/FM/LINE/BLUETOOTH
- 05. REPEAT: REPEAT
- 06. REC: RECORD
- 07. EQ: EQUALIZER
- 08. PREV/CH- FOR MP3 MODE, PREVIOUS SONG WITH SHORT PRESS. FOR FM MODE, PREVIOUS CHANNEL WITH SHORT PRESS.
- 09. PLAY/SCAN: (FM STATE; SHORT-CYCLE ACCORDING TO THE SELECTED TABLE, AUTOMATIC SEARCH PLATFORM, AUTOMATIC SAVE TABLE, PLAY RECORDING FILE WITH LONG PRESS)
- 10. NEXT/CH+: FOR MP3 MODE, NEXT SONG WITH SHORT PRESS. FOR FM MODE, NEXT CHANNEL WITH SHORT PRESS.

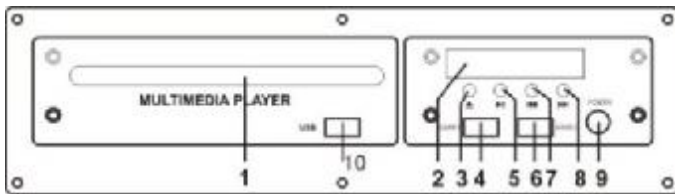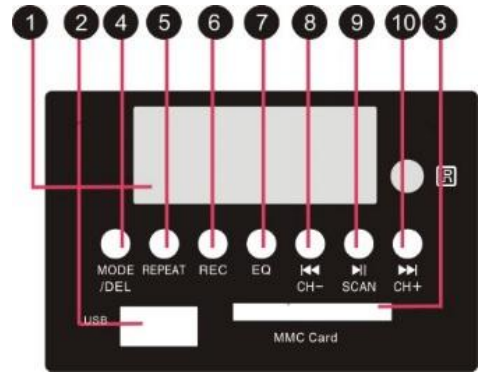

- 01. THE DVD DISC SLOT
- 02. LED DISPLAY
- 03. OPEN/CLOSE BUTTON
- 04. GAME STICK 1
- 05. PLAY/PAUSE BUTTON
- 06. GAME STICK INPUT 2
- 07. PREVIOUS SONG
- 08. NEXT SONG
- 09. POWER SWITCH
- 10. USB SOCKET



- 1. SCREEN ROTATION
- 2. THE SIMULATION MENU
- 3. THE POWER SWITCH
- 4. THE SIMULATION -


## 5. THE SIMULATION +
 
### REMOTE CONTROL

01. STANDBY STATE
02. MODE CONVERSION (MEDIA PLAYER/AUX/FM/BLUETOOTH)
03. (FAST REWIND) FOR VIDEO MODE, PREVIOUS SONG WITH SHORT PRESS. FOR FM MODE, MANUAL SEARCH CHANNEL
04. PLAY/PAUSE IN VIDEO MODE. FOR FM MODE, TO THE NEXT CHANNEL WITH SHORT PRESS. FOR FM MODE, AUTOMATIC SEARCH CHANNEL WITH ONE PRESS.THE CHANNEL WILL AUTOMATIC SAVED IN THE SYSTEM
05. (FAST FORWARD) FOR VIDEO MODE, NEXT SONG WITH SHORT PRESS. FOR FM MODE MANUAL SEARCH CHANNEL FORWARD WHICH HAS SIGNAL WITH LONG PRESS
06. REPEATED A SONG IN VIDEO MODE, CANCEL RECORDING FILE WITH LONG PRESS
07. VOL+ VOLUME INCREASE
08. VOL- VOLUME REDUCE
09. MUTE
10. FOR VIDEO MODE THE SONG READ-AHEAD 10 SECONDS GO TO NEXT SONG WITH LONG PRESS
11. FOR VIDEO MODE, CHANGE EQ ADJUSTMENT WITH SHORT PRESS
- 12.0-9 DIRECTLY SELECT THE CHANNEL WHICH HAS SAVED IN THE SYSTEM ALREADY
13. (RECOR) RECORDING
14. (REPLAY) REPLAY



01. POWER
02. PAL/NTSC
03. OPEN/CLOSE
04. 1-10, 10 + : THE NUMBER CHOOSING KEY
05. SHOW
06. VOLUME
07. TIME SETUP
08. FORWARD
09. REWIND
10. PREVIOUS
11. NEXT
12. P\_SCAN
13. PLAY/PAUSE
14. STOP
15. SETUP
16. RETURN
17. THE UP DIRECTION IN DVD MODE BUTTON
18. THE LEFT DIRECTION IN DVD MODE BUTTON
19. THE RIGHT DIRECTION IN DVD MODE BUTTON
20. ENTER
21. THE DOWN DIRECTION IN DVD MODE BUTTON

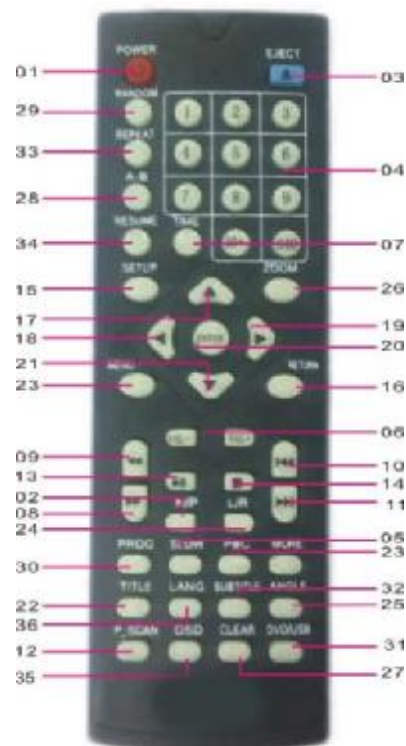

22. DISPLAY TITLE SCREENING DVD MODE NCD 2 0 DISC
23. PBC: THE DOWN DIRECTION IN DVD MODE BUTTON
24. LEFT/RIGHT SOUND CHANNEL
25. ANGLE
26. ZOOM
27. CLEAR
28. REPEAT THE PROGRAM A-B
29. RANDOM
30. PROG
31. USB/DVD
32. SUBTITLE
33. REPEAT
34. RESUME
35. OSD
36. LANGUAGE

#### Bluetooth Use Instruction:

The Bluetooth sign light twinkles. Bluetooth connect successfully when speaker 'DI' sound Set on mobile phone. Connect to Bluetooth data, search equipment and match properly The proper connect Bluetooth lights keep on, and music work on speaker normally

#### Record function

Speaker can record the sound of music from microphone. FM radio, or AUX sound sources. And save the record file in memory card.

Operation as below:

1. Put the memory card on speaker
2. Connect with microphone to speaker or turn FM radio to play, or connect AUX and play
3. Press "Record" button to record, after record finish. Press "Record" again to save the file
4. Press" Replay" to play the record file

#### 3-1 USE INSTRUCTION

 
1. Connect the signal cables according to the back panel connection instruction
2. To sure the correct the Voltages .insert electronic source cable, turn on the power switch button
3. Adjust function keys to your satisfied best sound effect

#### 4-1 PRODUCT EQUIPMENT LIST

1. Speaker
2. Power cable
3. VIDEO remote control
4. User manual
5. AV cable

#### 5-1 BACK PANEL CONNECTION DIAGRAM

01. DC 12V INPUT

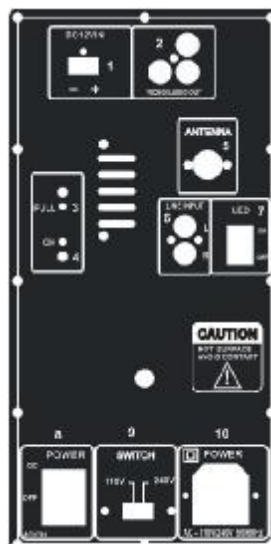

- 02. VIDEO/AUDIO OUTPUT
- 03. FULL OF ELECTRICITY
- 04. CHARGING INDICATOR
- 05. FM ANTENNA
- 06. LINE INPUT
- 07. LIGHT POWER : LIGHT ON/OFF
- 08. POWER SWITCH: AC DC SWITCH
- 09. 110V/240V : ADJUST THE VOLTAGE 110V OR 240V
- 10. AC~110/240/50~60HZ: CONNECT TO AC POWER, PLEASE BE SURE CONNECT TO 110V/240V 50-60HZ. OUTER RANGE POWER MAY CAUSE ACCIDENT.

## 6-1 PRECAUTION

In order to prevent operating problems or serious damage to the device, please comply with the following remarks

1. Hold the electric out let while pulling out the plug. Do not pull the wire.
2. Operating audio appliances should be kept away from heating facilities.
3. Do not attempt to fix or revise the circuit
4. Do not touch the internal parts, otherwise electric shock or serious damage to the device might cause
5. Pull out the plug if not in use for long
6. Ensure the audio product in a ventilated dry condition with about 20mm Space around as for heating dispersion

Warning: Do not expose this appliance to rain or moisture and vessel containing liquids, such as a cup.  
Vase, is not supposed to be placed on or above the appliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.