

USER MANUAL




Dear User:

Thank you very much for buying this speaker box, please kindly read instruction manual before operating the product.

MADE IN CHINA

Front panel function instruction

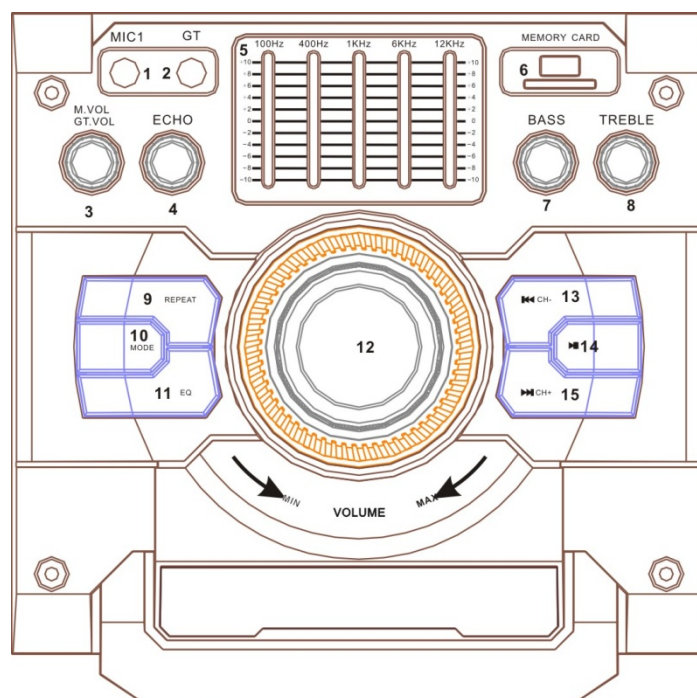

- 01. MIC INPUT:** Used for microphone signal input.
- 02. GUITAR INPUT :** Connect a guitar cable to this input terminal.
- 03. GT.VOL:** Turn this knob to adjust the volume for the guitar.
MIC VOL: Adjust the microphone volume knob to change the handset volume .
- 04. ECHO:** In the use of microphone is adjust reverberation knob can adjust microphone sound field echo effect.
- 05. EQUALIZER:** 5 Band Equalizer
- 06. MEMORY CARD:** MEMORY CARD slot input player files, connect your MEMORY CARD memory (flash drive) devices to play music.
- 07. BASS:** MUSIC Bass Control, Turn this knob to adjust the music Bass.
- 08. TREBLE:** MUSIC Treble Control, Turn this knob to adjust the music Treble.
- 09. REPEAT:** The song can repeat
- 10. Mode:** Press this button to select between the 4 built-in modes. Inputs (Line in, Memory card, BT, FM) .
- 11. EQ:** Music of the band signal can be adjusted
- 12. VOLUME:** Adjust the size of volume knob to change the volume of phonetic notation.
- 13. CH-:** MP3/BT previous song and FM CH- button.
- 14. PLAY/PAUSE:** play pause button.
- 15. CH+:** MP3/BT next song and FM CH+ button.


Remote control



01. **POWER:** Power ON/OFF.
02. **MODE:** Input MODE Button: Press this button to toggle between the various inputs (Line in, Memory, BT, FM) .
03. **MUTE:** Mute button.
04. **PLAY/PAUSE:** play pause button. When on the mode of FM, Press this button to auto scan all channels.
05. **PREVIOUS:** MP3/BT previous song and FM CH- button.
06. **NEXT:** MP3/BT next song and FM CH+ button.
07. **VOL - :** Volume reduce button.
08. **VOL +:** Volume increase button.
09. **REPE:** Repeat function in Memory card mode all songs and single songs repeat.
10. **Stop:** Stop function key.
11. **E/R:** Recording function.
12. **"0-9"** songs select button. In Memory card mode can select songs directly can select in Memory card by numbers 0-9. For example: if you want No. 9 song by playing songs in Memory card, just need to press 9, and if you want No.19 song, just need to press 1+9. In FM mode can select FM channels directly (input channel frequency to select channels) : a. Can select auto-kept channels by pressing 0- 9 (make sure channels were already kept). For example: in FM mode, you want to listen No.3 channel, just need to press 3, and if you want No.19 channels, just need to press 1+9. b. Select frequency directly for channels by numbers 0- 9. For example: in FM mode, you want to hear 98.5 MHz channel, just need to press 9+8+5.

Back panel connection diagram

1. **Power:** Power ON/OFF
2. **SWITCH:** 120V or 240V
3. **AC~120V-240V 50/60Hz:** Connection
4. **Antenna:** is for receiving the FM signal. Before using, pull up the telescopic. After using, push down the FM antenna to better protect it.
5. **MIC Priority:** Press the button to enter the microphone priority mode, the system mainly to enlarge the microphone volume, while reducing music.
6. **LED:** LED ON/OFF
7. **Audio:** Line input and output socket.

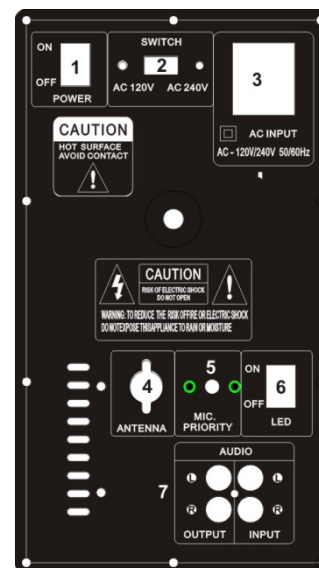

BT:

BT Mode: When chose the bt mode, after pressing the button to the right, the unit will sent out a beep. At the same time, the bluetooth indicate will go twinkle. Then it will search the BT signal. Open the bt of mobile phone. Find the bt name of the unit called "A17-P1022BNF" to connect. Then enter the password for "0000". After a successful match, you can play the music in mobile phone. When playing the music, you switch the other mode, you can press the play button to continue the music without reconnect the bt.

NFC Function:

If your phone have the NFC function, that you just put your phone to the sensor, (Where have the NFC sticker on the unit). It will be automatic connect, not need password.

Record function

Speaker can record the sound or music from microphone, FM radio, or AUX sound sources. and save the record file in memory card.

Operation as below:

- 1.Put the memory card on speaker.
- 2.Connect with microphone to speaker or turn FM radio to play, or connect AUX and play.
- 3.Press "Record" button to record, after record finish,press"record" again to save the file.
- 4.Press"Replay" to play the record file.

Note:

As the product is constantly update, the Company reserves the right without prior notice to the product changes modify. Are subject to change without prior notice!

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.