Specification

Wireless version: 4.2+EDR Speaker driver unit size: 6.5 INCH Frequency response: 100Hz-20KHz Signal to noise ratio: >=85dB FM scan range: 87.5-108.0Mhz Wireless range: 10 meter

emory USB-C/TF-C: more than 32GB USB-C charging: DC 5V

Battery capacity: 1200mAh Backup time via wireless mode: Approx 1 hours at max volum Backup time via USB-C mode: Approx 1 hours at max volume

Charging via USB-C port (PC): 2.5 hours

# FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

Accessory :

Charging cable: 1 piece;

cable : 1 piece

Wired Microphone: 1 piece

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not install and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver
- -Consult the dealer or an experienced radio/TV technician for help.



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body



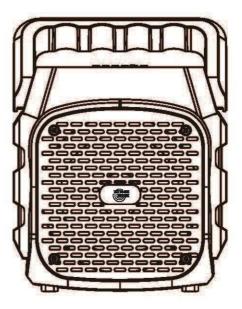

#### **WIRELESS BT FUNCTION**

- 1. Turn on the speaker.
- 2. Turn on the BT function on your mobile device and search for the speaker.

The device name is "ACOUSTIC". Once found, click on it to pair.

3. Once pairing is complete, you can play music from your phone via the unit.

Press ▶ to play/pause.

## **USB/TF CARD OPERATING INSTRUCTIONS**

Insert the USB or TF card into the USB/TF slot. The unit will read the music automatically.

Press | to play/pause.

To control volume press "-" (Volume Down) or "+" (Volume Up). Track).

### **FM RADIO**


Press MODE to switch to FM Radio mode. Press | button to search the channels automatically. This operation will scan the FM stations and save them to the unit's memory. This procedure will take several minutes to complete and should not be interrupted.

Once complete, you can press"▶" or the "◄" to skip to the next channel or return to the previous channel.

To control volume press "-" (Volume Down) or "+" (Volume Up).

Please Note: Connect the cable to the Charging Interface to receive the FM radio signal clearly. This is the same function as an antenna.

Plug the USB cable into the unit's MICRO-USB port and connect to a power source. The LED light will illuminate red to indicate that it is charging.

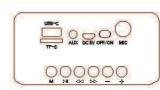

To control volume press "-" (Volume Down) or "+" (Volume Up). To change tracks press " 

" (Previous Track) or " 

" (Next Track).

- 1. DC 5V: Plug the Micro USB-C cable to the speaker and connect other end USB-C port to the power source. (DC 5V)
- 2. Aux: Audio input jack when connect. Enable the sound source connection active devices (PC, digital media player, mobile phones and other audio-visual products).
- USB-C slot: Used to read the Mp3 files in FAT32 format.
- 3. TF-C slot: Used to read the Mp3 files in FAT32 format.
- 4. Play/Pause: Under USB-C/TF-C/Bluetooth mode, press to play and pause:
- 5. M: To change mode during USB-C/TF-C, Bluetooth, FM and Aux-in mode. Press and hold to switch on and off the light
- 6. PREV: USB-C/TF-C/Bluetooth/FM mode: Press to move previous FM channel / track.
- 7.NEXT: USB-C/TF-C /Bluetooth/FM mode: Press to move next FM channel / track.
- 8. MIC-IN: Connect with the MIC when you need.
- 9. +: Press to increase the volume
- 10. -: Press to decrease the volume

# **AUX-IN**

Insert the audio cable into the AUX slot on the unit, press MODE to switch to AUX mode.

To control volume press "-" (Volume Down) or "+" (Volume Up). Please note: In AUX mode, Previous/Next Track buttons on the unit do not work. You can select a song using the connected device.