User Manual



1. General Specification List

GENERAL HEADSET FEATURES		
Standards	Bluetooth Specification VR4.1	
Stereo Portable (A2DP)	Support	
Bluetooth Headset Profile(HSP)	Support	
Bluetooth Hands Free Profile(HFP)	Support	
Bluetooth AVRCP Profile AVRCP	Support	
Theoretical range in open field	>10m no obstructer	
Re-program the firmware	irmware Yes (Using the Tst Jig through SPI interface)	
Battery type power	3.7V,185mAh Lithium polymer Battery (type)	
Stand By (Paired mode)/talk	300hrs/ 9hrs	
ANC Power on//BT talk	6hrs	

Antenna		Ceramic antenna
Input		Micro USB In (charging)
Battery		
	Type	Lithium Polymer
	Power	3.7 V, 185mAh
	Complete charge time	<2hrs

2. Operation Indication

Button	Action	Operation
	Press once	Increase Volume
Volume +	Press and hold	Next Song
Volume -	Press once	Decrease Volume
	Press and hold	In Song
MFB	Press once	Play/Pause
MFB	Press and hold for 1.5 seconds when	Power on
MFB	Power on State Press and hold for 4 seconds when	Power Off
ANC Power on/Power off	ANC Power on-Solid	Green
	ANC Power off	N/A
Power/Pairing	Power On-Solid	B1ue
	Power Off-Solid	Red
	Pairing Mode - Flashing	Blue Red
Charging (plugged into power source)	Charging - Solid	Red
Charging (plugged into power source)	Fully Charged- Solid	Blue
Not Charging (not plugged into power source)	Flashing - Low Battery	Red

Not charging (not plugged into power source)/low battery	Power Off	n/a
--	-----------	-----

- 3. Power Source/Electrical Requirements
- $3.\,1$ $3.\,7$ V 185mAh (two 150mAh Lithium Ion rechargeable batteries)

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.