

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Customer Information

Name: _____
 E-mail: _____
 Address: _____
 City: _____ State: _____ Zip: _____

Product Information

Product Name: _____
 Model Number: _____
 Serial Number: _____
 Date of Purchase: _____

Printed Declaration

I, _____, hereby certify that the information provided above is true and correct to the best of my knowledge and belief. I understand that providing false information may result in the voiding of the warranty.



www.magicshine.com



Designed in Taiwan by MAGICSHINE

CHARGE THE BATTERY

The battery has been charged at least for 4 hours.
 If the battery indicator shows red lights on the battery, connect the charger to a wall outlet.
 Connect the charger to the battery.

OPERATION

MAIN THE LIGHT AND WIRELESS REMOTE CONTROL

Check the battery, replace the battery and the light bulb if the same has, replace the battery when the indicator on the remote control flashes red, replace the battery when the indicator on the remote control flashes red and blue.

REPLACE REMOTE CONTROL BATTERY

1. Turn the remote control battery cover clockwise to open it.
 2. Insert the battery into the battery cover.
 3. Turn the remote control battery cover clockwise to close it.

REPLACE LIGHT BULB

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

Video Flowchart :

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.
 4. Turn the light bulb cover clockwise to open it.
 5. Insert the light bulb into the light bulb cover.

Light control diagram

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

Other mode diagram

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

SPECIFICATION

- Light Source: LED 4000K 10PCS
- Lens Material: PC/PMMA
- LED Driver: 1.0A/1.5A
- Battery: 4*AA (Not Included) (2.1V AA)
- Battery Life: 50000 Hours
- Charge Time: 2-4 Hours
- Charging Mode: USB
- Size: 50*50*45mm
- Weight: 100g (without battery)

PACKAGE CONTENTS

Your package includes the following items:
 1. Light Source
 2. Lens Material
 3. LED Driver
 4. Battery
 5. Charge Mode
 6. Size
 7. Weight

Mounting

1. The position of the position.
 2. The position of the position.
 3. The position of the position.

BURN TIMES

MAGICSHINE

EAGLE DV BICYCLE LIGHT USER MANUAL

USER GUIDE

This is a user guide for the Eagle DV Bicycle Light. Please read this user guide before using the Eagle DV Bicycle Light.

WARNINGS

1. Do not use the light in wet conditions.
 2. Do not use the light in high temperatures.
 3. Do not use the light in low temperatures.
 4. Do not use the light in high altitudes.
 5. Do not use the light in low altitudes.

WARRANTY

MAGICSHINE warrants that the product is free from defects in materials and workmanship for a period of 12 months from the date of purchase.

BATTERY

MAGICSHINE warrants that the battery is free from defects in materials and workmanship for a period of 12 months from the date of purchase.

New Generation

The Eagle DV Bicycle Light is the latest generation of bicycle lights. It features a new design and a new battery.

ANSI / NEMA - FL1 STANDARDS

FEATURES

- High brightness LED light source
- High quality lens material
- High quality battery
- High quality housing
- High quality mounting bracket

ANSI / NEMA - FL1 STANDARDS

FEATURES

- High brightness LED light source
- High quality lens material
- High quality battery
- High quality housing
- High quality mounting bracket

Light control diagram

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

Search "MAGICSHINE" on the App Store and install the software in the application.

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

Android App

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

IOS App

1. Turn the light bulb cover clockwise to open it.
 2. Insert the light bulb into the light bulb cover.
 3. Turn the light bulb cover clockwise to close it.

MAGICSHINE

WARRANTY CARD

I, _____, hereby certify that the information provided above is true and correct to the best of my knowledge and belief. I understand that providing false information may result in the voiding of the warranty.