

Sharing bike smart lock manual



一. Introduction

This is a smart lock for sharing bike, it communicates with smart phone APP by GPRS,GPS, BLE4.0 to unlock, Cloud server computes the time and payment automatically.

二. APP installation &account register

1.Please download the APP software from the Operator Company office web according to user's smart phone operating system and install it.

2.User register account and log in by the phone number(normal using), this operating step needs phone connecting to network.

3.Pay the deposit.

三. Unlock/lock operating instruction.

1. Open the Bluetooth of the phone.

2.Start the APP, press the button of QR code at the bottom of APP UI, entering into scanning QR code page, and aim at QR code on the bike lock,when phone read the QR code information, it will unlock automatically and go into unlocked status.

3.Lock manually after finishing using bike, when Cloud Server receives the locked info,time computing stop and fee deduction.

四. smart lock needs to work with smart phone, phone hardware circumstance request as below:


Above Android 4.3 version, hardware supporting Bluetooth 4.0BLE, the best screen resolution 1280x720;

Above IOS 7.1 version and iPhone 4s model.

五. APP UI introduction




home page

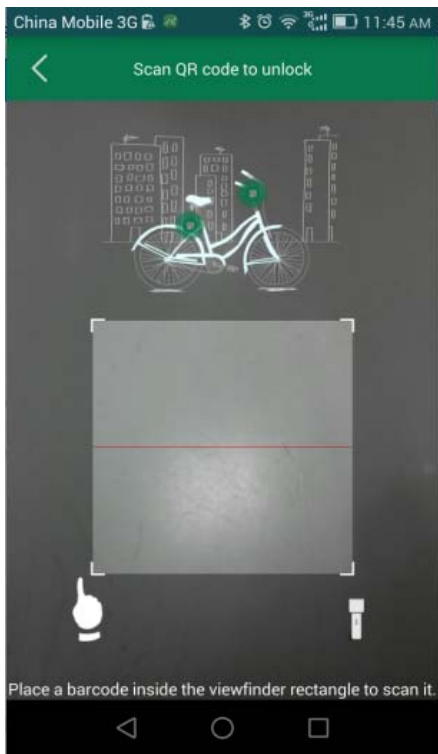

scanning QR code page



unlocking and using bike page

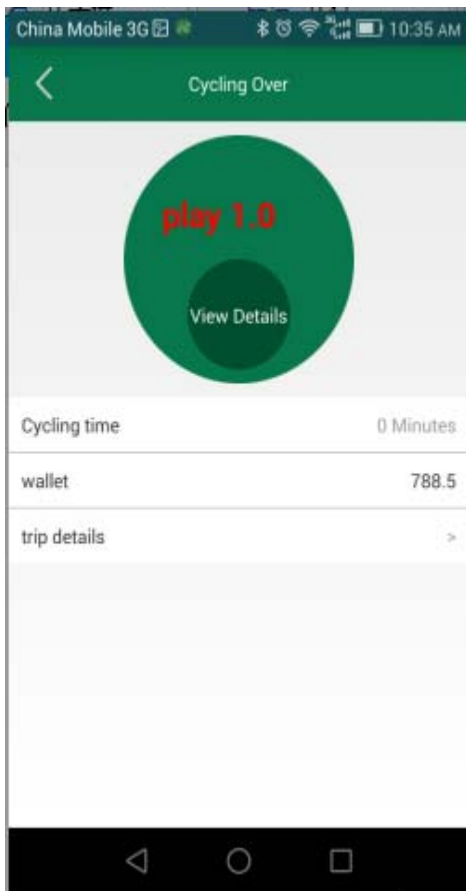

finish using bike and fee deduction page.

