

PYLE
PyleUSA.com



TV 7000

Bed-Side Hearing TV Speaker

2.4GHz Wireless Audio Comfort TV Speaker

USER MANUAL

 
**Please read this operating guide carefully before use and keep it for future reference.
If you have any questions, please feel free to contact our Customer Service department**

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the Wireless TV Speaker.

- Always keep the system dry. Do not immerse in water.
- For your safety, do not attempt to open the unit or battery compartment. Attempting to open or opening the battery compartment violates your warranty.
- The Wireless TV Speaker uses a lithium ion battery. Please observe the safety and handling instructions for the lithium ion battery. Please dispose of the unit/used batteries properly, following any local regulations.
- Do not dispose of the unit/used batteries in the household trash. **Do not incinerate.**
Take the equipment to a nearby recycle center.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
Unplug from outlet when not in use and before servicing or cleaning.
- Do not operate any device with a damaged cord or plug, or after the device malfunctions, or is dropped or damaged in any manner. Return the device to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- This device is intended for home and personal use only.

Package Contents

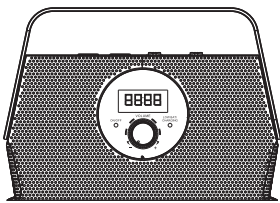

1 Wireless Receiver (Speaker)



2 AC Adapter



1 Transmitter Base



1 Audio Cord



1 Digital Optical Cord



1 Audio Switch Cable

 
* Remove plastic tip from Optical Cord plugs

Features Identification

Receiver

Wireless audio transmission mode indicator light

ON/OFF & volume control

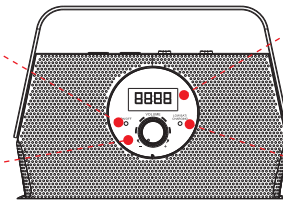


Clock display

Low battery/charging indicator

Headset port

AC adapter jack

 Audio input port

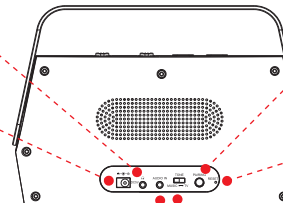

Pairing button

Reset key

 
Tone control

Base

AC adapter jack

Optical input

Audio input port



Power indicator

Pairing button


Wireless audio transmission mode operation description

CONNECTION AND SET UP


Select an Audio Connection:

Locate the Audio Out connector on the back of your TV.

 Example 1:

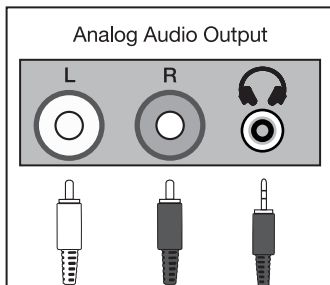

Example 2:

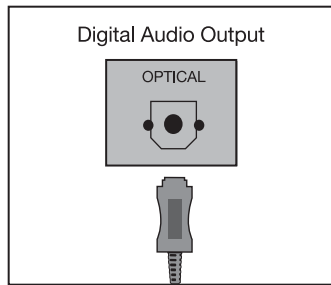 


1. If your TV has an analog output connector (see example 1), the inserted audio cable can be used with the Wireless TV Speaker .
2. If your TV has a digital output connector (see example 2), plug in an optical cable and it will work with the Wireless TV Speaker.

For TV'S, with audio-output ports:

If your TV has a headphone jack, it's an analog output. Connect the base of the Wireless TV Speaker to the TV using the provided audio cable, as shown in the figure below.

Note:

 in most cases, the TV speaker volume will be muted when using this type of connection.

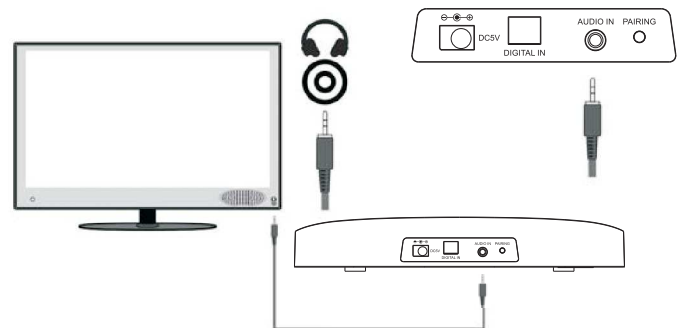


Wireless audio transmission mode operation description

For TVs with Audio-Out Ports (RCA Type)

If your TV has audio output RCA type ports on the back of your TV, it is an analog output. Use the provided audio cable and connect the base of the Wireless TV Speaker to your TV as shown below.

PLEASE NOTE:

 In most cases, TV speakers are NOT muted with this type of connection.

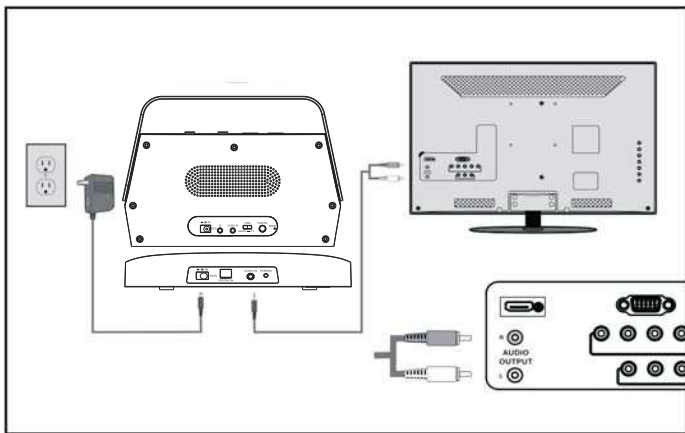


For TV's with Digital Output port (optical):

If your TV has a digital optical audio output port, using the included optical cable, connect it to the base of the Wireless TV Speaker as shown below. In most cases, TV speakers are NOT muted with this type of connection.

PLEASE NOTE:

Newer TV'S have the option to set digital audio output to either **DOLBY** or **PCM**. The Wireless TV Speaker **only works with PCM audio format**, simply set your TV to PCM digital output.

 Contact your TV manufacturer for assistance if necessary.

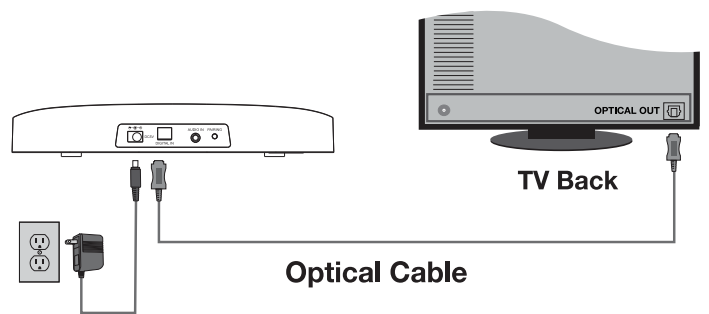

Wireless audio transmission mode operation description

Placement of Transmitter Base

 
For best results, place the Transmitter Base on top of your TV stand, or on top of your TV, as shown below.



Battery Charging

Place the receiver on the base (as shown) for charging for 6+ hours before first use. During charging, the Low Battery/Charge indicator blinks. When it is fully charged, the indicator light will stop blinking and stay steadily lit. A fully charged battery will give you up to 8 hours of listening time.

When the receiver is not in use or when the Low Battery indicator blinks, place the receiver on the base for recharging.

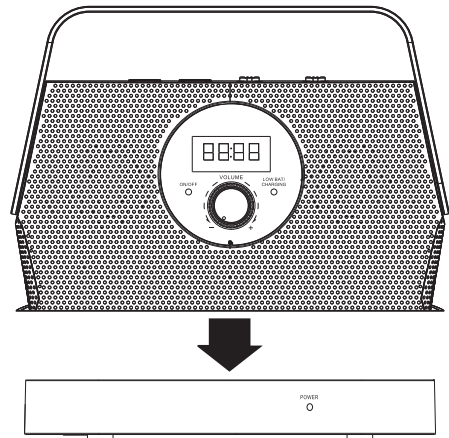

Wireless audio transmission mode operation description

OPERATION

ON/OFF, Volume and Tone Control

1. Rotate the switch knob to turn the receiver on or off and adjust its volume, and rotate the mode switch to switch to 2.4G mode. At this time, the wireless audio transmission status indicator light is on.
2. You can turn your TV speaker to Low or to Off. On some TVs, you may need to use your remote to go into the TV's Menu to achieve an optimal audio/speaker setting. Please refer to your TV user manual for details.
3. To conserve battery power, the receiver will shift into standby mode if no audio signal is received from the base (after your TV is turned off) for a period longer than three minutes. The volume ON/OFF indicator will be off during this standby time. When audio signal is received, the receiver will re-activate.

 
NOTE: If the receiver has hibernated too long and missed the contacts with the base, rotate the knob, turn off the receiver and then turn the receiver back on again to re-sync with the base.

4. Set the Tone Control to a position that enables you to hear and understand the dialog best.


Pairing Additional Receivers

You can add up to 50 receivers to work with your base. Each added receiver, must be "paired" with the base as follows:

- Make sure your new receiver is fully charged.
- Make sure your current base and receiver is working properly and audio is playing on the receiver.
- Continue the audio playing to the base and receiver.

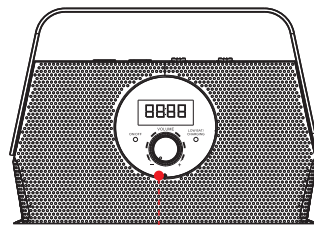

ON/OFF & Volume

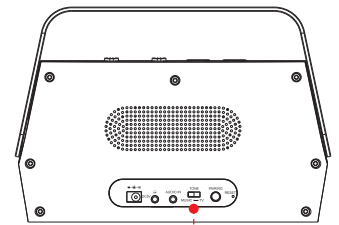 


Tone Adjustment


Wireless audio transmission mode operation description

Pairing Additional Receivers (continued)

 1. Turn the new receiver **ON**.
2. Press and hold (about 5 seconds) the **PAIRING** button on the bottom of the receiver until the **ON/OFF** indicator starts blinking. Pairing period is approximately 20 seconds.
3. Press and hold (about 3 seconds) the **PAIRING** button on the back of the base until the power indicator starts blinking. It will start pairing with the new receiver.
4. As soon as pairing is successful (less than 2 seconds), the new receiver's **ON/OFF** indicator will stop blinking, and audio sounds will be played within 5 seconds.
5. Repeat these steps again if pairing is not successful.

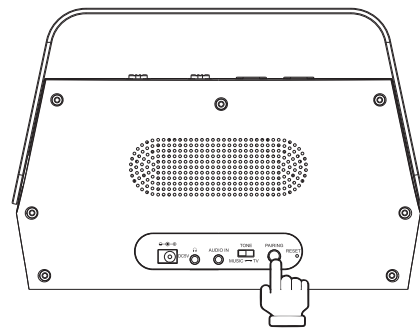

Bottom of receiver
(Speaker)

 


Back of transmitter
(Base)

Using Headphones

Plug your headphones into the headphone jack as shown. No sound will be emitted from the speakers. Adjust the headphone volume by rotating the volume knob.

Wireless audio transmission mode operation description

 - HOUR**
Short press to add the number of hour slowly
Press and hold to add the number of hour rapidly
- RUN:** Regular working when the Key is on the "RUN" side
CLOCK: Push the Key to "CLOCK" side to make clock setting

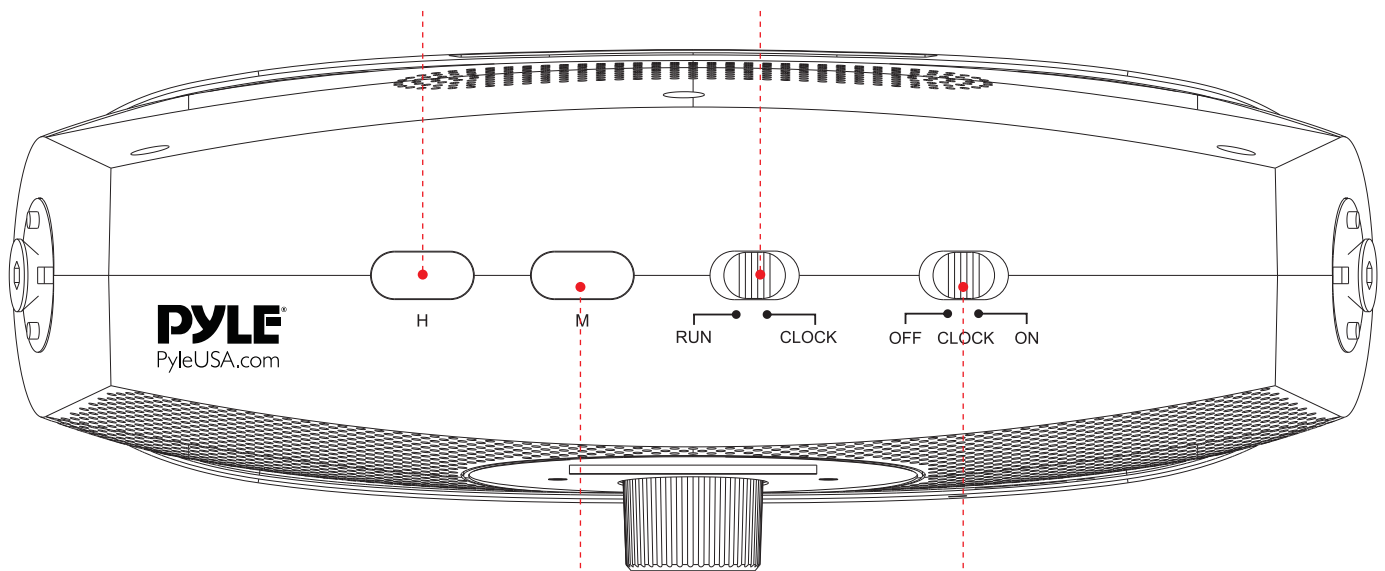

- MINUTE**
Short press to add the number of minute slowly
Press and hold to add the number of minute rapidly

- OFF:** Don't display the time
ON: Display the time

TROUBLESHOOTING

• No sound from the receiver

Check all connections to ensure that all the cords are firmly connected at the back of the base and TV. Also, confirm that the receiver is not more than 100 feet away from the base.

• There is sound from the TV speaker, but no sound from the receiver

Check your TV speaker setting by going into the TV Menu, using your TV remote and ensuring the TV is sending audio signals to the base.

• The Low Battery/Charging indicator keeps blinking on the receiver

This indicates that the battery is low and needs to be placed on the base for recharging. When fully charged, the blinking will stop (in about 3 hours). If the blinking does not stop, check to make sure the receiver is firmly connected and properly aligned to the base.

CLEANING AND MAINTENANCE

Unplug the AC Adapter from the wall. Then, use a dry, soft cloth to clean and dust the outside surfaces and the charging contacts on the Base. Do not immerse the Receiver in water.

FCC INFORMATION (FOR U.S. CUSTOMERS ONLY) PART 15 OF FCC RULES INFORMATION

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you may try one of the following methods to correct the interference:

1. Where it can be done safely, re-orient the receiving television or radio antenna.
2. To the extent possible, relocate the television, radio, or other receiver, with respect to the cordless phone.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

3. Connect the cordless phone AC adapter into a different electrical outlet.
4. Consult the dealer or an experienced radio/TV technician for help.

Modifications

Any modification not expressly approved by the manufacturer of this device could void the user's authority to operate the device.

This Class B digital device complies with Canadian ICES- 003, RSS 201 Issue 8.

WHAT'S IN THE BOX:

- TV Speaker
- Charging Transmitter Base
- Wall Power Adapter
- Digital Audio Cable
- RCA Cable
- 3.5mm Audio Cable



WARNING:

This product can expose you to a chemical or group of chemicals, which may include "Acrylonitrile" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.

FEATURES:

- Perfect for Bed-Side TV Listening
- Enjoy Wireless Audio from a Distance
- Connects to Your TV for Comfortable Sound Levels
- Avoid Excessive Noise & Place TV Audio Quietly Nearby
- Transmitter Base Sends Audio to the Speaker
- Dual Full Range Speakers
- Extended Wireless Range
- Universal TV Compatibility
- Built-in Rechargeable Battery
- Adjustable Rotary Volume Control
- Headphone Jack for Quiet Listening
- Hi-Fidelity Stereo Sound Reproduction
- Innovative FHSS Technology – Auto Signal Fine Tuning
- Also Compatible with Home Theater Systems, Stereos, Radios (PCM)
- Includes Clock Display

TECHNICAL SPECS:

- Audio Transmission Frequency: 2.4Ghz
- Wireless Range: Up to 100'+ ft.
- FHSS (Frequency Hopping Spread Spectrum)
- Dual Speakers: 2 x 5 Watt, 4 Ohm
- Rechargeable Battery: 3.7V Lithium-ion, 1600mAh
- Power: 100/240V (DC 5V 1.5A Power Adapter)
- Speaker Size (L x W x H): 8.85" x 3.26" x 6.18" -inches

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com