

pico goblin

Freedom to Play

Quick Start Guide

1 EN Assemble and attach the headband


IT Assembla e attacca la fascia

ES Monta y acopla la cinta de la cabeza

DE Zusammenbauen und das Stirnband befestigen

FR Assemblez et attachez le serre-tête

JA 部品を組み立てて、ヘッドバンドを取り付けます

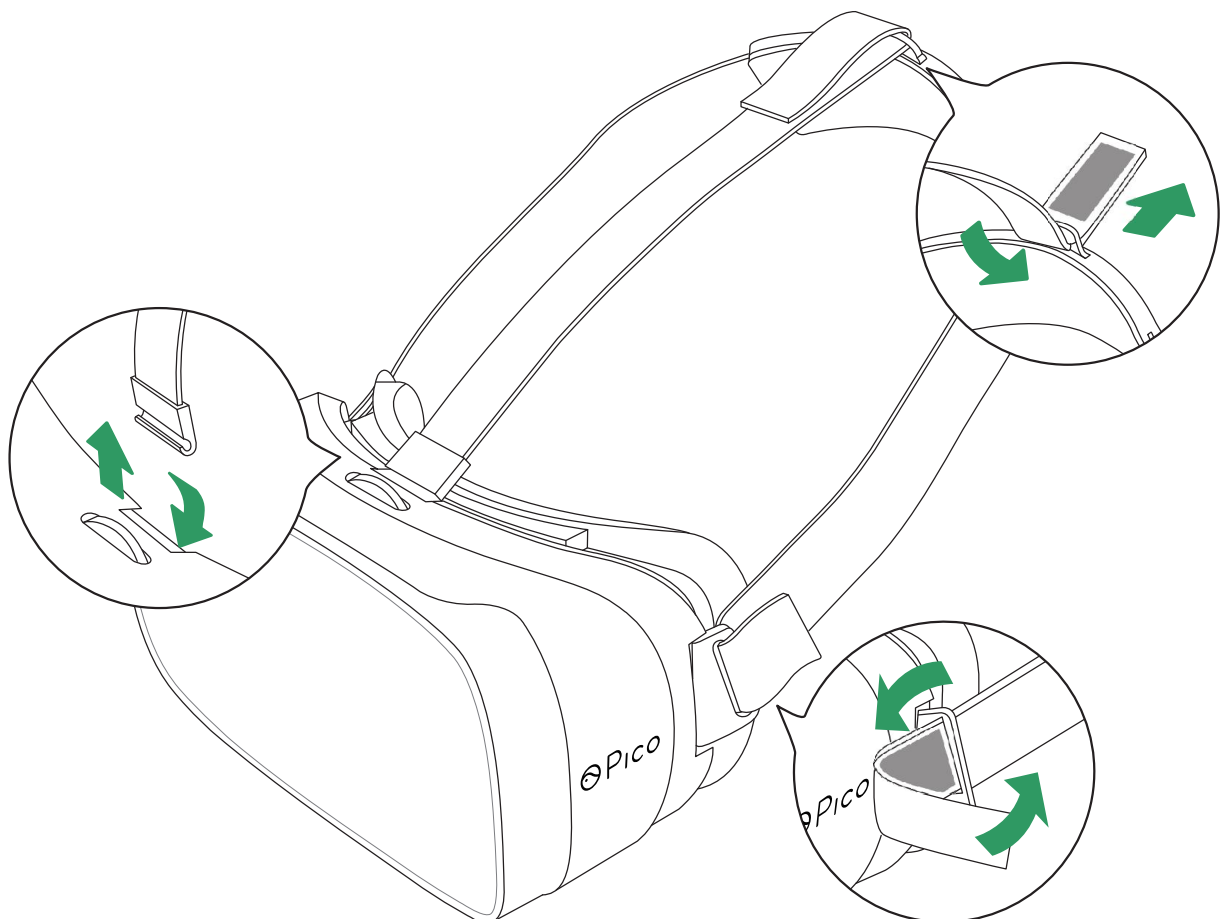

2

EN Turn on the Goblin


IT Accendi il Goblin

ES Enciende el Goblin

DE Goblin einschalten

FR Allumez le Goblin

JA Goblinをオンにします

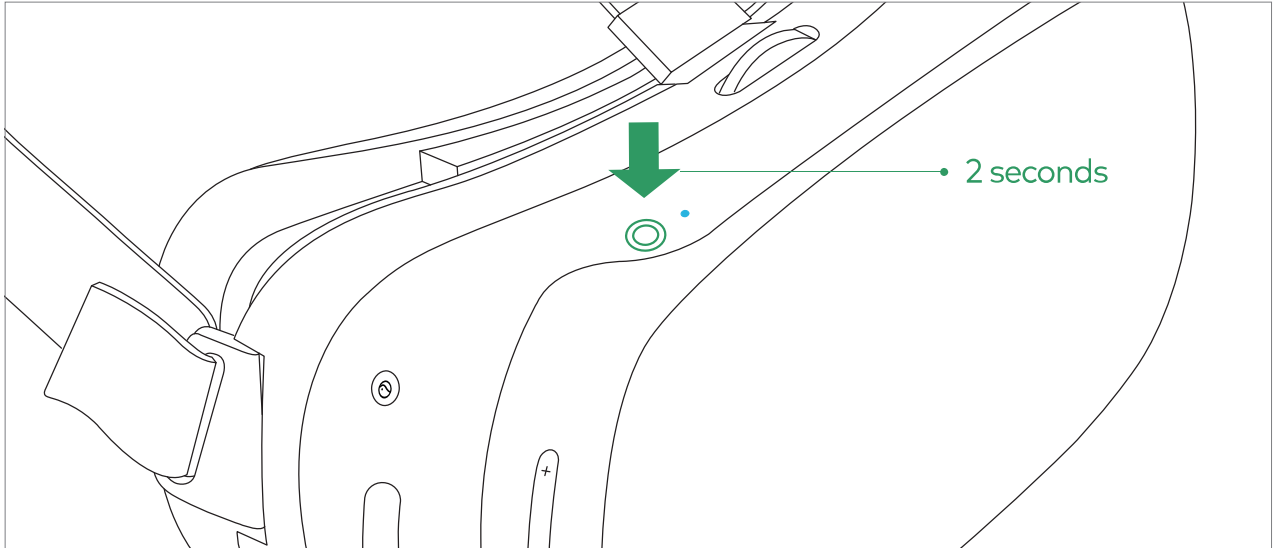

EN Press and hold the button for 2 seconds

The blue light will keep on when the device turns on

IT Premi e tieni premuto il pulsante per 2 secondi

La spia blu si spegnerà una volta acceso il dispositivo

ES Mantén pulsado el botón durante 2 segundos

La luz azul se apagará cuando el dispositivo se encienda

DE Drücken und 2 Sekunden lang halten.

Das blaue Licht erlischt, wenn das Gerät eingeschaltet ist.

FR Maintenez le bouton appuyé pendant 2 secondes

La lumière bleue s'éteindra quand l'appareil sera allumé

JA ボタンを2秒間押し続けます

端末に電源が入ると、青いライトが消えます

- 3** **EN** Place headband over head
IT Indossa la fascia sulla testa
ES Coloca la cinta sobre la cabeza
DE Stirnband auf den Kopf ziehen.
FR Mettez le serre-tête en place
JA ヘッドバンドを頭に装着します



4 EN Adjust focus


IT Regola la messa a fuoco

ES Ajusta el enfoque

DE Bildschärfe anpassen

FR Ajustez la mise au point

JA 焦点を合わせます

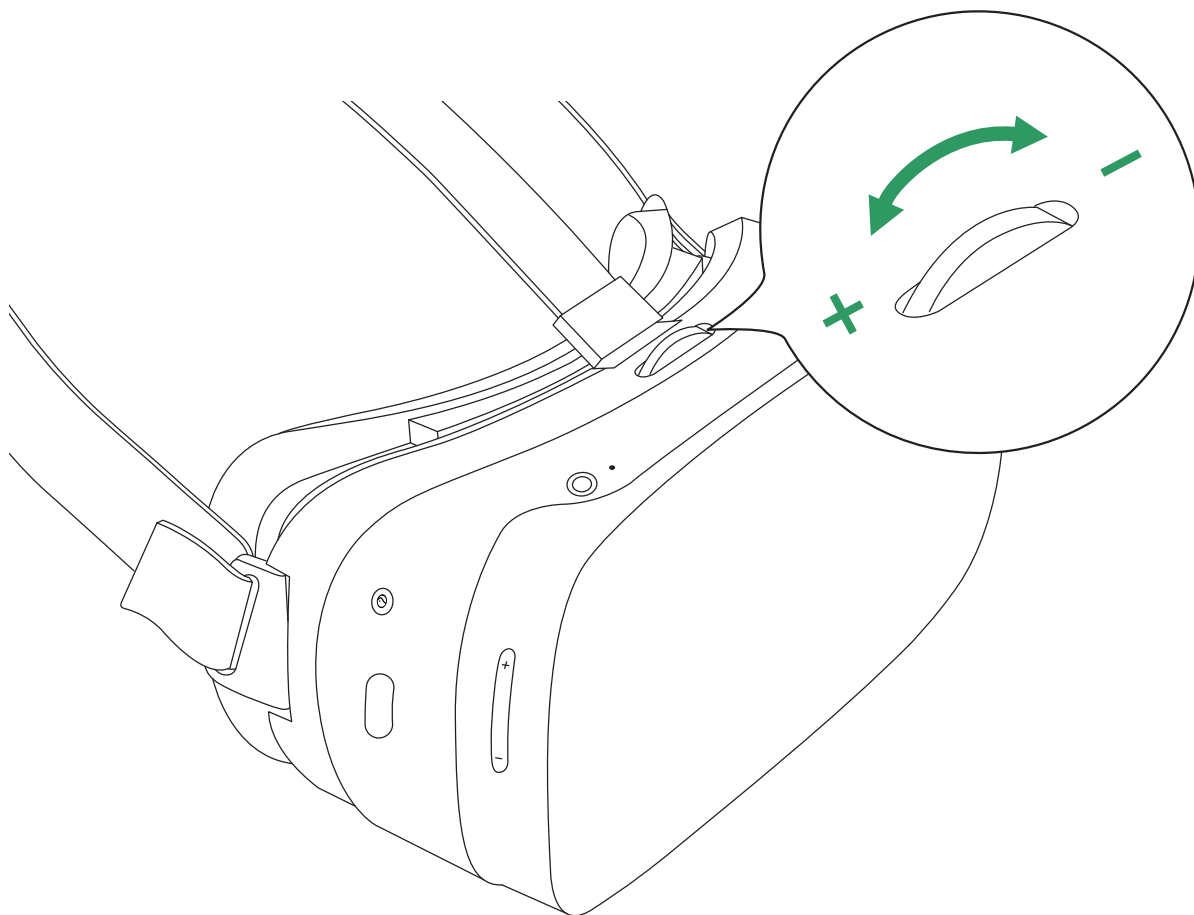

5 EN Insert batteries


IT Insertisci le pile

ES Introduce las pilas

DE Batterien einlegen

FR Insérez les piles

JA 電池を入れます

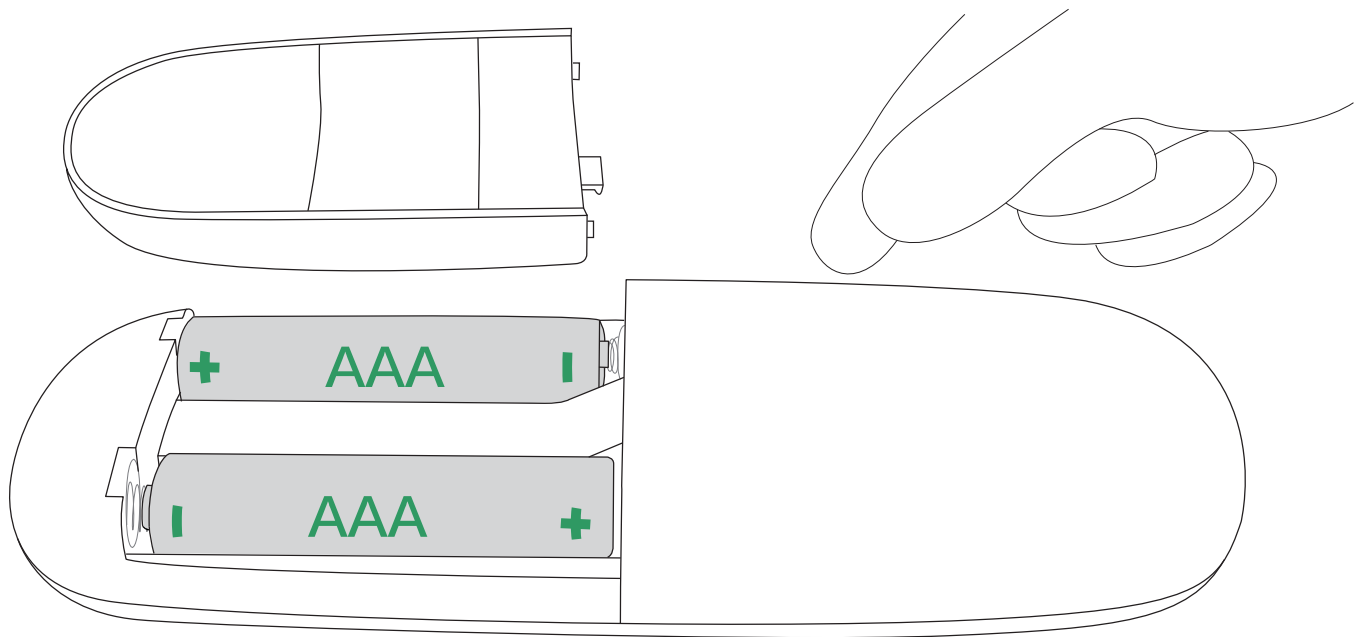

6 **EN** Connect the controller

IT Collega il controller

ES Conecta el mando

DE Controller verbinden

FR Connectez la manette

JA コントローラーを接続します

EN Press the home button once to connect to the headset


IT Premi una volta il pulsante Home per collegare l'auricolare

ES Pulsa el botón de inicio para conectar con los auriculares.

DE Button einmal drücken, um zum Headset zu verbinden

FR Appuyez une fois sur le bouton principal pour vous connecter au casque

JA ホームボタンを1回押し、ヘッドセットに接続します

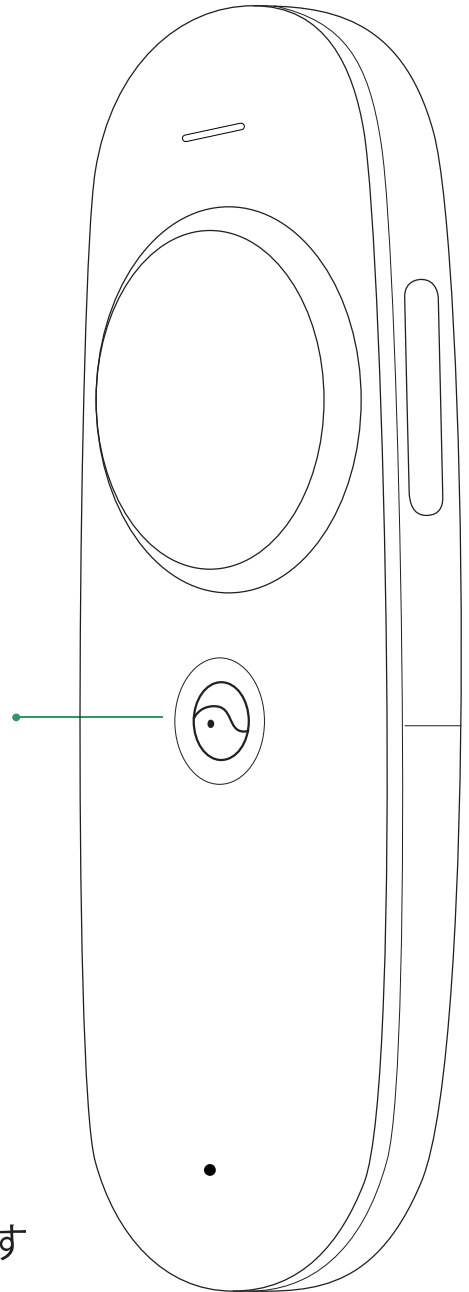

7

EN Turn Off


IT Spegnimento

ES Apagado

DE Ausschalten

FR Éteindre

JA 電源を切る

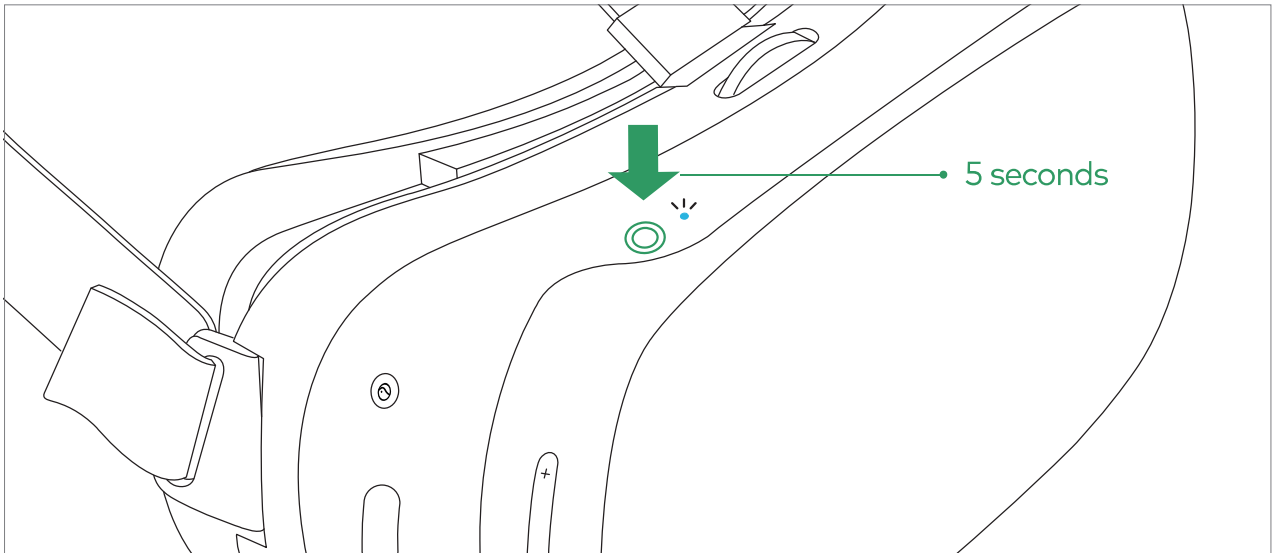

EN Press and hold the power button for 5 seconds

IT Tieni premuto il pulsante di accensione per 5 secondi


ES Mantén pulsado el botón de apagado durante 5 segundos

DE Drücken Sie den Ein-/Ausschalter 5 Sekunden lang

FR Appuyez sur le bouton d'alimentation et laissez appuyé cinq secondes

JA 電源ボタンを5秒間押し続けます

| Button Descriptions

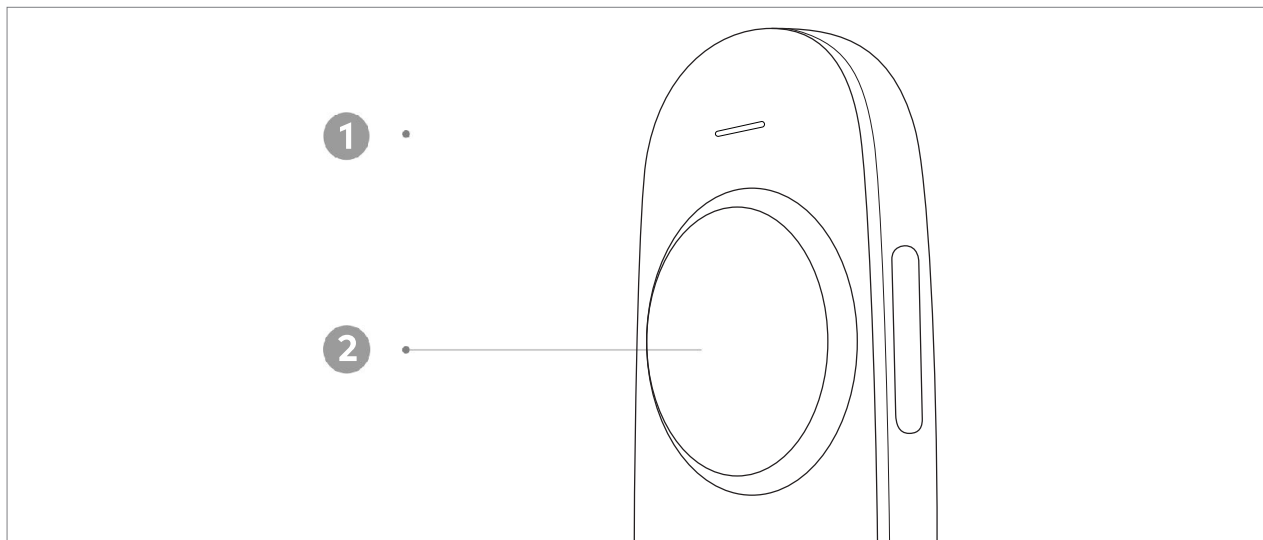

1

EN App Button:

Click to return to the previous menu

IT Pulsante dell'app:

Clicca per tornare al menu precedente

ES Botón de la aplicación:

Haz clic para volver al menú anterior

DE App- Button:

Klicken, um zum vorherigen Menü zurückzukehren

FR Bouton Application:

Cliquez pour revenir au menu précédent

JA アプリボタン:

クリックすると前のメニューに戻ります

2

EN Touchpad

Up/Down/Left/Right/Press Down
(Confirm)

IT Touchpad

Su/Giù/Sinistra/Destra/Premi giù
(conferma)

ES Panel táctil

Arriba/Abajo/Izquierda/Derecha
/Pulsa abajo (confirmar)

DE Touchpad


Hoch/Runter/Links/Rechts
/Herunterdrücken (Bestätigung)

FR Pavé tactile

Haut/Bas/Gauche/Droite/Appuyez
vers le bas (Confirmer)

JA タッチパッド

上/下/左/右/押す(確定)

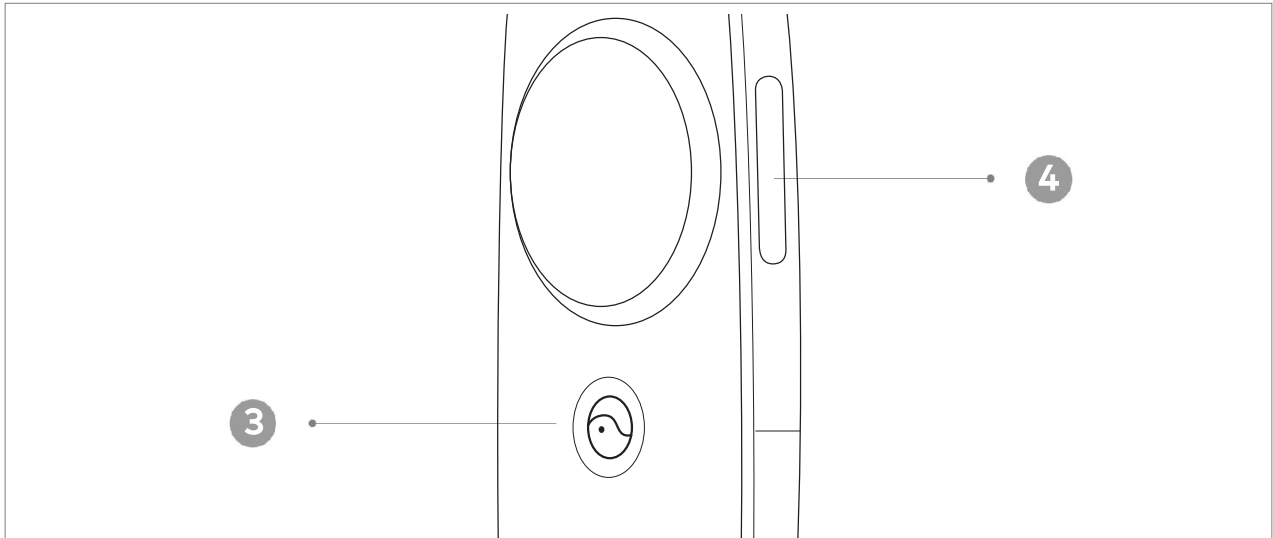

3

EN Home Button

Press and hold to recalibrate

Press once to return to the main interface

IT Pulsante della Home

Premi e tieni premuto per ricalibrare

Premi una volta per tornare all'interfaccia

ES Botón de inicio:

Mantén pulsado para recalibrar

Pulsa una vez para volver a la interfaz principal

DE Home-Button:

Zur Rekalibrierung drücken und halten

Einmal drücken, um zur Hauptoberfläche zurückzukehren

FR Bouton Accueil:

Appuyez longuement pour recalibrer

Appuyez une fois pour revenir à l'interface principale

JA ホームボタン:

長押しすると、リセットします

一回押すとメインインターフェースに戻ります

4

EN Volume Button

IT Pulsante del volume

ES Botón de volumen

DE Lautstärke- Button

FR Bouton Volume

JA ボリューム ボタン

EN Status Indicator


IT Indicatore di status

ES Ndicador de estado

DE Statusanzeige

FR Indicateur d'état

JA ステータスインジケータ

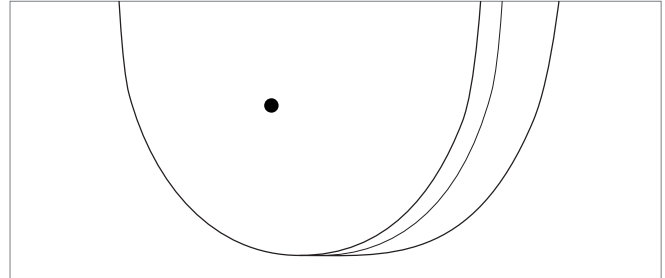

EN a) Light blinking slowly : Bluetooth device is waiting to be paired and connected.

b) Light only turns on when you press a button: Bluetooth device has been connected.

c) Light blinking quickly : Low battery.

IT a) La luce lampeggia lentamente : Il dispositivo Bluetooth è in attesa di essere abbinato e collegato.

b) La luce si accende solo quando si preme un pulsante : Il dispositivo Bluetooth è collegato.

c) La luce lampeggia velocemente : Batteria scarica.

ES a) La luz parpadea despacio : El dispositivo Bluetooth está a la espera de vincularse y conectarse.

b) La luz solo se enciende al pulsar un botón : El dispositivo Bluetooth se ha conectado.

c) La luz parpadea rápido : Batería baja.

DE a) Lampe blinkt langsam : Bluetooth-Gerät wartet auf Paarung und Verbindung.

b) Lampe schaltet sich nur ein, wenn ein Button gedrückt wird : Bluetooth-Gerät wurde verbunden.

c) Lampe blinkt schnell : Akkustand niedrig.

FR a) Lumière qui clignote lentement : l'appareil Bluetooth est en attente d'appairage et de connexion.

b) La lumière ne s'allume que quand vous appuyez sur un bouton : l'appareil Bluetooth a été connecté.

c) La lumière clignote rapidement : Batterie faible.

JA a) ライトがゆっくり点滅: Bluetooth機器がペアリングされ、接続されるのを待機しています。

b) ボタンを押した時のみライトが光る: Bluetooth機器が接続されています。

c) ライトが素早く点滅: バッテリーの残量が少なくなっています。

Sleep Mode

EN Sleep: Take off the headset / Press the power button once


IT Stand-by: Togli il visore / Premi una volta il pulsante di accensione

ES Suspensión: Sácate los auriculares / Pulsa el botón de encendido una vez

DE Sleep: Nimm deine Ausrüstung ab / Power-Button einmal drücken

FR Veille : retirez le casque / Appuyez une fois sur le bouton d'alimentation

JA スリープ・モード:ヘッドセットを取り外します。電源ボタンを1回押します

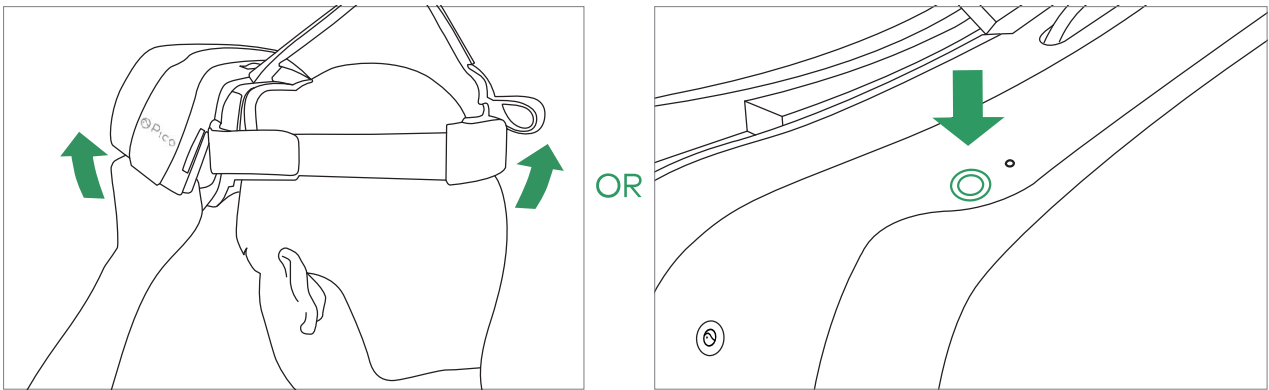

Charging Mode

EN Charging


IT Ricarica

ES Cargando

DE Aufladen

FR Chargement

JA 充電

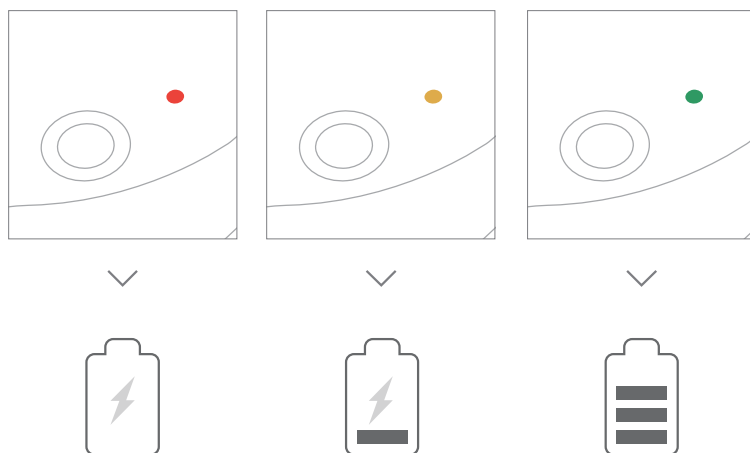

Hard Reset

EN Hard Reset: Press and hold the power button for 10 seconds


IT Ripristino forzato: Tieni premuto il pulsante di accensione per 10 secondi

ES Forzar reinicio: Mantén pulsado el botón de apagado durante 10 segundos.


DE Hard Reset: Drücken Sie den Ein-/Ausschalter 10 Sekunden lang

FR Réinitialisation forcée : Appuyez sur le bouton d'alimentation et laissez appuyé dix secondes.


JA ハードをリセットする:電源ボタンを10秒間押し続けます

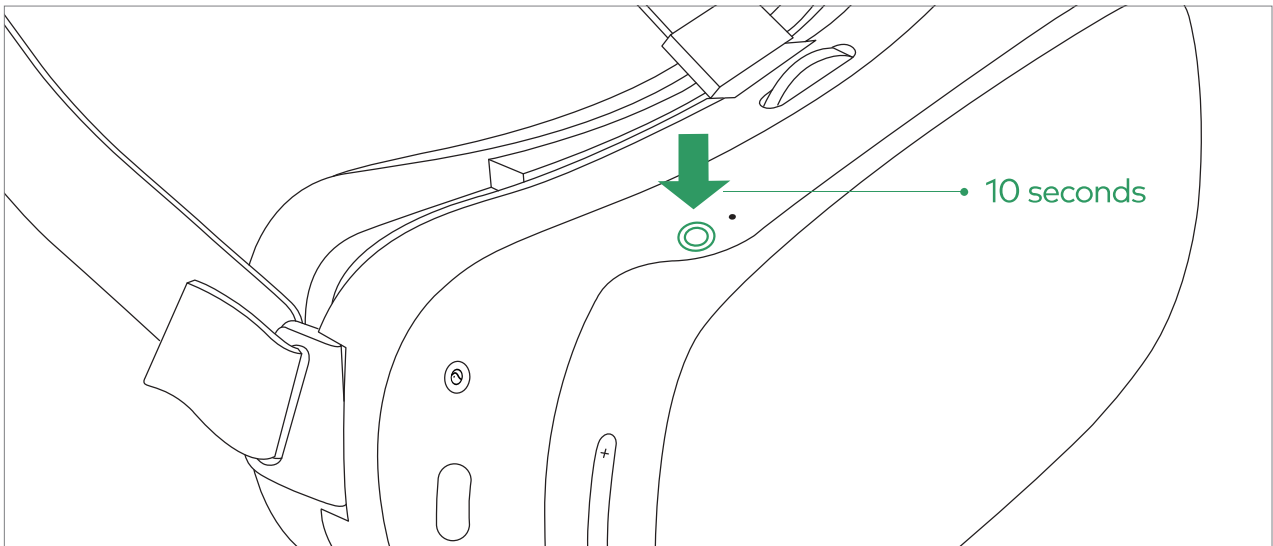

| Description of Parts

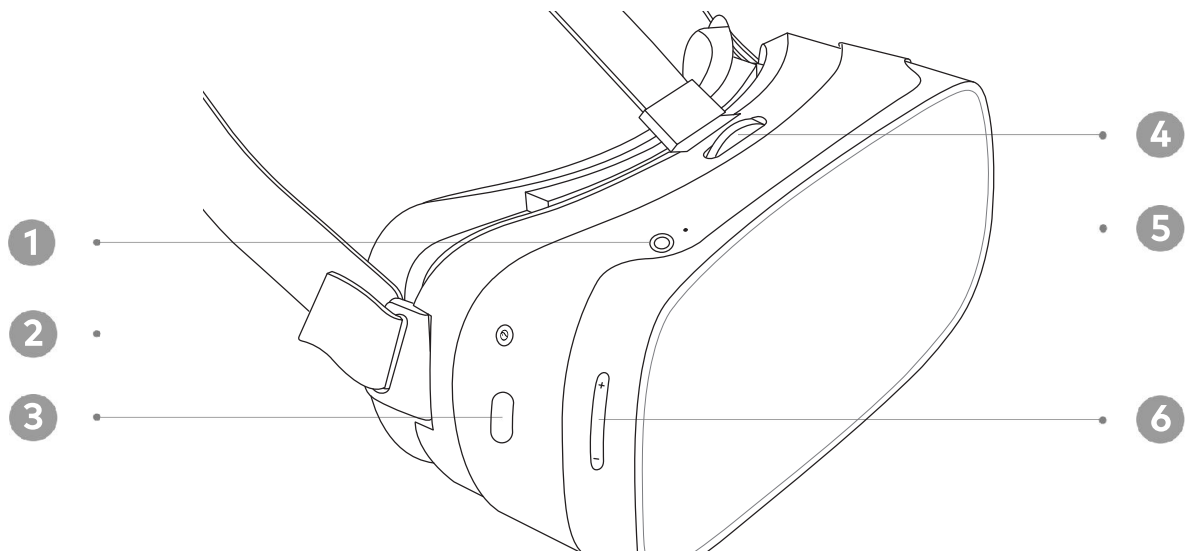

- | | | | |
|----------|--|----------|---|
| 1 | EN Power Button
IT Power Button
ES Botón de encendido
DE Power-Button
FR Bouton marche
JA 電源 ボタン | 4 | EN Focal Adjustment Wheel
IT Ruota di regolazione della messa a fuoco
ES Rueda de ajuste focal
DE Rad für Bildschärfen-anpassung
FR Molette de réglage de la mise au point
JA ピント調整つまみ |
| 2 | EN Home Button
IT Home Button
ES Botón de confirmación
DE Home-Button
FR Bouton accueil
JA ホーム ボタン | 5 | EN Status Indicator
IT Indossa la fascia sulla testa
ES Indicador de estado
DE Statusanzeige
FR Indicateur d'état
JA ステータスインジケータ |
| 3 | EN Confirm Button
IT Confirm Button
ES Coloca la cinta sobre la cabeza
DE Bestätigen-Button
FR Bouton confirmer
JA 確定 ボタン | 6 | EN Volume Button
IT Indossa la fascia sulla testa
ES Botón de volumen
DE Lautstärke-Button
FR Bouton volume
JA 音量 ボタン |

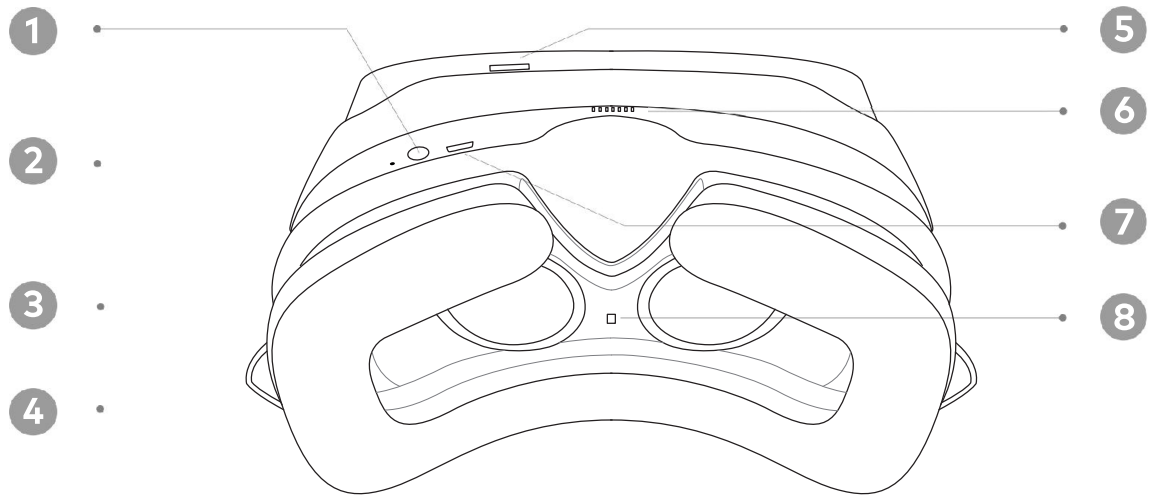

- | | |
|---|---|
| <p>1 EN 3.5mm Headphone Jack
 IT Jack per cuffie da 3,5mm
 ES Conector de auriculares de 3,5 mm
 DE 3,5mm Kopfhörer-anschluss
 FR Prise casque 3,5mm
 JA 3.5mmヘッドフォンジャック</p> | <p>5 EN Micro SD Card Slot
 IT Micro SD Card Slot
 ES
 DE
 FR
 JA</p> |
| <p>2 EN Microphone
 IT Microfono
 ES Micrófono
 DE Mikrofon
 FR Microphone
 JA マイク</p> | <p>6 EN Speaker
 IT Speaker
 ES Altavoz
 DE Laut-sprecher
 FR Haut-parleur
 JA スピーカー</p> |
| <p>3 EN Optical Lenses
 IT Lenti ottiche
 ES Lentes ópticas
 DE Optische Linsen
 FR Lentilles optiques
 JA 光学レンズ</p> | <p>7 EN Micro USB Charging Port
 IT Porta micro USB per la ricarica
 ES Puerto de carga Micro USB
 DE Mikro-USB-Lade-anschluss
 FR Port de recharge Micro USB
 JA マイクロUSB電源ポート</p> |
| <p>4 EN Foam Padding
 IT Imbottitura di gommapiuma
 ES Protector de espuma
 DE Schaum-polsterung
 FR Rembourrage en mousse
 JA スポンジパッド</p> | <p>8 EN Proximity Sensor
 IT Sensore di prossimità
 ES Sensor de proximidad
 DE Näherungs-sensor
 FR Capteur de proximité
 JA 近接センサー</p> |



Copyright © 2016-2017 Pico Interactive Inc.

Further product, FCC and EU regulatory information can be found at
www.pico-interactive.com/help.

Compliance Information

FCC 15.105

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC 15.21

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC 15.203

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.