Wi-Fi Home Security Camera

User Manual Version: May, 2020





Stereo speaker + Wireless charger+Clock camera













(14) Loudspeaker;

(15) USB port;

(16) AUX;

(17) 12V DC;

(19) Reset;

(18) Wi-Fi camera

microphone:

(20) Micro SD card slot;


(22) Indicator light;


(21) ON/OFF for Camera:

(23) Speaker diaphragm;



Product instruction

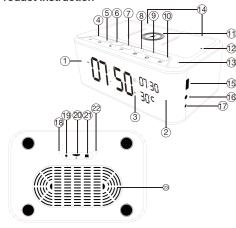

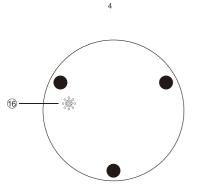

8

(16) Two-way audio speaker

- Camera:
- Night vision LED;
- (3) Bluetooth icon;
- Short press for V-, long press for Previous;
- Short press for V+. Iona press for Next;
- Short press for Pause / Pick up phone, Long press for Celsius and Fahrenheit:
- (I) Speaker On/Off;
- Short press for Time setting, Long press for 12 Hour / 24 Hour;
- (9) Q Alarm setting;
- (Snooze;
- (11) 5W Wireless Charging Zone;
- (12) Wireless Charging Indicator;
- (13) Bluetooth Microphone;

Wireless charging function:

- 1. Device with 4500mA built-in battery, pls plug in power or charge it
- 2. One press top On/Off to turn on the wireless charger;
- 3. Charge your phone:
- 4. Twice press top On/Off to turn off the wireless charger;

Stereo speaker function:

- 1. Turn on speaker:
- Short press back bluetooth button (12) to turn on, it will say "DingDong"
- 2. Pair with smart phone:
- Phone setting=>Bluetooth=>find signal BT=>click to connect;
- Short press back bluetooth button 2 to turn off speaker;
- 4. Disconnect bluetooth:
- Phone setting=>Bluetooth=>find signal BT=>click to disconnect;
- 5. Automatically be off:
 - a. Speaker is not paired with phone in 5 minutes after turned





Stereo speaker + Wireless charger









Speaker Operation:

- 1. Turn on speaker:
- Short press above to turn on, with start tone;
- 2. Pair with smart phone:
- Phone setting=>Bluetooth=>find signal 019 BT=>click to connect:
- 3. Turn off speaker:
- Short press above () to turn off, with end tone;
- 4. Disconnect bluetooth:
 - Phone setting=>Bluetooth=>find signal 019 BT=>click to disconnect;
- 5. Automatically be off:
 - a. Speaker is not paired with phone in 10 minutes after turned On; b. There's no paired phone in speaker's receiving range with in 10

Common fault solution:

- 1. Cannot connect to the speaker
- > Delete 019 BT from the phone's Bluetooth pairing list, and search 019 BT again;
- 2. Cannot search the speaker
- > When heard start tone, it will be found.

Tips: This product is without internal battery, please use package included 12V 2.5A DC adaptor to power on.

6

- b. There's no paired phone in speaker's receiving range with in 5 minutes:
- c. Speaker's battery less then 5%.

Common fault solution:

- 1. Cannot connect to the speaker
- > Delete BT from the phone's Bluetooth pairing list, and search BT again:
- 2. Cannot search the speaker
- > Turn off speaker, and turn on again when heard "DingDong", it will be found

Overview:

This security Wi-Fi camera kit is equipped with a powerful 1080p smart Wi-Fi camera for live streaming video, and it comes with motion detection video recording and alarm.

Mini design and easy hidden to DIY any kinds of unique and exclusive security cameras for home & business surveillance.

Usages: Nanny camera, home/ shop/ office/ warehouse surveillance camera.....

Warning: " illegal use is not allowed! Or, there will be consequences to bear! '

In the box:

Clock charger

- 1 x Wi-Fi camera
- 1 x 12V 2.5A DC power adapter
- 1 x Reset pin
- 1 x Cable
- 1 x User manual
- 1 x Micro SD card reader
- 1 x User manual

Wireless charger


1 x Wi-Fi camera

1 x Reset pin

1 x USB Cable

1 x Micro SD card reader

Product instruction

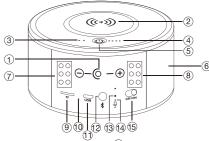

- (1) Camera lens
- (2) Wireless charging area
- (3) Wireless charging indicator
- (4) Battery indicator
- (5) On/Off for wireless charger
- (6) Stereo speaker
- (7) (8) Invisible night vision LEDs
- (9) TF/Mciro SD card slot (10) Speaker indicator
- (1) Charging port
- (12) On/Off for Speaker
- (13) Reset for Wi-Fi camera
- (14) Indicator for Wi-Fi camera
- (15) On/Off for Wi-Fi camera

Getting started of Wi-Fi camera part

Step1: Download and install APP

Search and download free APP named "HDSmartIPC" in Apple APP store, Google play or Electronic market, and install it.



Step 2: Plug in power and turn switch to ON, wait for 1 minute:

11

Step 3:Connect WiFi

1. Open smartphone settings, search and connect the device's wireless signal named"AI/LM.....", wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.



2. Eneter APP, app will add just connected camera automatically, Camera Online then;



TIPS: This step = P2P mode, can check video locally when without Wi-Fi.

APP introduction:




16

Specification

Sensor	2.0 Mega pixel CMOS Lens
Video resolution	Max 1920*1080
Frames	Max 25fps
Compressed format	H.264
View Angel	120° / 90°
Night Vision	Invisible 6M
Type of Memory Card	TF>=Class 4/10 HC Marked
Capacity of Memory Card	Max 128GB
PC operation system	Windows 7,8/Mac OS X
Mobile Phone operation system	Android/iOS
Video Player	VLC Player/SM Player
Recording	1min/20mb
Power adapter	12V/2.5A
Wireless charger power	5 W


20

3.Press the gear icon after the camera and select Device settings ,select Wi-Fi Config.

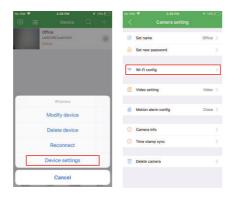

13

Live video page - Click camera to check

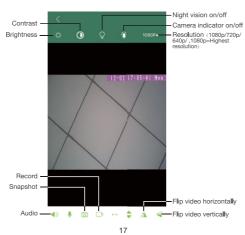

FAQ

- Q: Can't get device Wi-Fi signal?
 A:Press reset key for 10 seconds and wait 1 minute.
- Q: Live video not smooth and clear?
 A: Select suitable resolution according to the real time network environment.
- 3. Q: Motion detect set and alarm?
 - A: 1). Set motion detect sensitivity in Motion alarm config;
 2). When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 16 Message]. (A micro sd card MUST be inserted for saving alarm pictures)
- 4. Q: How to play micro SD card video?
 - A: 1). Use a card reader to read and play;
 - 2). Use APP to play back [Page 16];
 - 3). Play back in good speed network.

- 4. Select the router Wi-Fi and input password, camera will be connected to the router Wi-Fi. The smartphone will disconnect the signal from device and connect to the router Wi-Fi.
- 5. Quit APP, and device restart automatically and ready again in 30 seconds.
- 6. Enter APP and check live video locally or remotely anywhere.





TIPS:Each setting in Device Settings, please scroll down and press ok to save the setting.

18

- 5. Q: Forget camera password, or item goes abnormal? A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
- Q: Any operation video demo of the camera for setting up?
 A: Please contact local dealer for video guide.

22

Set camera name and private code

Set name:Press the after the camera and select Device settings,select Set name, insert name like Office,Room.....

Set new password:Press the after the camera and select Device settings,select Set new password and change it to new one. Default one is 8888.



15

Set and watch by PC remotely (Windows Only)



Scan to download PC Client

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against hammful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by furning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

21