 


## Content:

RC Shark

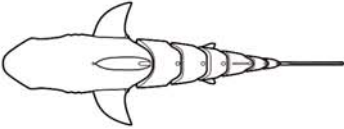

Remote controller

 
 


Instruction manual



- RC Shark requires 2 x 1.5V Alkaline "AAA" batteries. (Not included)
- Remote controller requires 3 x 1.5V Alkaline "AAA" batteries. (Not included)

## Battery Installation:

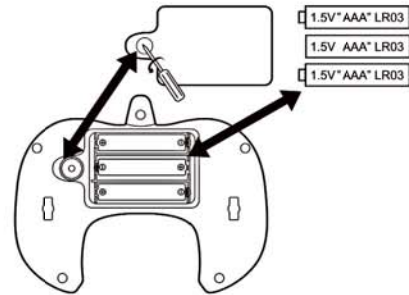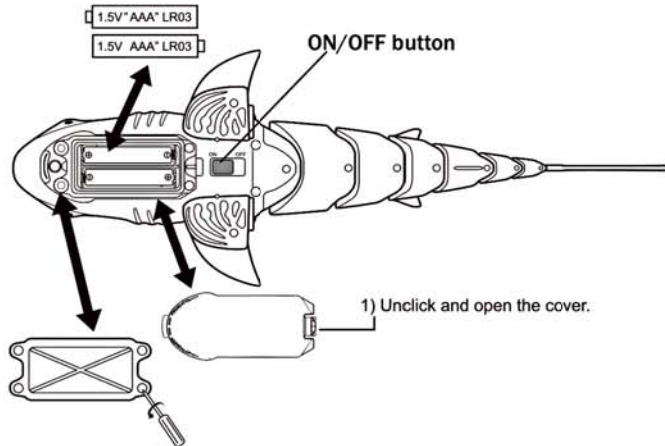

- 2) To remove battery lid, use screwdriver to turn screws in COUNTER CLOCKWISE direction.
- 3) Install 2 x 1.5V AAA batteries with the polarity matching the direction shown inside the battery compartment.
- 4) Replace the battery lid and re-install screws. Tighten screws by turning in CLOCKWISE direction.
- 5) Replace the cover.

- 1) To remove battery door, use screwdriver to turn screw in COUNTER CLOCKWISE direction.
- 2) Install 3 x 1.5V AAA batteries with the polarity matching the direction shown inside the battery compartment.
- 3) Replace the battery lid and re-install screw. Tighten screw by turning in CLOCKWISE direction.

**WARNING:**  
Never allow young children to play in or around water without adult supervision.

## How to play:

- Put the batteries into the Remote controller and press the ON/OFF button. If the left and right LEDs flash simultaneously (for 0.25 seconds), it indicates that the remote controller is ready for pairing.
- Put the batteries into the RC Shark, turn the ON/OFF switch to ON, and it will automatically pair with the remote controller to establish a connection. The left and right LEDs of the remote controller are always on.
- Press and hold the ON/OFF button for 3 seconds, the remote controller will be turned off.
- Put the shark into the water, and you can use the left and right push rods, push forward and pull back to control the shark to move forward or backward.
- Both the left and right push rods possess the acceleration function. (The stronger the driving force is, the faster the shark moves.)

