


WIFI

 Waterproof 30M

SO58 1080P
30FPS

ACTION CAM



GETTING STARTED

Welcome

Congratulations on your new camera! This user manual will help you to learn the basics of capturing life's most incredible moments!

TO Power ON

 
 
 
Press the **Power/Mode** Button

To Power OFF

Press and hold the **Power/Mode** Button

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode button** to cycle through video modes, photo modes, playback and settings. The modes will appear in following order

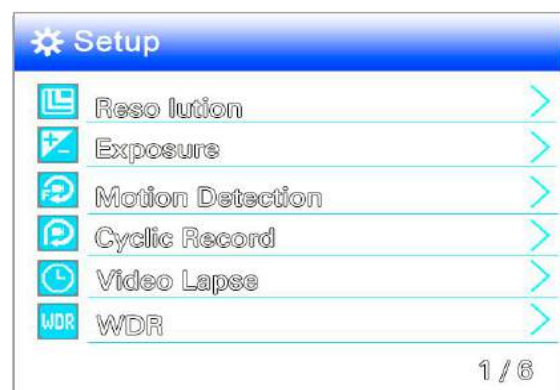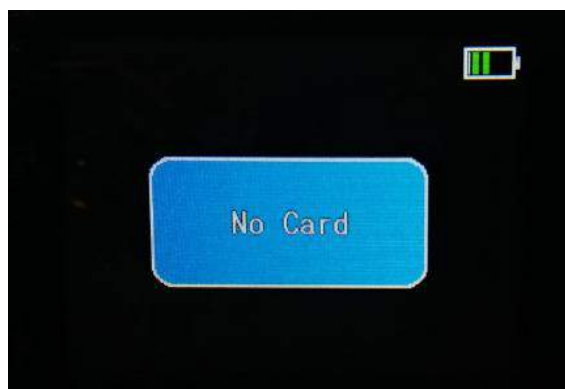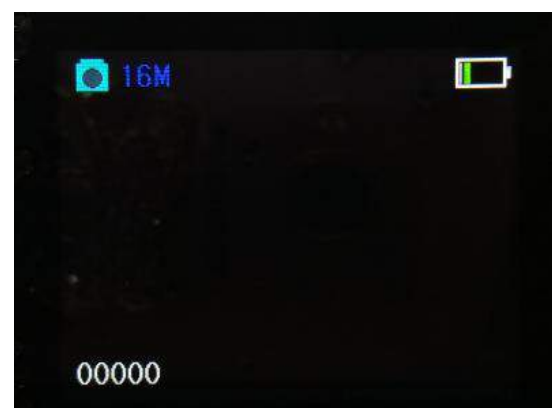

SETTING MENU



Press the **Power/Mode button** to enter the settings menu, Repeatedly press the **down/on button** to cycle through options and press the **OK button** to select desired option.

***As below are the details of the setting menu, including all types of camera's setting menu.**

PAGE1

- ☒ **Resolution:** 1080FHD (1920X1080)/1080P (1440X1080)/720 (1280x720)/ WVGA (848x480) / VGA (640x480)
- ☒ **Exposure:** +2.0,+5/3,+4/3,+1.0,+2/3,+1/3,+0.0,-1/3,-2/3,-1.0,-4/3,-5/3,-2.0
- ☒ **Motion Detection:** off/on
- ☒ **Cyclic Record:** off/1min/2min/3min/5min/10min
- ☒ **Video Lapse:** off/1s/2s/5s/10s/30s/1min
- ☒ **WDR:** off/on

PAGE 2

- ☒ **Record Audio:** off/on
- ☒ **Date Stamp:** off/on
- ☒ **Image size:** 16M/12M/10M/8M/5M/3M/2MHD/1.3M/VGA
- ☒ **Quality:** Fine/Normal/Economy
- ☒ **Capture Mode:** Off/3s/5s/10s/20s Timer
- ☒ **Sharpness:** strong/normal/soft

PAGE 3

- ☒ **ISO:** Auto/100/200
- ☒ **Anti-Shaking:** off/on
- ☒ **White Balance:** Auto/daylight/cloudy/tungsten/fluorescent
- ☒ **Frequency:** 50HZ/60HZ
- ☒ **OSD Mode:** off/on
- ☒ **Screen Saver:** off/1min/2min/3min

PAGE 4

- ☒ **Rotate:** off/on
- ☒ **Auto Power Off:** off/3min/5min/10min
- ☒ **Language:** English/Chinese/Japanese/French/Deutsch/Korean/Italian/Portuguese
Polish/Spanish/Turkey
- ☒ **Beep Sound:** off/on
- ☒ **Date/Time:** MM/DD/YY,YY/MM/DD,DD/MM/YY

PAGE 5

- ☒ **Car Mode:** off/on
- ☒ **WIFI SSID:** SPORT DV

☒ **WIFI Password:** 12345

☒ **Delete:** Current/All

☒ **Format:** Cancel/OK

PAGE 6

☒ **Default Setting:** Cancel/OK

☒ **Version:** firmware

VIDEO MODE



To record video, verify the camera is in **Video mode**. If the video icon on your camera's LCD screen is not showing, press the **Power/Mode button** repeatedly until it appears.

To start recording:

Press the **OK button**, the camera status Lights will flash while recording.

To stop recording:

Press the **OK button**, The camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your Video will be saved before the camera powers OFF.

PHOTO MODE



To capture a Photo, verify the camera is in **Photo mode**. If the Photo icon on your camera's LCD screen is not showing, press the **Power/Mode button** repeatedly until it appears

To take a photo:

Press the **OK button**. the camera will emit the camera shutter sound

PLAYBACK

Playing Back Videos and Photos

To enter the Playback Menu:

1: Press the **Mode button** to enter the playback Mode

2: Use the **UP and DOWN button** to cycle through the various options, press the **OK button** to select desired option

STORAGE/MICROSD CARDS

This camera is compatible with 4GB,16GB and 32GB capacity micro SD, microSDHC, and microSDXC memory cards, you must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities

BATTERY

Charging The Battery

To charge the battery

1. Connect the camera to a computer or USB power supply
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.
4. Charging Time:3.5 hours (5v,500mah)

CAMERA APP

Connecting to the App(Wi-Fi Edition Only)

The **App** lets you control your camera remotely using a smart phone or tablet. Features include full camera control,live preview,photo playback and sharing of select content and more.

1. Download the **App(GoPlus Cam)** to your smart phone or tablet at the Apple App Store or Google Play.
2. Press the **Power/Mode** button to power camera ON
3. Make sure the camera is in video or photo modes
4. Press the **UP button** turn on the Wi-Fi, and there will show the wifi name and password on your camera's LCD screen.
5. In your smart phone or tablet's Wi-Fi settings, connect to the network called "**XtremePro** " followed by a series of numbers.
6. Enter the **password** "1234567890",which shows on your camera's LCD screen.
7. Open the **App** on your smart phone or tablet, press connect into

*Press the **UP button** to turn OFF Wi-Fi.

The **App** is compatible with smart phones and tablets listed below.

For Apple ios:

*iphone6,6s,6&6Plus(ios9)

*ipad Air & Mini(ios9)

For Android:

*Android 4x Quad-core devices



iOS App Download
For Wi-Fi Edition



Android App Download
For Wi-Fi Edition

COMPATIBILITY

*Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- English: "

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

- French:"

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil nedit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."