



**RJ461AX 61 KEY MUSIC
KEYBOARD WITH ALEXA**

User Guide

Important Information

Be sure to obey the following information so as not to harm yourself or others or damage this instrument or other external equipment.

Power adapter:

- Please use only the specified AC adapter supplied with the product. An incorrect or faulty adapter can cause damage to the electronic keyboard.
- Do not place the AC adapter or power cord near to any source of heat such as radiators or other heaters.
- To avoid damaging the power cord, please ensure that heavy objects are not placed on it and that it is not subject to stress or over bending.
- Check the power plug regularly and ensure it is free from surface dirt. Do not insert or unplug the power cord with wet hands.

Do not open the body of the electronic keyboard:

- Do not open the electronic keyboard or try to disassemble any part of it. If the device is not functioning correctly, please stop using it and send it to a qualified service agent for repair.

Use of the electronic keyboard:

- To avoid damaging the appearance of the electronic keyboard or damaging the internal parts please do not place the electronic keyboard in a dusty environment, in direct sunlight or in places where there are very high or very low temperatures.
- Do not place the electronic keyboard on an uneven surface. To avoid damaging internal parts do not place any vessel holding liquid onto the electronic keyboard as spillage may occur.

Maintenance:

- To clean the body of the electronic keyboard wipe it with a dry, soft cloth only.

Connection:

- To prevent damage to the speaker of the electronic keyboard please adjust the volume of any peripheral device to the lowest setting and gradually adjust the volume accordingly to an appropriate level once the music is playing.

During operation:

- Do not use the keyboard at the loudest volume level for a long period.
- Do not place heavy objects onto the keyboard or press the keyboard with undue force.
- The packaging should be opened by a responsible adult only and any plastic packaging should be stored or disposed of appropriately.

Specification

- Specifications are subject to change without notice.

 
Contents

Important Information	2
Controls, Indicators and External Connections	5
Front Panel.....	5
External Connections	6
LCD Display	6
Preparation Before First Use.....	7
Power	7
Use of AC/DC power adapter:	7
Battery operation:	7
Jacks and Accessories.....	7
Using headphones:.....	7
Connecting an Amplifier or Hi-Fi Equipment:	8
Connecting a Sustain Pedal	8
Connecting an iPad or Android device:	8
Connecting a phone or audio device to the AUX Input to play music through the keyboard:.....	8
Connecting a Laptop or PC:	9
Connecting a Microphone:.....	10
Connecting USB Flash-drive or TF card:.....	10
Setup for Amazon Alexa Operation.....	11
Prerequisites for Setup.....	11
Overview	11
Essential Setup Steps in Detail (RockJam APP and WiFi Setup)	11
Optional Setup Steps in Detail (Amazon Alexa APP and Piano Teacher Skill).....	15
Keyboard Operation	17
Power and Volume	17
Power control:.....	17
Adjustment of the Master Volume:	17
Tone	18
Effect & Control	18
Dual Tone Keyboard:.....	18
Split Keyboard:	19
Sustain:.....	19
Vibrato:	20
Transpose:.....	20

Metronome:	21
Panel Percussion Instruments:.....	21
Rhythm	22
Selecting the rhythm:	22
Start / Stop:.....	22
Sync:.....	23
Fill in:.....	23
Accompaniment Volume Adjustment:.....	24
Tempo Adjustment:	24
Chord Accompaniment.....	25
Single Finger Chords:	25
Multi Finger Chords:	25
Chord Tones:.....	26
Intro / Ending:	26
Recording Function	27
Rhythm Programming	27
Demo Songs:.....	28
Setting Memories M1, M2 and M3	28
Teaching Modes.....	29
Single Key Course:.....	29
Synchronised Course:	29
Concert Course:	29
Progressive Learning:.....	30
Appendix I. Percussion Instruments.....	31
Appendix VI. Chord Tables	38
Single Finger Chords.....	38
Fingered Chords.....	39
Appendix VII. RockJam Keyboard APP	40
Appendix VIII. Technical Specification	41
FCC & IC Statement	42
FCC Statement	42
Product Disposal Instructions (European Union)	42


Controls, Indicators and External Connections

Front Panel

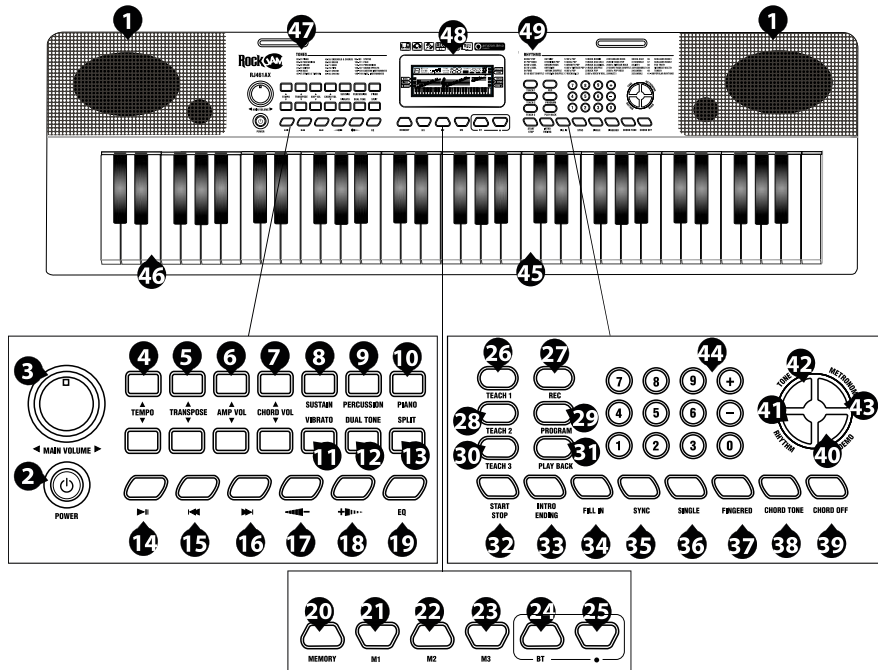


- | | | |
|---------------------|-----------------------|---------------------------|
| 1. Speaker | 17. Music Volume - | 33. Intro / Ending |
| 2. Power Switch | 18. Music Volume + | 34. Fill In |
| 3. Main Volume | 19. EQ | 35. Sync |
| 4. Tempo +/- | 20. Memory | 36. Single |
| 5. Transpose +/- | 21. Memory Storage 1 | 37. Fingered |
| 6. Amp Volume +/- | 22. Memory Storage 2 | 38. Chord Tone |
| 7. Chord Volume +/- | 23. Memory Storage 3 | 39. Chord Off |
| 8. Sustain | 24. Bluetooth Control | 40. Demo |
| 9. Percussion | 25. Alexa Control | 41. Rhythm |
| 10. Piano | 26. Teach 1 | 42. Tone |
| 11. Vibrato | 27. Record | 43. Metronome |
| 12. Dual Tone | 28. Teach 2 | 44. Number Buttons |
| 13. Split | 29. Program | 45. Keyboard Playing Area |
| 14. Play/ Pause | 30. Teach 3 | 46. Chord Playing area |
| 15. Rewind | 31. Playback | 47. Tones List |
| 16. Fast Forward | 32. Start / Stop | 48. LCD Screen |
| | | 49. Rhythms List |

 External Connections

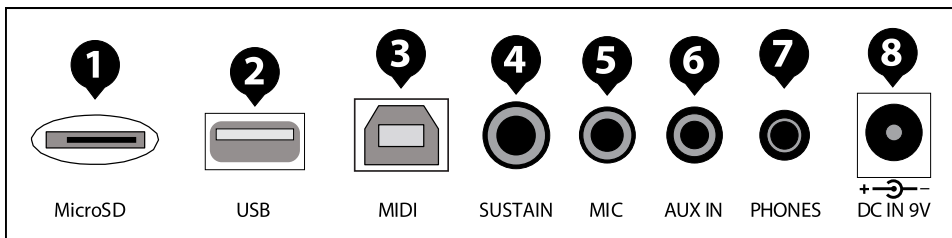

1. TF Card Slot
2. USBMP3 Input
3. MIDI Input/Output
4. Sustain Pedal Input
5. MIC Input
6. AUX IN
7. Headphone Output
8. DC IN

 LCD Display

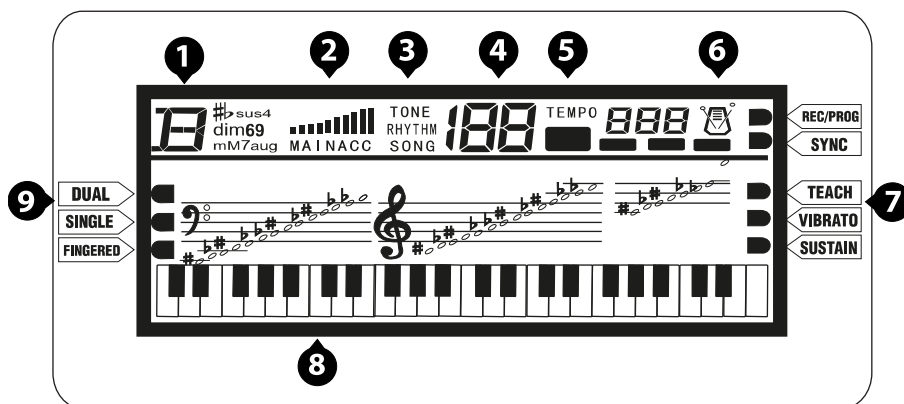


1. Playing chord indication
2. Volume level display
3. TONE, RHYTHM or DEMO song
4. Digital display for song, rhythm and tone number
5. Tempo value of rhythm and song (bpm)
6. Metronome for rhythm and song
7. Mode Indicators 1
8. Key Indicator
9. Mode Indicators 2

Preparation Before First Use

Power

Use of AC/DC power adapter:

 Please use the AC/DC power adapter that came with the electronic keyboard or a power adapter with DC 12V output voltage and 1,000mA output current with a centre positive plug. Connect the DC plug of the power adapter into the DC12V power socket on the rear of the keyboard and then connect the other end into the mains wall socket and switch on.

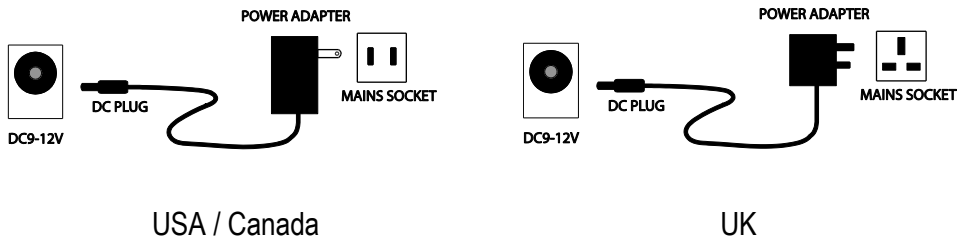

Caution: When the keyboard is not in use you should unplug the power adapter from the mains power socket.

Battery operation:

 
Open the battery lid on the underneath of the electronic keyboard and insert 6 x 1.5V Size D alkaline batteries. Ensure the batteries are inserted with the correct polarity and replace the battery lid.

Caution: Do not mix old and new batteries. Do not leave batteries in the keyboard if the keyboard is not going to be used for any length of time. This will avoid possible damage caused by leaking batteries.

Jacks and Accessories


Using headphones:

Connect the 3.5mm headphone plug into the [PHONES] jack on the rear of the keyboard. The internal speaker will cut off automatically once headphones are connected. Headphones with inline volume control are included.

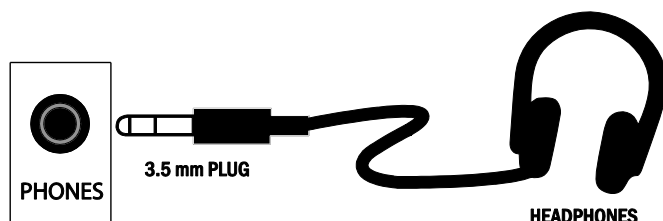

Connecting an Amplifier or Hi-Fi Equipment:

 This electronic keyboard has a built in speaker system but it can be connected to an external amplifier or other hi-fi equipment. First turn off the power to the keyboard and any external equipment you are looking to connect. Next insert one end of a stereo audio cable (not included) into the LINE IN or AUX IN socket on the external equipment and connect the other end into the [PHONES] jack on the rear of the electronic keyboard.

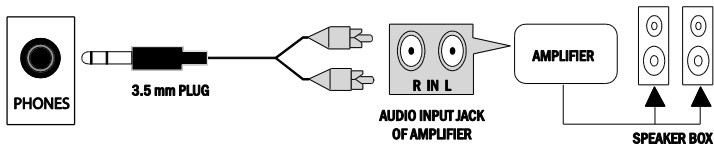

Connecting a Sustain Pedal

 
This electronic keyboard has a 6.35mm socket for connecting a sustain pedal (not included). Connect the sustain pedal to the 6.35mm socket.

Connecting an iPad or Android device:

The Keyboard can be connected to an Apple or Android device through the MIDI output. This allows you to play music through an app. Connect the USB B type plug into the MIDI output at the back of the keyboard. USB cables for Android and Apple are not included but can be bought from Amazon or eBay.


Note: Android 6.0 and upwards are required for MIDI function.

Recommended App: 'Simply Piano' by Joytunes available from Google Play or Apple App Store.

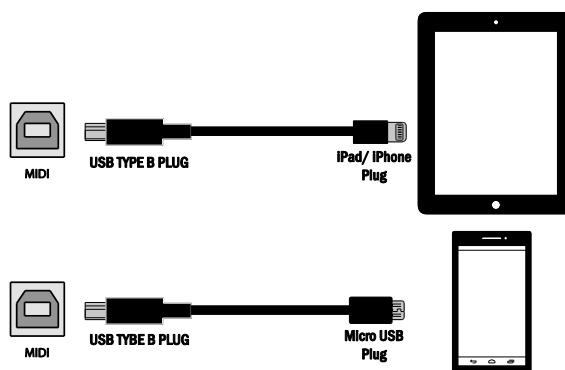


Connecting a phone or audio device to the AUX Input to play music through the keyboard:

 This keyboard has a built-in speaker system that can be used to play music from your phone or mobile device. Insert one end of a stereo audio cable into the AUX IN socket on the back of the keyboard and connect the other end into your phone or audio device. Make sure the keyboard is switched on. Use the volume control of the phone to control the music volume. AUX in cable not included.

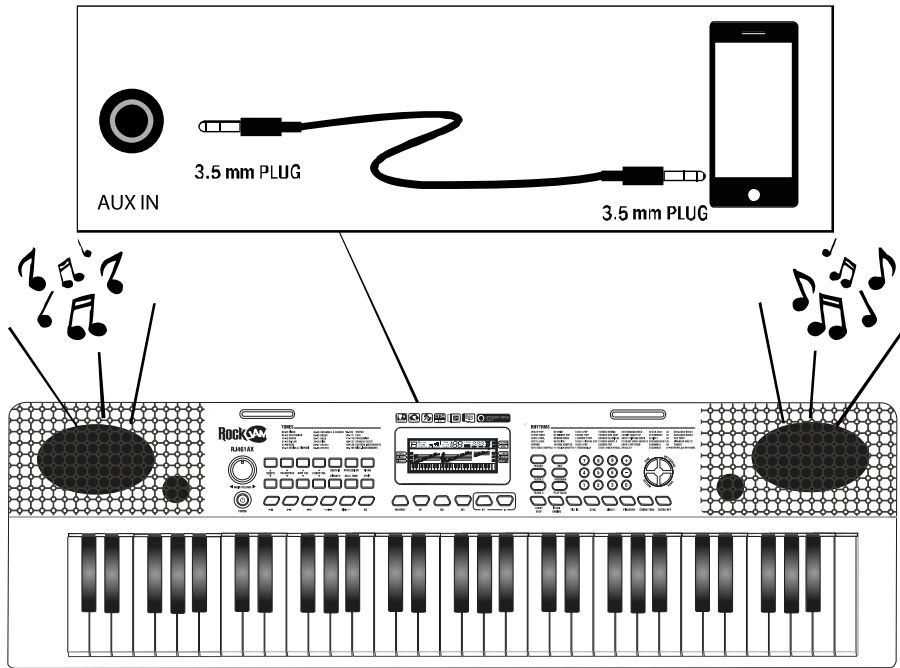


Connecting a Laptop or PC:

  You can connect the keyboard to a laptop or PC device and work with various 3rd party MIDI software for recording and playing back songs using midi files. Connect a cable with USB B type plug into the MIDI output at the back of the keyboard and then connect the USB A type plug to the PC or Laptop. USB cable for PC/Laptop connection is not included.

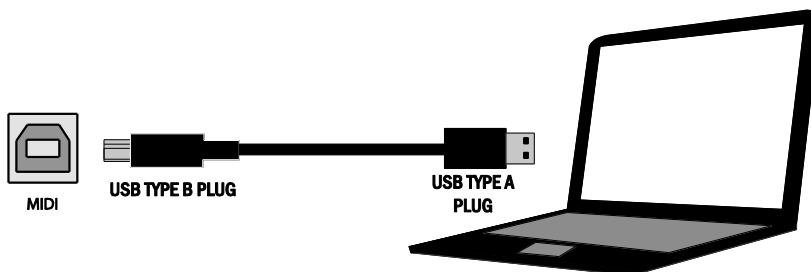



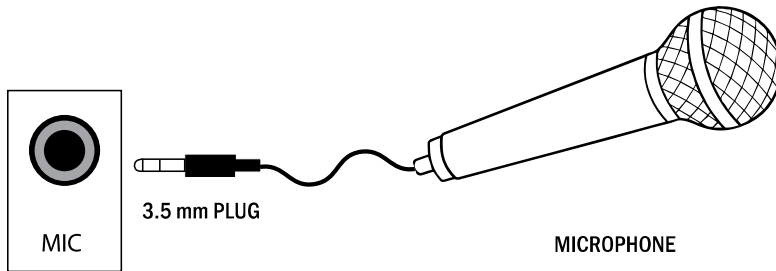


Connecting a Microphone:

 
Connect the 3.5mm microphone plug into the [MIC] jack on the rear of the keyboard.



Connecting USB Flash-drive or TF card:

To play MP3s through the Keyboard Speakers, place files onto either a USB flash-drive or TF card. Insert the card into the input slot at the rear of the Keyboard. The first song will play.

- Touch the  button to Play or Pause playback.
- Touch the  or  buttons to go to the last or next song
- Touch the  or  buttons to increase or decrease the playback volume
- Touch the **EQ** button to adjust the playback tone. There are 6 different tone settings, each press will cycle to the next setting.

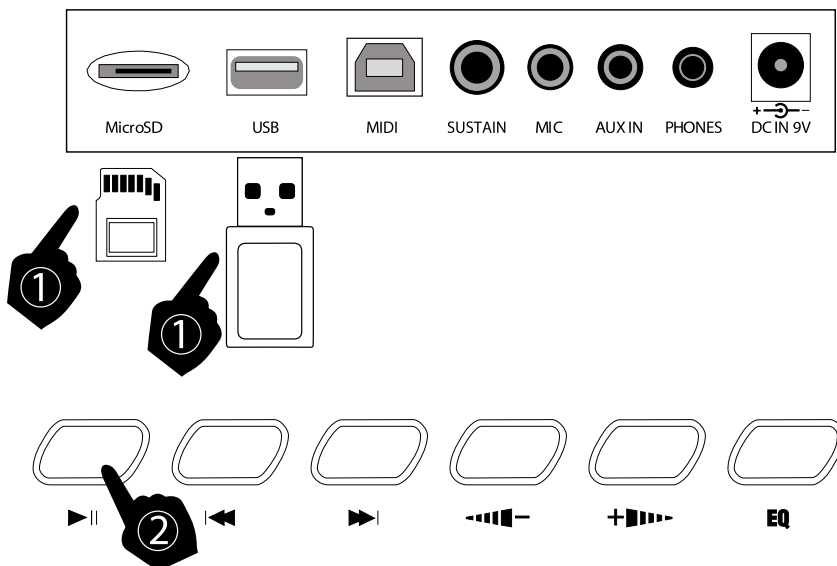

Setup for Amazon Alexa Operation

Prerequisites for Setup

In order to setup the keyboard for use with Amazon Alexa you will need the following:

- A smartphone or tablet with Android or Apple iOS (iPhone, iPad etc.)
- A WiFi connection
- An active Amazon account

Overview

In order to setup for use with Amazon Alexa there are 3 essential steps as follows:

- Download and install the Alexa companion APP 'RockJam Keyboard' on your smartphone or tablet device.
- Using the companion APP connect the keyboard to your WiFi network.
- Register the keyboard to your Amazon account.

In addition you can install an Alexa skill to help you learn to play as follows:

 
- Install Amazon Alexa APP to your smart device
- Search for and enable the 'Piano Teacher' skill

Essential Setup Steps in Detail (RockJam APP and WiFi Setup)




Download and install the Alexa companion APP 'RockJam Keyboard' on your smartphone or tablet device from the Google Play store (Android) or the Apple App Store (iPhone, iPad).

At first power on, the keyboard should enter network connection mode. If this does not happen or you wish to use the keyboard on a different WiFi connection then proceed as follows to initiate the network connection.

Press and hold the blue Alexa button as shown for over 5 seconds to enter network connection mode.



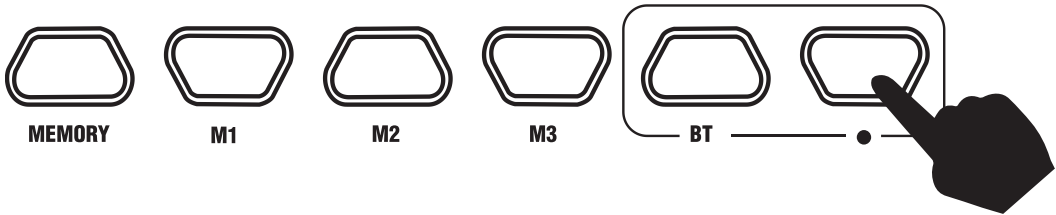


   The keyboard will respond with, “Entering Network Connection Mode”

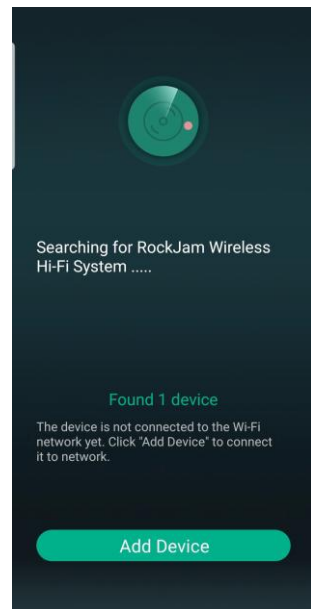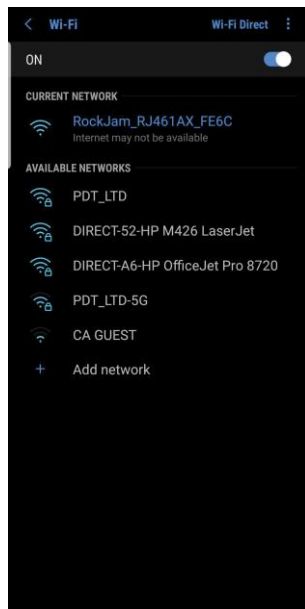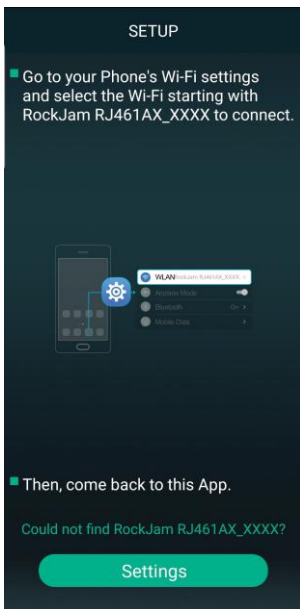



Open the 'RockJam Keyboard' APP on your smart device and you will be prompted to connect to the WiFi network of the keyboard.

   Open the WiFi settings on your smart device and connect to the keyboard WiFi network, RockJam_RJ461AX_XXXX. If the WiFi network cannot be found then return back to the 'RockJam Keyboard' APP and click on 'Could not find RockJam RJ461AX_XXXX?' Then follow the on screen instructions and try again.

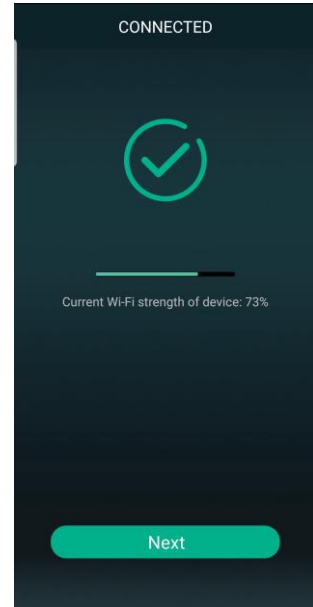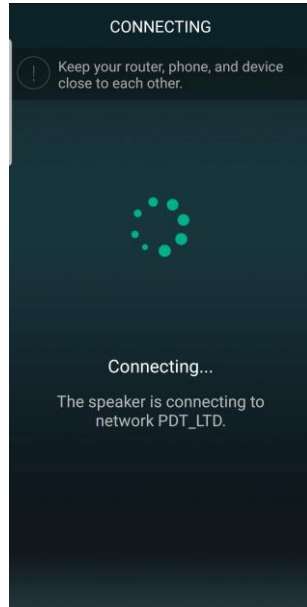
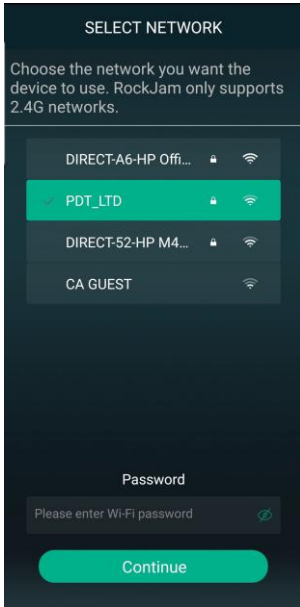


You will then be asked to select your home WiFi network and enter the WiFi passcode. Note that only a 2.4 GHz WiFi connection can be used. Click Next and the keyboard will connect to your home WiFi.

  Your smart device will then connect back to your home WiFi network. At this point, both your keyboard and smart device will be connected to your home WiFi.

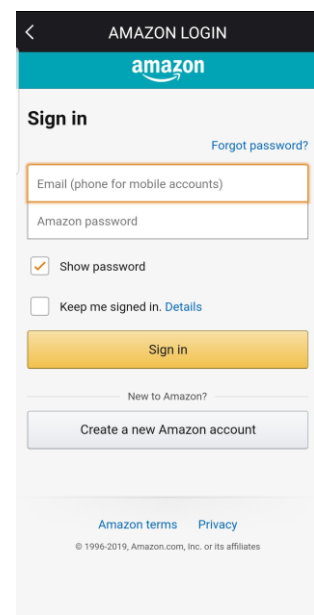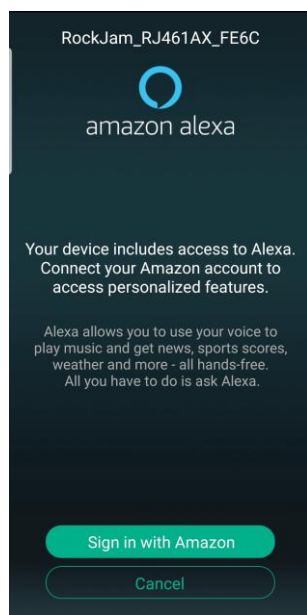

  
You will then be asked to register your keyboard to an Amazon account.
Note: You will not have any Alexa functionality for the keyboard if you skip this step.

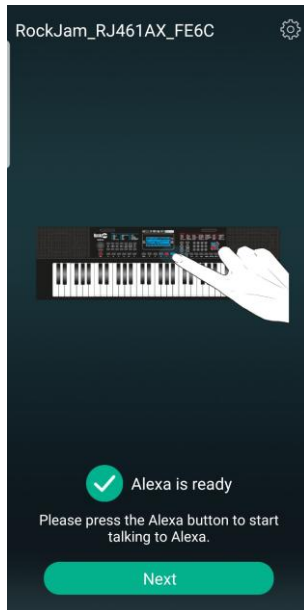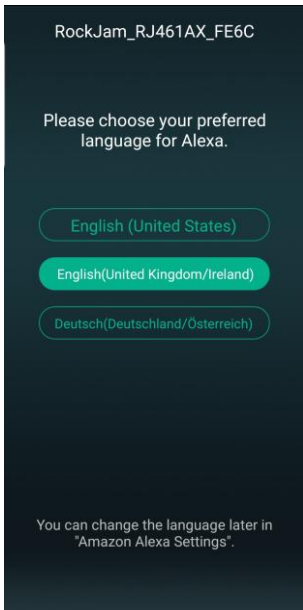


You can test the successful registration of the keyboard by asking Alexa a simple question. Press the blue Alexa button on the keyboard and say something like, "What's the time?". Alexa should respond with the current time.

For full details of additional functionality offered by the 'RockJam Keyboard' companion APP refer to Appendix VII.

 
Optional Setup Steps in Detail (Amazon Alexa APP and Piano Teacher Skill)

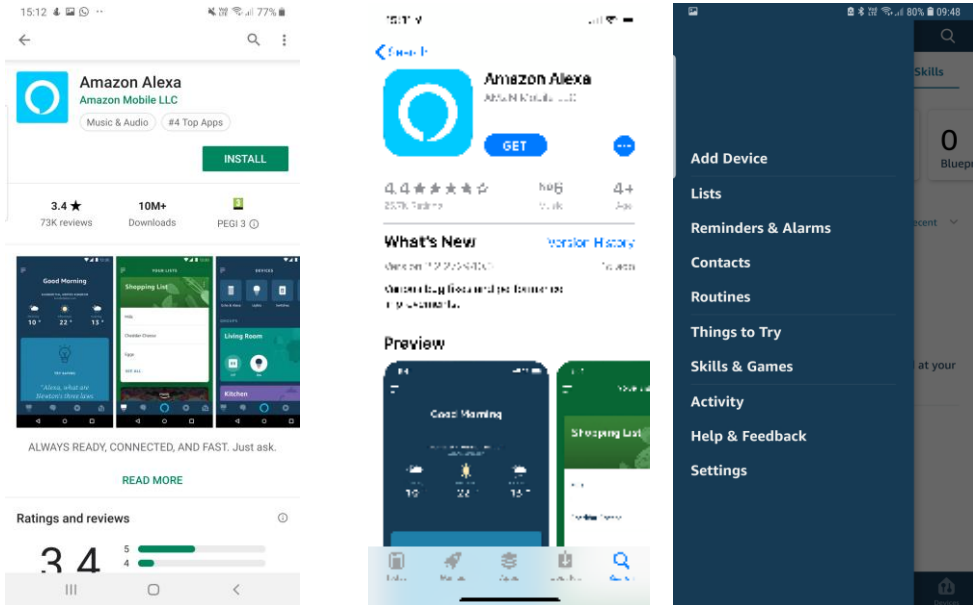

 
Download and install the Amazon Alexa APP on your smartphone or tablet device from the Google Play store (Android) or the Apple App Store (iPhone, iPad). Once you have signed in make sure you have the RockJam keyboard added as a device, open the menu in the Alexa APP and access **Skills and Games**.

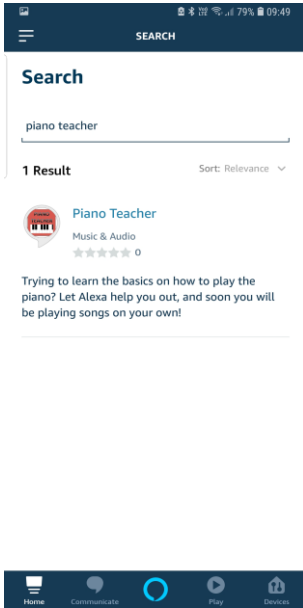

 Search for and enable the Piano Teacher skill.

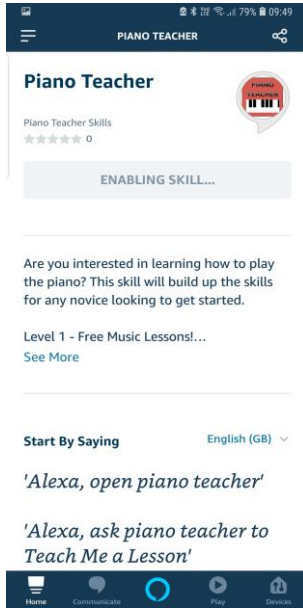

 Once enabled, press the blue Alexa button on the keyboard and say, "Open Piano Teacher". The Piano Teacher skill should then start. To exit the Piano Teacher skill, press the blue Alexa button on the keyboard and then say, "Exit".

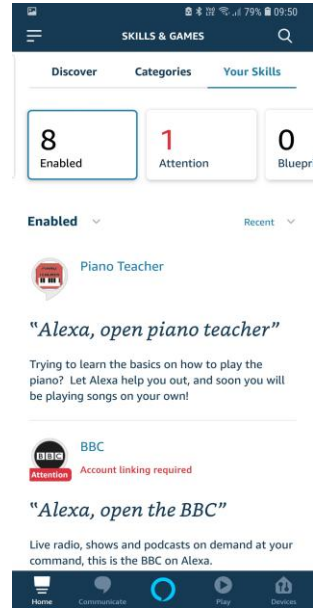


Keyboard Operation

Power and Volume


Power control:

 Press the [POWER] button to turn the power on and again to turn the power off. The LED screen will light up to indicate power on. (Wi-Fi is activated)

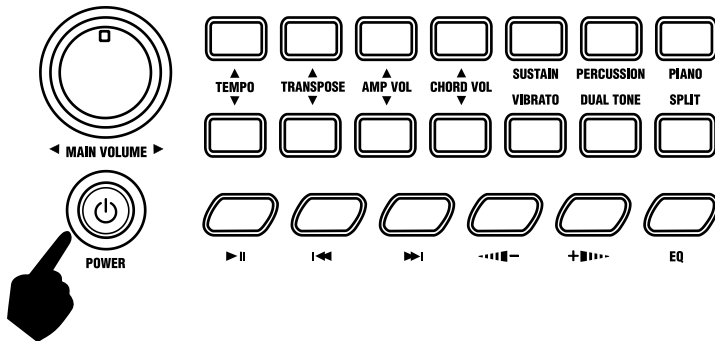

Adjustment of the Master Volume:

 
To change the volume, turn the MAIN VOLUME dial.

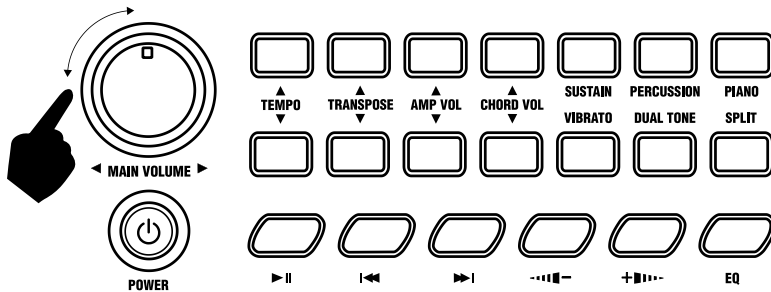

Tone

Tone Selection:

 
When the keyboard is switched on the default TONE is "00" Grand Piano. To change the tone, press the TONE button first and then punch in a number code on the keypad by pressing the corresponding digits 0-9. Tones can also be changed by using the [+ / -] buttons on the keypad. Refer to Appendix III for a full list of the available tones and codes.

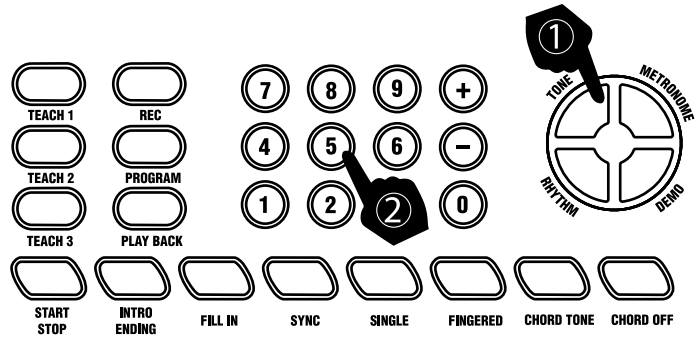

Effect & Control


Dual Tone Keyboard:

 DualTone mode allows the keyboard to mix two tones and play them at the same time. To switch on Dual Tone Keyboard mode press the [DUALTONE] button. The LCD display will show that Dual tone mode is active by showing a flag indicator. The first tone will be fixed as the tone that was selected before the [DUALTONE] button was pressed. The second tone can be freely selected by pressing the corresponding digits on the numerical keypad. Press the [DUALTONE] button again to exit DualTone mode.

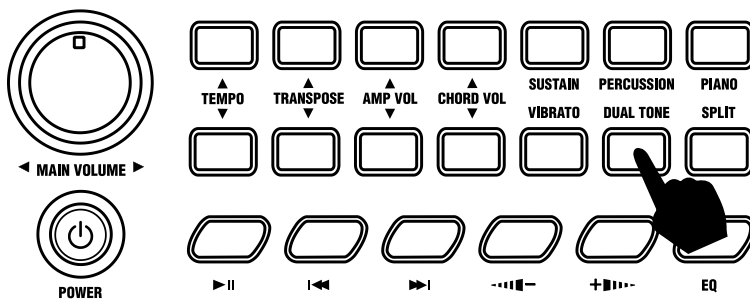


Split Keyboard:

 To switch on Split Keyboard mode press the [SPLIT] button. The keyboard will split into two keyboards at the 24th key from the left. In Split Keyboard mode the pitch of the left hand keys are raised by one octave. Press the [SPLIT] button again to exit Split Keyboard mode.

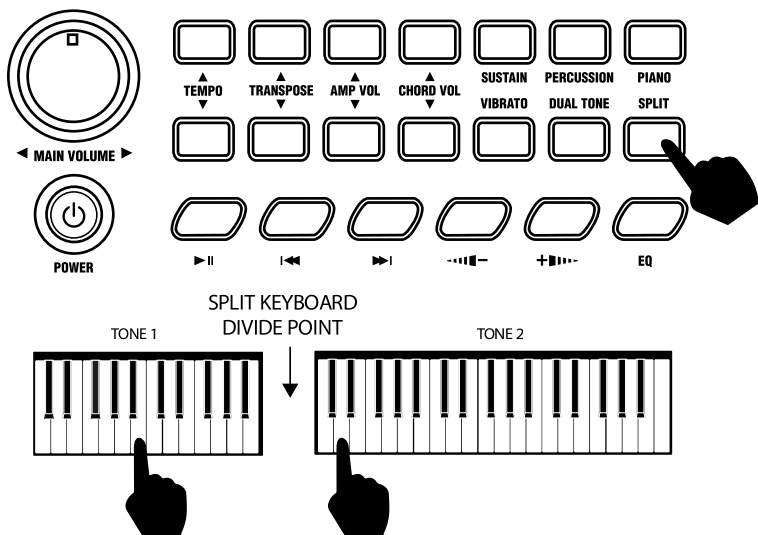


Sustain:

 Press the [SUSTAIN] button to enter Sustain mode. The LCD display will display that [SUSTAIN] is on. Once this mode is selected the sound of each note played is prolonged. Pressing the [SUSTAIN] button again will turn the sustain feature off and exit this mode.

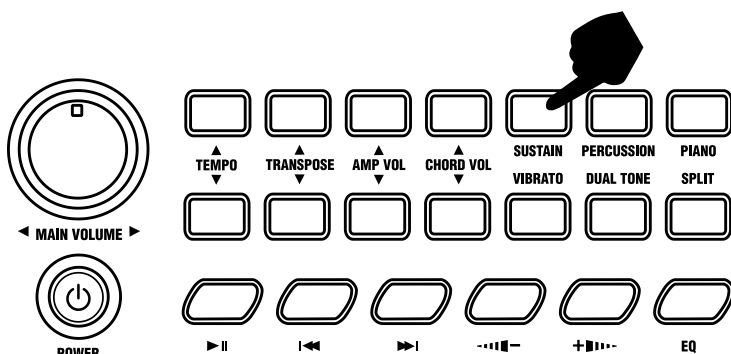


Vibrato:

 Press the [VIBRATO] button to enter Vibrato mode. The LCD display will display that [VIBRATO] is on. Once this mode is selected each time a note is played a trembling effect is added to the end of the note. Pressing the [VIBRATO] button again will turn the Vibrato feature off and exit this mode.

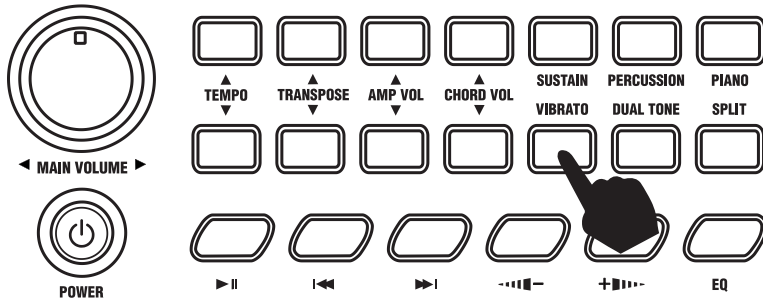


Transpose:

 Press the [TRANPOSE] buttons to alter the musical scale of the note being played. You can adjust the scale by 6 levels upwards or downwards. Pressing both the [TRANPOSE] buttons at the same time will revert the musical scale to 00. The transpose level is reset to 00 after power off and on.

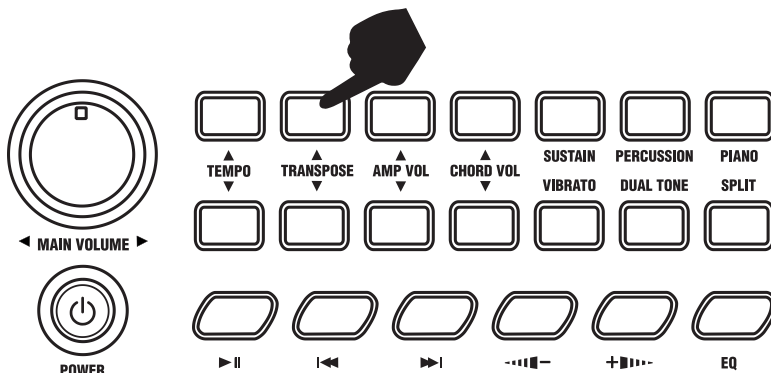


Metronome:

 Press the [METRONOME] button to start the tick-tock beat. There are four beats to choose from. Depending on what the performance needs, you can touch the [TEMPO] buttons to speed up or slow down the beat. Press the [METRONOME] button repeatedly to cycle through to the available beat patterns. The LCD display will indicate the beat you have chosen. The metronome effect is added to the music once you start playing. To exit this mode touch the [START/STOP] or [METRONOME] button again.

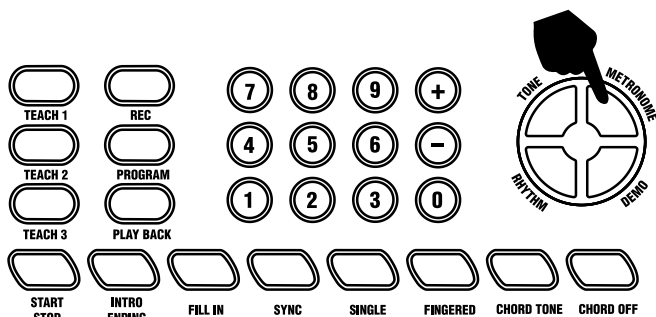

Panel Percussion Instruments:

 
When the [PERCUSSION] button is pressed all the keyboard's keys can be used to play percussion sounds. Press the [PERCUSSION] button again to exit Percussion mode. Refer to Appendix I. for a table of the 61 percussion sounds available

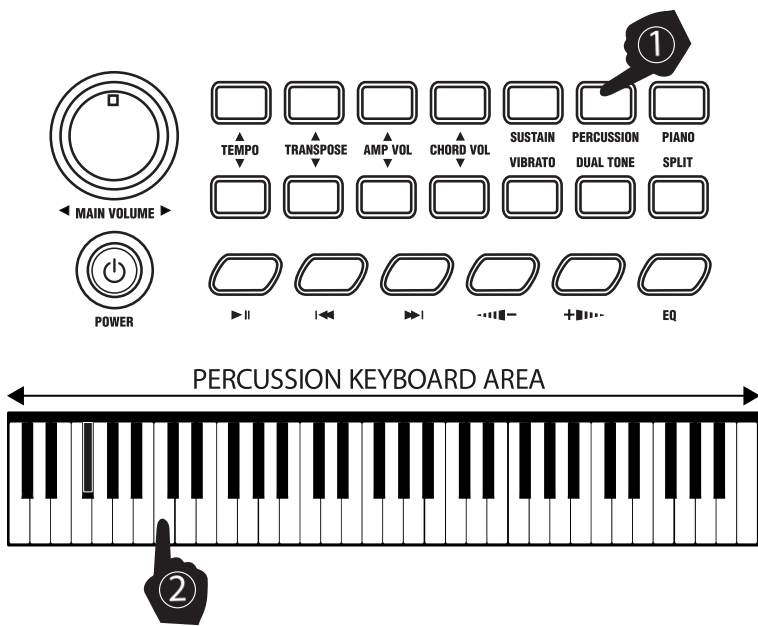

Rhythm


Selecting the rhythm:

 You can choose from any of the 200 built in rhythms. Please refer to the Appendix II. for the detailed rhythm table. Press the [RHYTHM] button to enter the rhythm selection function. The LCD display will show the current rhythm number. You can select the rhythm you require by pressing the corresponding digits on the numerical keypad or by pressing the + / - buttons.

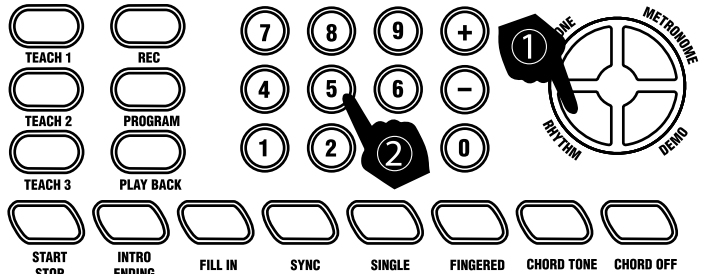


Start / Stop:

 With a rhythm selected, press the [Start/Stop] button start or stop playing the chosen rhythm.

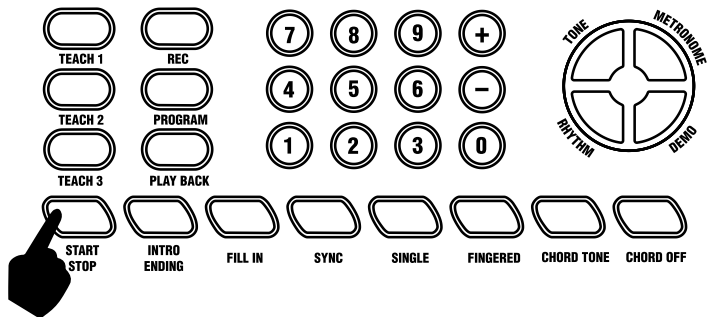


Sync:

 Touch the [SYNC] button to select the synchronised accompaniment function. Then press any of the first 19 keys on the left hand side of the keyboard to start the selected rhythm playing. Touch the [START/STOP] button to stop the rhythm and exit the sync function.

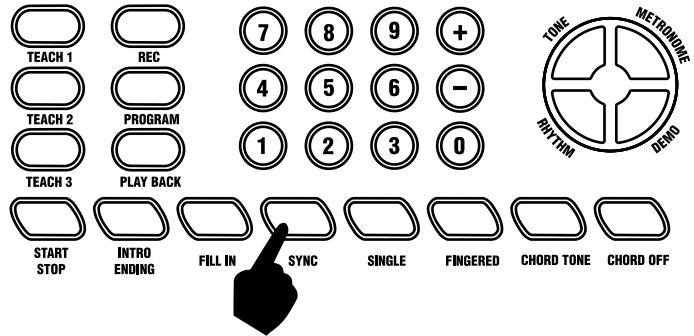


Fill in:

 While playing a rhythm you can add a rhythmic fill if you touch the [FILL IN] button during playback. After the fill-in, the rhythm will continue playing as normal.

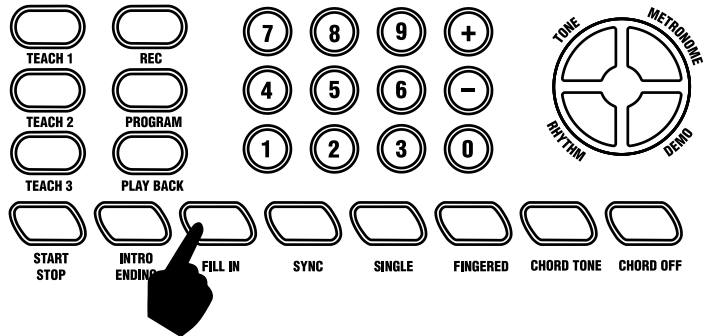


Accompaniment Volume Adjustment:

 The Accompaniment Volume can be adjusted by pressing the [ACCOMPVOLUME] buttons. The LCD display will show the volume as it is adjusted. The adjustment range has 10 levels which are displayed as a bar graph on the LCD display. Pressing both the [ACCOMPVOLUME] buttons at the same time will return the Accompaniment Volume to the default level (level 006). Note: The Main Volume control will also affect the output level of the accompaniment. At power, on the accompaniment volume will reset to the default level.

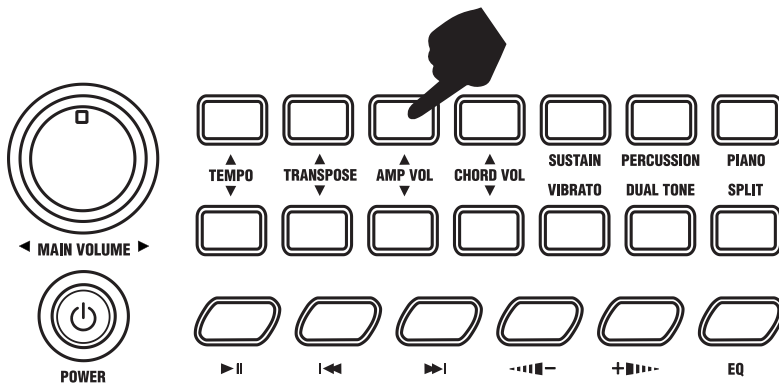

Tempo Adjustment:

 
Press the [TEMPO] buttons to adjust the tempo of the rhythm, metronome, or demo songs. The adjustment range is 30-240 bpm. Pressing both the [TEMPO] buttons at the same time will revert the tempo to the default, for the rhythm selected. At power on the tempo will be 120 bpm.

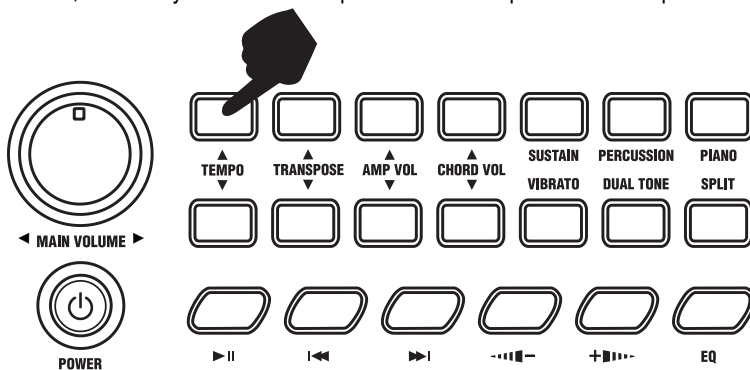

Chord Accompaniment

Single Finger Chords:

 Press the [SINGLE] button to activate the single finger chord function. The LCD screen will flag which function is activated. With a rhythm playing, chords are played by pressing a key in the chord area on the left hand side of the keyboard (keys 1-19). The finger patterns required are shown in Appendix VI. The played chord is displayed in the top left corner of the LCD display. Touch the [START/ STOP] button to start or stop the chord accompaniment.

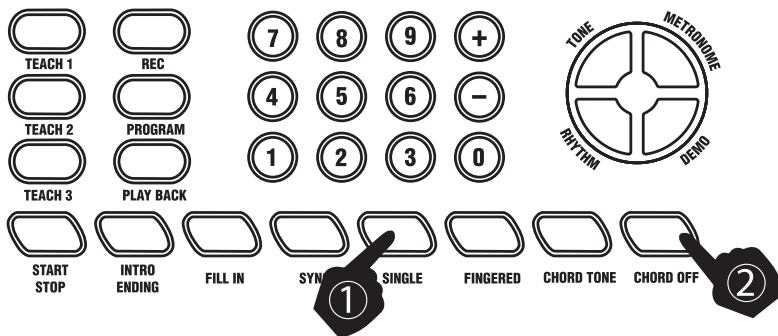

Multi Finger Chords:

Press the [FINGERED] button to activate the multi-finger chord function. The LCD screen will flag which function is activated. With a rhythm playing, chords are played by pressing keys in the chord area on the left hand side of the keyboard (keys 1-19). The finger patterns required are shown in Appendix VI. The played chord is displayed in the top left corner of the LCD display. Touch the [START/ STOP] button to start or stop the chord accompaniment. **Note:** For this function, it is important to use the finger patterns shown in Appendix VI.

