




Features & Specs

- ✦ Innovative *honeycomb* cell design for clean & natural sound.
 - ✦ Bluetooth® wireless 4.0 technology
 - ✦ Large battery for portable & home use
 - ✦ 40 watt stereo amp with outstanding bass
 - ✦ Wide dispersion sound field w/ DSP
 - ✦ MP3 playback from Micro SD/TF card
 - ✦ MP3 playback from USB flash drive
 - ✦ Power bank function for phone charge
 - ✦ Audio line-in for wired connections
-
- ◆ Speaker size: 14”(l) x 4.5”(w) x 6.5”(h)
 - ◆ Weight: 4 lbs.
 - ◆ Speaker drivers: 2” x 4 (full range)
 - ◆ Amplifier output: 40W (20W x 2) Class D
 - ◆ Frequency Response: 100Hz – 20KHz
 - ◆ Signal to Noise Ratio: \geq 80db
 - ◆ Distortion: \leq 2%
 - ◆ Battery Life: 6-14 hours (via Bluetooth®)
 - ◆ Working voltage: 9-15V
 - ◆ Battery charging time: 3 hours
 - ◆ Battery capacity: 2200 mAh (Li-ion)
 - ◆ Operating Frequency: 2.4 GHz – 2.48 GHz
 - ◆ Bluetooth® transmission distance: 30 ft.



Thank you for purchasing the
Honeycomb Sound Bluetooth®
Wireless Speaker System.
Please refer to this manual
before using the product.

SAFETY INFORMATION

WARNING Please read these safety warnings 

Fire & Electric Shock Hazard: Do not expose your speaker to liquid, moisture, humidity, or rain. Do not drop, disassemble, open, paint, or insert foreign objects into the speaker. Do not expose the speaker to extremely high or low temperatures; or leave the speaker in direct sunlight for extended periods of time; or leave the speaker near open flames such as cooking burners, candles, or fireplaces. Allow for ventilation around the speaker.

Battery/Charging Hazard: Do not dispose the speaker in a fire as the battery could explode causing injury. Only charge the speaker in accordance with this User Manual. Do not charge the speaker in damp areas or extremely high or low temperatures.

Caution: Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker. Do not use abrasive cleaners to clean the speaker because this could scratch or damage the unit. Clean the speaker with a dry cloth.

Do not insert anything into the speaker unless otherwise specified in this User Manual, as this may damage the internal components. Do not attempt to repair, modify, or disassemble the speaker yourself. Do not attempt to replace the battery of the speaker, as it is built-in and not user changeable. Use only the AC adapter or USB charging cable supplied to charge the speaker. Other chargers may look similar, but using them could result in electric shock and damage the speaker.

FCC Notice: This device complies with part 15 of the FCC Rules and this device may not cause harmful interference and must accept any interference received, including interference that may cause undesired operation.

FULL ONE-YEAR MANUFACTURERS WARRANTY
See Website for Details. Made in China

 
honeycombsound.com



Honeycomb Sound
Bluetooth® Wireless
Speaker System


USER MANUAL

STYLISH * SIMPLE * SWEET

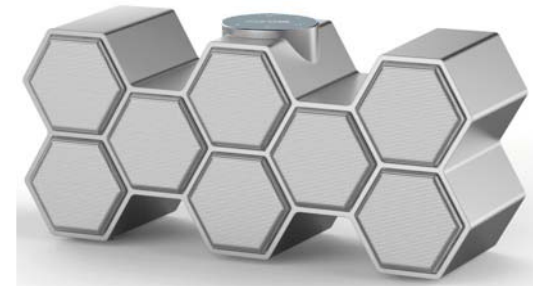

MODEL WS-702



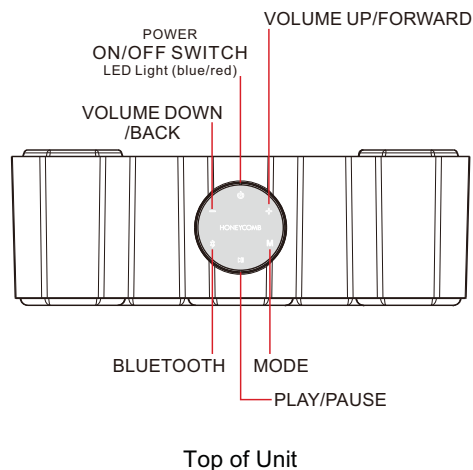 


Top of Unit

Pairing with Bluetooth®

1. Make sure the speaker is charged.
2. Enable Bluetooth® on device (iPhone, iPad, tablet) & make sure the device is visible or discoverable.
3. **Power on** the *Honeycomb Speaker* by Pressing & Holding ON/OFF SWITCH for about 3 seconds till LED blue light is on. You will also hear a chime tone.
4. After turning on *Honeycomb Speaker*, LED light will keep blinking indicating the speaker is in *pairing mode*.
5. On your device, choose *add new Bluetooth® device* or *setup Bluetooth® device*. It will search for the *Honeycomb Speaker*.
6. Your Bluetooth® device will discover & list possible names. Select the name "Honeycomb." This will make a connection & lock in with audible chime.
7. If the pairing attempt fails or times out (about 3 minutes), restart both devices and start the process again (steps 2-6).
8. If you need to pair with another Bluetooth® device or disconnect, press & hold the BLUETOOTH button for 3 seconds, wait for the chime tone, & then pair with new device or change Mode.

 Note: Speaker will automatically power-off after 15 minutes of inactive use.

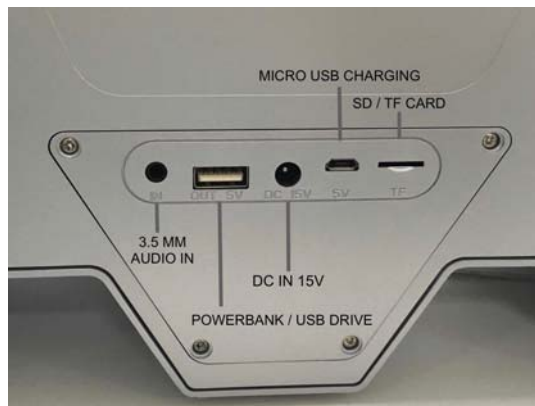

Back of Unit

Charging Your Speaker

Before first use, or when the battery runs out, please charge the speaker with the included AC Adapter. Assemble 2-piece AC Adapter & Insert barrel-end plug to DC IN 15V on back of unit. The battery will be fully charged when the red LED light (top of unit) has turned **off**. Charging time is about 3 hours with AC Adapter. Battery power time is 6-14 hours (max to min volume) with Bluetooth® You can also charge the unit with the supplied USB Charging Cable by connecting your PC to MICRO USB CHARGING port on back of unit, although this is a very slow charge. ONLY USE THE SUPPLIED AC POWER ADAPTER.

Line-In Audio 3.5mm Cable

For direct wired connections from devices such as MP3 (iPod), iPhone, TV, PC, Gaming Console, connect included 3.5mm cable (3 ft. length) from device output to 3.5MM AUDIO IN on back of unit. Optional 3.5mm to RCA cable may be required.

Press Once the M (MODE) button & the *Honeycomb Speaker* will find the device. You should be able to control volume & tracks directly on your device. The Speaker will only control the volume by pressing +/- buttons. Press PLAY/PAUSE to mute.



AC Adapter

USB Charging

3.5mm cable

3.5 to RCA (not included)

Controlling Your Music

Once the speaker is connected to a Bluetooth® device (phone, tablet, PC, laptop, etc.), you have several options to control your music. Most Bluetooth® devices allow you to control the volume and track selection directly on the device. To control these functions on the *Honeycomb Speaker*:

Press & Hold the "+" and "-" button to increase or decrease the volume of the speaker. Speaker chimes at max volume. Press Once the "+" and "-" button to move forward or backward on track selections. Press Once the PLAY/PAUSE button to start or pause songs.

Micro SD/TF Card & USB Flash Drive

Insert a Micro SD/TF Card or USB Flash Drive into slot for SD/TF or USB DRIVE in back of unit. Press M (MODE) & the *Honeycomb Speaker* will sense input automatically. Control music as Bluetooth®

Power Bank

The Speaker can serve as a Power Bank for charging phones & other devices. Attach USB cable from device to POWERBANK input on back of unit.

FCC Caution.

1.This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2.Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.