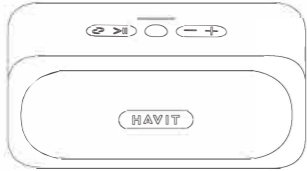 
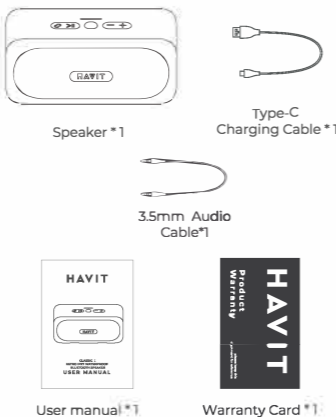 
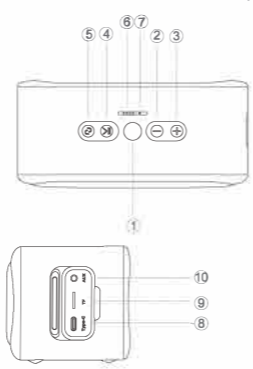 
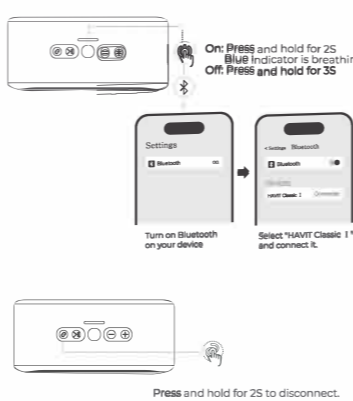 

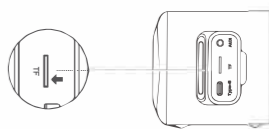 
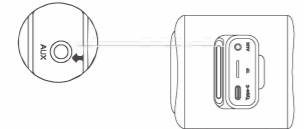 
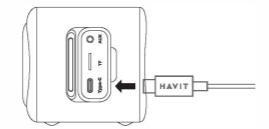 





front side
正面

 <p>HAVIT</p> <p>SK905BT BLUETOOTH SPEAKER USER MANUAL</p>	<p>Package Content</p>  <p>Speaker *1 Type-C Charging Cable *1 3.5mm Audio Cable*1 User manual *1 Warranty Card *1</p>	<p>Product Overview</p> <ol style="list-style-type: none"> Power button Volume down/ Previous song Volume up/ Next song Play/Pause TWS button Charging indicator Bluetooth indicator Charging port TF card port Aux in port 	<p>Power on/Connection</p>  <p>On: Press and hold for 2S Blue Indicator is breathing Off: Press and hold for 3S</p> <p>Turn on Bluetooth on your device Select "HAVIT Classic 1" and connect it.</p> <p>Press and hold for 2S to disconnect.</p> <p>Note The speaker will be automatically connected to the last paired device as soon as you turn it on.</p>	<p>TWS dual devices Connection</p> <ul style="list-style-type: none"> Turn on two speakers and not connect to your device. Press TWS button of any one speaker once, Red and blue indicator lights flash while waiting for pairing. And there are 2 voice prompts. After 2nd prompt, both speakers are paired each other. Turn on Bluetooth of your device and select "HAVIT Classic 1" to connect. <p>Now your device is connected to two speakers.</p> <p>Function</p> 	<table border="1"> <tr> <td>Power on/off</td> <td></td> <td>Press and hold for 2S</td> </tr> <tr> <td>Mode Switch</td> <td></td> <td>Press once</td> </tr> <tr> <td>Play/Pause</td> <td></td> <td>Press once</td> </tr> <tr> <td>Answer/End the call</td> <td></td> <td>Press once</td> </tr> <tr> <td>Reject the call</td> <td></td> <td>Press and hold for 2S</td> </tr> <tr> <td>Last number redial</td> <td></td> <td>Press twice</td> </tr> <tr> <td>TWS pairing</td> <td></td> <td>Press once</td> </tr> <tr> <td>TWS disconnect</td> <td></td> <td>Press once</td> </tr> <tr> <td>Bluetooth disconnect</td> <td></td> <td>Press and hold for 2S</td> </tr> <tr> <td>Clear Bluetooth pairing</td> <td></td> <td>Press and hold for 8S</td> </tr> <tr> <td>Voice assistant</td> <td></td> <td>Press twice</td> </tr> <tr> <td>Previous song</td> <td></td> <td>Press and hold for 2S</td> </tr> <tr> <td>Volume down</td> <td></td> <td>Press once</td> </tr> <tr> <td>Next song</td> <td></td> <td>Press and hold for 2S</td> </tr> <tr> <td>Volume up</td> <td></td> <td>Press once</td> </tr> </table>	Power on/off		Press and hold for 2S	Mode Switch		Press once	Play/Pause		Press once	Answer/End the call		Press once	Reject the call		Press and hold for 2S	Last number redial		Press twice	TWS pairing		Press once	TWS disconnect		Press once	Bluetooth disconnect		Press and hold for 2S	Clear Bluetooth pairing		Press and hold for 8S	Voice assistant		Press twice	Previous song		Press and hold for 2S	Volume down		Press once	Next song		Press and hold for 2S	Volume up		Press once	<p>Mode switch Insert TF card or audio cable to the speaker then you can press power button to switch different mode by turn.</p> <p>TF/SD card mode Insert a card to the speaker and it can play music automatically.</p> 
Power on/off		Press and hold for 2S																																																	
Mode Switch		Press once																																																	
Play/Pause		Press once																																																	
Answer/End the call		Press once																																																	
Reject the call		Press and hold for 2S																																																	
Last number redial		Press twice																																																	
TWS pairing		Press once																																																	
TWS disconnect		Press once																																																	
Bluetooth disconnect		Press and hold for 2S																																																	
Clear Bluetooth pairing		Press and hold for 8S																																																	
Voice assistant		Press twice																																																	
Previous song		Press and hold for 2S																																																	
Volume down		Press once																																																	
Next song		Press and hold for 2S																																																	
Volume up		Press once																																																	
<p>Aux in mode</p> <p>Connect the speaker to a music player/mobile via 3.5mm audio cable (provide as accessory) and the music can be played automatically.</p>  <p>* Pressing speaker button to change songs is not available when it is in Aux in mode.</p>	<p>Charing</p> <p>Charge the speaker with type C charging cable, preferably from any PC or laptop as compared to a USB charger.</p>  <p>Charging: Four white indicator is breathing. Full charged: Four white indicator is on.</p> <p>Reset</p>  <p>Press TWS button and hold for 8S until the speaker is off. Reset is done. You can turn on again to connect to the device.</p>	<p>Safety Tips</p> <ol style="list-style-type: none"> Please follow the instruction to operate the product. Please charge the product with input power below DC 5V/2A to protect the battery Do not immerse this product in any liquid or splash any liquid on this product Please store or use the product in a normal temperature environment. Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments as it is not anti-high temperature. Do not jam the ports of the product, such as charger port, LED port and TF card port In order to protect your hearing and extend the product lifetime, it is not recommended to adjust the volume to the maximum level for a long time. 	<p>Batteries:</p> <p>A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.</p> <ol style="list-style-type: none"> Replacement of a battery with an incorrect type that can defeat a safeguard. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas. 	<p>Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver.</p>	<p>—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.</p> <p>FCC Radiation Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> 	 <p>www.havitsmart.com</p>																																													

back side
反面

材质: 128g双铜纸 双面印刷, 风琴折

印刷色号(Printing color number): C:0 M:0 Y:0 K:70

尺寸(Size): 55 X 77 mm