
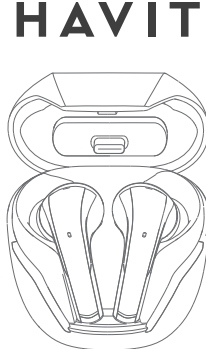
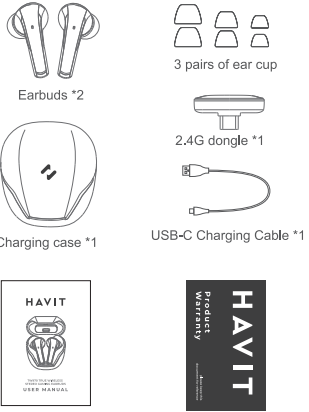


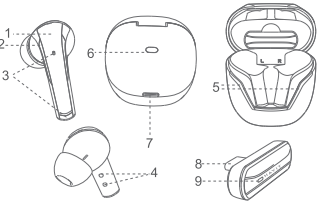

封面

front side  
正面

back side  
反面

封底

 <p><b>HAVIT</b></p> <p>TW970 TRUE WIRELESS STEREO GAMING EARBUDS <b>USER MANUAL</b></p>	<p><b>Product and accessories</b></p>  <p>Earbuds *2 3 pairs of ear cup Charging case *1 2.4G dongle *1 USB-C Charging Cable *1 User manual *1 Certificate of quality *1</p>	<p><b>Description of product structure</b></p>  <ol style="list-style-type: none"> <li>MFB button(Touch panel)</li> <li>Earbuds RGB indicator</li> <li>Microphones</li> <li>Earbuds charging pins</li> <li>Case RGB indicator</li> <li>Reset button</li> <li>Case charging port(USB-C)</li> <li>2.4G dongle(USB-C)</li> <li>Dongle LED indicator</li> </ol> <p><b>Wearing method</b></p>  <p>Choose a pair of ear cup that fits your ears best firstly, then gently insert the earbuds into the ear and adjust the appropriate comfort.</p>	<p><b>Basic function</b> *Please remove the protective film of earbuds and charge the case fully for the first time usage.</p> <p><b>01 Power on, connect via wireless (Wireless mode)</b> ---Follow the steps (please confirm that your phone is built-in wireless function) Power on: Opening the lid of charging case, the earbuds will turn on automatically. The earbuds enter the pairing mode automatically. Turn on wireless on your device and select "HAVIT TW970" referring to your phone instructions. The earbuds RGB indicator will change from flashing to steady effects if the earbuds successfully paired. Pairing mode would just last 3 minutes. If you miss the pairing time, you need to restart the device and operate follow the procedural steps mentioned above.</p> <p>*Note: a). HAVIT TW970 remembers previously connected devices. When turned on, earbuds attempts to reconnect to previously connected devices.</p>	<p>b). HAVIT TW970 will disconnect when deviate the working range of wireless. The earbuds will reconnect automatically if you come back to the range in 3 minutes.</p> <p><b>02 Power on, connect via 2.4G dongle (2.4G dongle mode)</b> Power on: Opening the lid of charging case, the earbuds will turn on automatically. Then plug the 2.4G dongle into a USB-C port on your device, such as PC, Nintendo Switch controller. The dongle LED indicator will turn on steady white if works successfully. The earbuds connect to the dongle automatically and the earbuds RGB indicator will change to red&amp;yellow when connect successfully. With a USB-C to USB-A converter (not supplied), you can connect the 2.4G dongle to a USB-A port on your device, such as PC or game controller.</p> <p><b>03 Power off</b> Put the earbuds into the charging case and close the lid of case, they will automatically shut off.</p>	<p><b>04 Answer incoming call (wireless mode &amp; 2.4G dongle mode)</b> Double press the left or right MFB button to answer incoming call.</p> <p><b>05 End the call (wireless mode &amp; 2.4G dongle mode)</b> Double press the left or right MFB button to end the current call. Note: You may can't end a call via earbuds' operation, please use your phone for related operations. Some devices may be incompatible with wireless dongle. This is not a malfunction.</p> <p><b>06 Decline incoming call (wireless mode only)</b> Long press left or right MFB button for 2s to decline a call. *Note: TW970 doesn't support decline a call at 2.4G dongle mode.</p> <p><b>07 One key for voice assistant (wireless mode only)</b> Both earbuds work: Long press 2s the left or right MFB button to activate voice assistant. Single earbud work: Long press 2s the MFB button of working earbud to activate voice assistant.</p>	<p><b>08 Mute/ Unmute the earbuds (2.4G dongle mode only)</b> During playing in 2.4G dongle connection, hold the MFB button on either earbud for 3 seconds to mute or unmute the microphone. The earbuds will exit the mute mode after reboot.</p> <p><b>09 Music playing (wireless mode &amp; 2.4G dongle mode)</b> 1. Play/Pause: Double press the left or right MFB button. 2. Previous song: Triple press the left MFB button. 3. Next song: Triple press the right MFB button. *Note: If only one earbud works, triple press left or right MFB button to switch to next song.</p> <p><b>10 Charge the case</b> Charge the case using the USB-C cable connected to a computer or wall charger. When the case is charging, the case RGB indicator turn steady blue, and it turns off when the charging case is fully charged or when the power is cut off.</p>
 <p>www.havitsmart.com</p>	<p><b>11 Charge the earbuds</b> The earbuds make a warning tone to warn low power. Please put the earbuds to the case to charge.</p> <p><b>12 Mono mode (take out any earbuds as a unilateral wireless earbud)</b> (note: single channel mode only needs to remove one of earbuds from the charging box; If two earbuds are removed before connection, the earbud will be used in TWS mode by default, and the TWS connection will be automatically realized.) 1. Take out one earbud from charge case, the earbuds automatically turn on and reconnect to previous connected devices; 2. Switch from one earbud to the other earbud when playing music, taking out the other earbud from the charging case and these two earbuds will connected automatically. Both earbuds will play music automatically and then put the earbud which do not need anymore into the charging case and the switching process completes; (note: Call mode is applicable) 3. Please refer to the TWS mode for more functions.</p>	<p><b>13 Dongle Storage</b> Get the earbuds out of the case first, and then get the dongle from the inner front lid of the case.</p> <p><b>14 Switch the RGB effects of case</b> Open the lid of the case and short press the reset button to change the RGB effects. There are 9 styles of RGB indicator.</p> <p><b>15 Dual device connection</b> This function allows you to answer a call when playing game quickly and easily. Ensure that your earbuds are connected to your mobile phone through wireless and to your PC/Nintendo Switch controller through 2.4G dongle at the same time. When you are playing games on your PC/Nintendo Switch controller with the earbuds, if there is an incoming call to your mobile phone, the game audio will be interrupted by the ring tone. You can double press the MFB button on either earbud to answer / hang up the call. When the call end, the game audio will recover.</p> <p><b>16 Factory Reset</b> If the earbuds can't pair frequently, please</p>	<p>reset your earbuds. Put both of the earbuds into charging case and close the cover. Open the case again, press the reset button for 3 seconds within 3 minutes, the earbuds RGB indicator will flash alternately for 3 seconds. Then the earbuds will enter the pairing mode again, search the "HAVIT TW970" wireless pairing name with the mobile phone and connect again.</p> <p><b>Specification</b> Wireless Version: V5.3 Working Range via wireless mode: 10m (without obstacles) Working Range via 2.4G dongle mode: 6m (without obstacles) Earbuds Battery: 45mAh Charging Case Battery: 400mAh Play Time: 6h (wireless mode, 60% Vol., RGB off) Play Time: 3h (2.4G dongle mode, 60% Vol., RGB on) Talk time: 4h (wireless mode, 60% Vol., RGB off) Case Charging Time: 2.0h Speaker size: Φ13mm*2 Speaker Frequency: 20Hz~20kHz Input Voltage / Current: DC 5V/1A</p>	<p>USB Port: USB-C</p> <p><b>Warnings</b> 1. Please follow the instruction to operate. 2. Please charge the earbuds with input power below 5V/1A, in order to protect the battery. 3. Please store or use the earbuds in a normal temperature environment. 4. Please do not use this product near the water. Do not immerse this product in any liquid or splash any liquid on this product. 5. Please keep the earbuds from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti high temperature. 6. Don't jam the ports of the earbuds, such as charger port, LED port and microphone etc.. 7. In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time. 8. Whatever reasons damage the earbuds, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.</p>	<p>9. Technical specifications are subject to change without prior notice. 10. Compatibility with all USB-C or USB-A ports is not guaranteed.</p> <p><b>FCC Warning</b> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a</p>	<p>particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>TWS FCC ID: 2A16I-TW970 Dongle FCC ID: 2A16I-TW970D</p>

材质: 128g双铜纸双面印刷, 风琴折

印刷色号(Printing color number): C:0 M:0 Y:0 K:70

尺寸(Size): 55 X 77 mm