




KARAOKE BT MICROPHONE


User Manual

*Please read this manual carefully before operating the appliance and save it for future reference.

PACKAGE CONTENTS

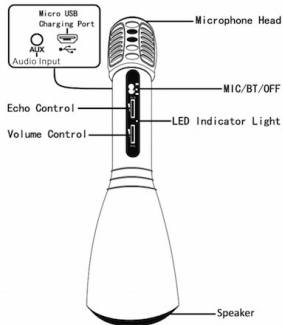

Accessories

 

Karaoke Speaker Charging

This Karaoke Speaker has built-in rechargeable battery, before the first use, the battery shall be fully charged to ensure optimal performance and battery life.

Connect the charging cable to any powered USB port (output 5V 1A) and to the Micro USB jack behind the Karaoke speaker. Make sure it is plugged in fully. Charge the Karaoke Speaker for about 4 hours. The red charging indicator light will be "on" while it is charging, it turns off when fully charged.

Note: Do not use or turn on the Karaoke Speaker while charging.

How to Use

*Karaoke speaker must be paired to a Bluetooth device before use. It is only necessary to pair Karaoke Speaker once with each device.

- Turn on Karaoke Speaker by pushing the button to "BT" (Push the button to "OFF" to turn off the Karaoke Speaker). The blue indicator light turns on and flash.
- Turn on Bluetooth function on the music player device you wish to pair (i.e. iPod/iPhone, mobile phone or compatible device). Some device requires you to select "Search for Devices" or "Add New Device" in order to create a Bluetooth pairing.
- Select "GIZMO" on your device. Once pairing is complete and a connection is established, the blue LED light will stay on and you will hear a beep.
- Select "MIC" to enter Karaoke mode. Adjust the echo("ECH") and volume ("VOL.") controls to the desired levels.
- Now you can play music and start to sing!

Notes:

- Once the Bluetooth is turned on, it will automatically connect with the last paired. If unsuccessful please repeat step2 (above).
- If you only need to listen to the music, just switch to "BT" mode.

Status	Light
Device ON	BLUE light on for 5 second
Connect Mode	BLUE light blinks
Connection Success	BLUE light always bright
Low Voltage	RED light blinks
Charge Mold	RED light ON while charging, RED light off when charging is completed

SPECIFICATIONS:

Bluetooth Version	3.0
Bluetooth Profiles Supported	A2DP, AVRCP
Frequency Response	100Hz to 10KHz
Operation Range	10M (30ft)

SAFETY AND CARE

- When not in use, turn the Karaoke Speaker off and store in a cool, dry place. Battery performance will be severely decreased when stored in extreme temperatures, including direct sunlight.
- Clean with a soft, dry or slightly damp cloth. Never use chemical cleaners.
- This product has no user-serviceable parts. Do not attempt to repair to avoid permanent damage.
- Do not place on any wet surface.
- Do not use this device near water.
- Do not drop the product on hard surface. Doing that may result damage of the product.
- Press function button gently, press too hard might shorten life time of function.
- Do not cover the unit with any table-clothes, curtains, etc. Place the unit where there is good air circulation.
- Do not place unit near TV, speakers, wireless telephones and other objects that generate strong magnetic fields.
- Do not expose the headphones to liquids. If the device comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the device on.
- Do not use around flammable gasses as fire or explosion may occur.

WARNING

Using Karaoke Speaker at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all time for your safety. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level

TROUBLESHOOTING:

Error	Reason	Solution
Indicator light is not lit when charging	Battery has run out or charging cable is not connected properly	Charge Karaoke Speaker, re-connect the charging cable
Karaoke Speaker has no sound	Karaoke Speaker is powered off, or the volume is turned down	Ensure "MIC" is selected, and/or turn up the volume
Background noise when singing or playing	Environment noise or mobile device signal interference.	Chose a quiet place, put Karaoke Speaker and mobile device within the operational distance of 10M
Under BT mode, music plays intermittently	The distance between Karaoke Speaker and device is too far. Obstacle between Karaoke Speaker and device	Reduce the distance and/or avoid obstacle.
Bluetooth fails to connect	The distance between Karaoke Speaker and device is too far. Obstacle between microphone speaker and device. Or connected with another device.	Reduce the distance, avoid obstacle, or disconnect with the other device.
Music distortion under BT mode	Volume is too high, or Karaoke Speaker has low battery	Turn down device volume, or charge Karaoke Speaker.

FCC STATEMENTS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: unauthorized use of the product may cause damage or injury.

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.*

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



CAN ICES-3 (B), FCC ID :2A188-1126882
 Product Made in China for Pottery Barn Teen