



**Emily & Meritt**

**For**

**PB Teen**

**THE BUNNY SPEAKER USERMANUAL**



**Model No.**

**SKU No.**

## Package includes



1\* Bluetooth Speaker



1\* Audio Cable




1\* User Manual



1\* USB Charger

## Product diagram

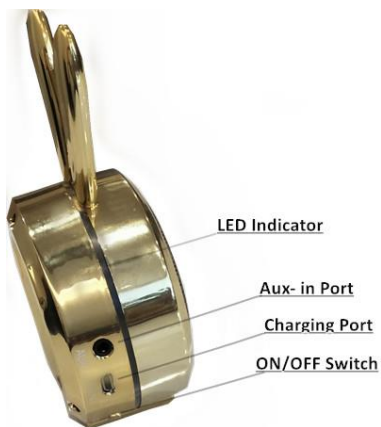

Please read this user manual carefully before operating the appliance and save it for further reference.




### **Instruction**

Congratulation, and thank you for choosing the Bluetooth Wireless Speaker. This manual will help you operate the Bluetooth wireless Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Bluetooth wireless Speaker.

### **Safety Rules**

- \* Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth speaker, we would strongly encourage you to read through this user manual.
- \* Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- \* Do not modify, repair or dismantle this Bluetooth speaker. Doing so may result in fires, electric shocks, complete etc. All of which, are not covered under warranty.
- \* Do not use any diluents or volatile liquid to clean the Bluetooth speaker.
- \* Do not use the Bluetooth speaker in a hazardous location.

### **General Functions**

<b>Desired Result</b>	<b>Required Action</b>
Turn on & Enter the pairing mode	Switch the ON/OFF button to " ON " to turn speaker on (Blue LED quickly flash alternately with two beep tone voice)
Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)
Play/ Pause	Press to play when the device is pausing and press to pause when the device is playing.
Turn off	Switch the ON/ OFF button to " OFF "to turn speaker off.
Low battery warning	( The LED flash)
Charging	USB the charger to  port of the device. (Red LED is on)
Answer/ End phone call	Press  to answer phone call, Press  again to end call.

### **Pairing to mobile or other device**

To use your Bluetooth Speaker, you must first pair your speaker with a phone or a computer. Once your Bluetooth Speaker is paired to a specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.



### **Pairing to a phone and Entertainment**

- \* Turn on your phone and ensure its Bluetooth function is activated.
- \* Turn on the speaker go to the pairing mode.
- \* Search your Bluetooth devices on your phone by following the phone's instructions. Refer to your phone's user manual for more information.
- \* After a few seconds the phone will list the " PB Bunny" as a discover device. Select it and follow your phone instruction to select this pairing.
- \* Your phone will confirm the pairing, and then press Yes/OK.
- \* Finally, the pairing is successful.
- \* You can play music, watch TV/ movie and play games with your phone, then you can hear all the sound or music from the speaker.

### **Pairing to a computer and Entertainment**

- \* If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.
- \* Turn on the speaker go to the pairing mode.
- \* Open the Bluetooth software installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.
- \* After a few seconds the "PB Bunny" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same operation.
- \* Open your media player soft to play music, watch TV/ move and play game, then all the sound will be playback on your speaker.

### **Charging your speaker**

The speaker is convenient to connect to a USB charger with Micro USB port marked with . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to USB port of PC and other terminal to Micro USB jack . While charging the red LED light stays lit. When charging is completed, the LED turns off.



#### **Warning:**

- \* You must select a qualified charger from a regular manufacturer.
- \* You must charge the Bluetooth Speaker if it has not been used for more than 12 months.

### **Technical specification**

Parameter	Value
Bluetooth specification	3.0
Bluetooth Profile	A2DP, AVPCP, HFP, HSP, GAVDP IOP
RF Range	≤10m
Frequency Response	160Hz- 20KHz

Parameter	Value
Loudspeaker Output	3W
Signal- To- Noise	75dB
Distortion	≤1.0%
Playback Time	3-5 hours
Charging Times	1-2 hours
Dimensions (L*W*H)	67mm*29mm*140mm
Weight	95g

### **FAQ**

1. Why is there no power even when the Speaker is power on?

Ans: Ensure the battery is being charged up to 6 hours for first time using. The LED is red when it starts charging.

2. There is no sound when playback.

Ans: Check the connection between speaker with phone or computer, if the connection is not established, please connect again. Make sure the speaker is paired and connected with your target phone or other master device.

### **FCC statement**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication.

However, there is no guarantee the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/ TV technician for help.

FCC ID:

Model #:

SKU: 2071134,

Date Code: 1116

Bluetooth ID:

Bluetooth is a registered trademark.

FCC ID:

### **Specifications**

Driver: 50mm

Impedance: 4 Ohms

Battery: 400mAh, Li-ion

Power Input: 5V

Power Output: 3W

Bluetooth Range: 10 meters

### **ELECTRICALLY OPERATED PRODUCT**

Caution: Choking Hazard, May contain small parts.

Not for children under 3 years of age.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received including interference that may cause undesired operation.

### **Important Safety Instructions**

- \* Read these instructions.
- \* Keep these instructions.
- \* Heed all warnings.
- \* Follow all instructions.
- \* Do not use this speaker near water.
- \* Clean only with dry cloth.
- \* Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- \* Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.)
- \* Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- \* Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the speaker.
- \* Only use attachments/ accessories specified by the manufacturer.
- \* Use only with the art, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- \* Unplug this speaker during lightning storms or when unused for long periods of time.
- \* Refer all servicing to qualified service personnel. Servicing is required when the speaker has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the speaker, the speaker has been exposed to rain or moisture, does not operate normally, or has been dropped.