 
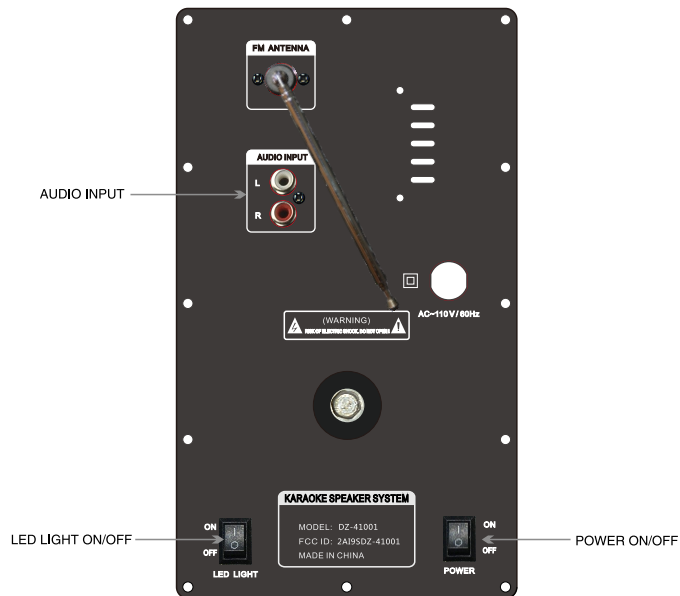 


## SPEAKER

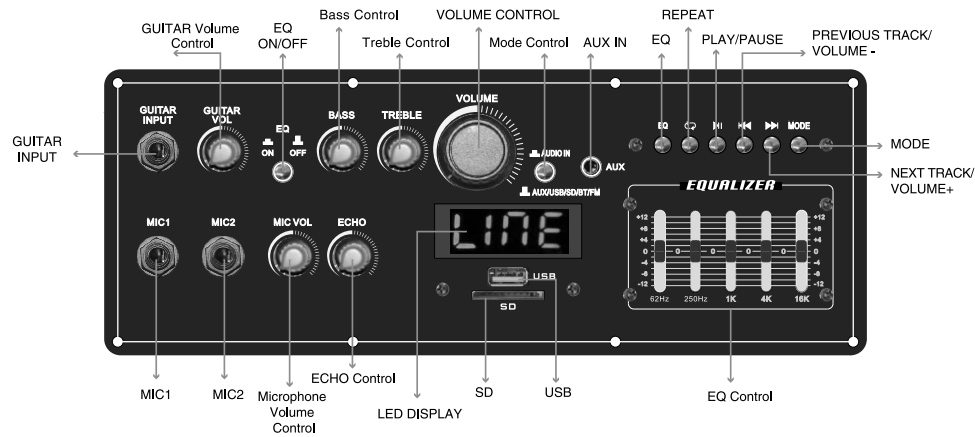

Copyright © Lakshmi International, Inc., 2016-2017

All Rights Reserved

This publication is protected by copyright and all its rights reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Lakshmi International, Inc.

 
The information in this publication has been carefully checked and is believed to be accurate. However Lakshmi International Inc., assumes no responsibility for any inaccuracies, errors, or omissions that may be contained in this document.

In the interest of continued product development, Lakshmi International, Inc. reserves the right to make improvements in its documentation and the products it describes at any time, without notice or obligation.

# WIRELESS KARAOKE SPEAKER

## USB/SD/FM RADIO

MODEL : DZ-41001

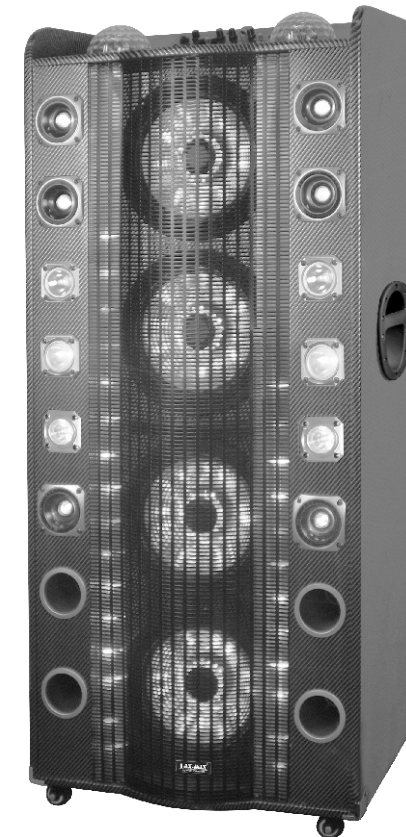

Congratulations on purchasing the Lax-Max Wireless Karaoke Speaker  
Please read this Instruction manual prior to using this unit.

## Features

- FM Radio
- USB/SD slot Plays MP3 Files stored in your SD Card or USB Disk Drive
- AUX IN to connect to External Audio Players (ipod®/iphone®/ipad®/smartphones etc.)
- AC cable included

### Power supply for Unit

- Connect the supplied cable to AC power cord, one end to unit and other end to AC socket
- Use On/Off button to switch power ON/OFF on unit

### Wireless Mode

- Short press “Mode” button to switch between Wireless / USB / SD /FM / AUX
- On your smartphone, scan and select “DZ-41001” to pair
- Sound quality will depend on quality of your media file or distance of smartphone from speaker ( Distance should NOT be more than 30Ft) or There should be no object blocking the Wireless Signal
- To control volume by rotate the knob“Volume –” or Long Press “|◀◀” (volume down); Rotate the knob “Volume +” or Long press “▶▶|” (volume up)
- To change tracks Short Press “|◀◀”(Previous Track) or “▶▶|” (Next Track)
- To Pause or Release Pause Short Press “▶||”

### USB / SD

- Plug in your USB Disk or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY and correct mode has been selected
- Short press “M” (Mode) button to switch between Wireless / USB / SD /FM / AUX. Please ensure that your files are MP3 format, or correct source has been selected
- To control volume by rotate the knob“Volume –” or Long Press “|◀◀” (volume down); Rotate the knob “Volume +” or Long press “▶▶|” (volume up)
- To change tracks Short Press “|◀◀”(Previous Track) or “▶▶|” (Next Track)
- To Pause or Release Pause Short Press “▶||”
- Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card

### FM Radio

- Short press “Mode ” button to switch between Wireless / USB / SD /FM / AUX. Please ensure that correct source has been selected.
- To control volume by rotate the knob“Volume –” or Long Press “|◀◀” (volume down); Rotate the knob “Volume +” or Long press “▶▶|” (volume up)
- Short Press “SCAN” to Auto Scan and preset available frequencies
- To switch between preset frequencies Short Press “|◀◀” or “▶▶|” .

### Aux (Line In)

1. Plug in external device to Aux jack(Aux cable is included).
2. Short press “Mode” button to switch between Wireless / USB / SD /FM / AUX. Please ensure that correct source has been selected
3. To control volume by rotate the knob“Volume –” or Long Press “|◀◀” (volume down); Rotate the knob “Volume +” or Long press “▶▶|” (volume up)
4. Short Press “🔇” to mute
5. Tracks can only be changed from your connected external device

### Karaoke Function

- Take your wireless Mic. (included) and plug into Mic input jack of your speaker. You may now use the karaoke feature

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc.  
All other Trademarks & Trade Names belong to their respective owners.

## **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.