

Continental
collezione[®]
Professional Series[®]

Mug/Candle Warmer with Bluetooth Speaker

Operating and Safety Instructions



- FOR HOUSEHOLD USE ONLY -

IMPORTANT SAFEGUARDS

Appliance Specifications:

Model: CP-SA01#; CZ-SA01#

Rated: 120 Volts, 60 Hz, 20W

USB port current rating: 1A

CE North America LLC

6950 North West 77th Court, Miami, FL 33166, USA

Before operating your new appliance, please read all instructions carefully and for future reference

IMPORTANT SAFEGUARDS

- 1 **Read all instructions before using**
- 2 Do not touch the hot surfaces. Use handles or knobs
- 3 To protect against electrical shock and affecting the function, do not immerse the appliance, body, cord, or plug in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before Putting on or taking off parts, and before cleaning the appliance
- 6 Do not operate Buffet Server with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination repair or adjustment
- 7 The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries
- 8 Do not use outdoors
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces
- 10 Do not place the appliance in the presence of explosive and /or flammable fumes
- 11 Do not move the appliance when the appliance is contained with food, hot oil or other hot liquids
- 12 Do not use the appliance for other than intended use
- 13 To disconnect, turn the knob to "0", then remove plug from wall outlet
- 14 Be sure to use on a heat resistant and even surface. Keep at least 15 cm away from walls and other flammables
- 15 Notice that the tray only can put food or liquid at the 2/3 of capacity
- 16 Turn the thermostat knob to the "0", the appliance stopping working
- 17 Before the appliance stops working, the heater surface keeps warm a long time. Do not touch the surface before cooling
- 18 Do not operate the appliance without any things, or else the body is easy to change shape
- 19 **CAUTION: TO REDUCE THE RISK OR ELECTRIC SHOCK, COOK ONLY IN THE PROVIDED REMOVABLE CONTAINER**
- 20 **CAUTION-Hot surface**
- 21 **CAUTION: to ensure continued protection against risk of electric shock, connect to properly grounded outlets only**
- 22 when the appliance provided with a flexible cord less than 4-1/2 feet (1.4m) in length, the extension cord should be a grounding-type 3-wire cord and meet the following requirements:
 - 1) a short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord
 - 2) longer extension cords are available maybe used if care is exercised in their use.
 - 3) If a longer extension cord is used:
 - a) the marked electrical rating of the extension cord should be as great as the electrical rating of the appliance
 - b) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally

This appliance is intended for Household Use Only

SAVE THESE INSTRUCTIONS

SÉCURITÉ IMPORTANTES

AVERTISSEMENT: Lors de l'utilisation d'appareils électriques, les précautions de sécurité de base doivent toujours être suivies, inclure les précautions suivantes:..

1. Lire toutes les instructions avant l'utilisation..
2. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons..
3. Afin de protéger contre les chocs électriques, ne pas immerger le cordon, la fiche ou le connecteur dans l'eau ou autre liquide..
4. Une surveillance étroite est nécessaire quand l'appareil est utilisé par ou près des enfants..
5. Débrancher l'appareil quand il n'est pas en fonction et avant le nettoyage. Laisser l'appareil refroidir avant de mettre ou d'enlever des pièces et avant le nettoyage..
6. Ne pas faire fonctionner l'appareil avec un cordon ou une prise endommagée ou après un dysfonctionnement ou des endommagements de l'appareil. Retour l'appareil au centre de service agréé le plus proche pour l'examen, réparation ou réglage électrique ou mécanique..
7. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peuvent provoquer des blessures ou des endommagements de l'appareil..
8. Ne pas utiliser à l'extérieur. POUR USAGE DOMESTIQUE SEULEMENT..
9. Ne pas laisser le cordon suspendre sur le bord de table ou d'un comptoir, ou toucher des surfaces chaudes, y compris la cuisinière..
10. Ne pas placer l'appareil en présence de vapeurs explosives et / ou inflammables..↓
11. Ne déplacez pas l'appareil lorsque l'appareil est contenu avec de la nourriture, l'huile chaude ou autres liquides chauds..↓
12. Ne pas utiliser l'appareil que pour l'usage prévu..↓
13. Pour débrancher, tournez le bouton sur "0", puis retirer la fiche de la prise murale..↓
14. Veillez à utiliser sur un résistant à la chaleur et même surface. Gardez au moins 15 cm des murs et les produits inflammables autres..↓
15. Notez que le plateau ne peut mettre de la nourriture ou de liquide à la 2 / 3 de capacité..↓
16. Tournez le bouton du thermostat sur "0", le fonctionnement d'appareils de freinage..↓
17. Avant de l'appareil cesse de fonctionner, la surface chauffe garde au chaud depuis longtemps. Ne touchez pas la surface avant de le refroidir..↓
18. Ne pas faire fonctionner l'appareil sans aucune des choses, ou bien le corps est facile de changer de forme..↓
19. ATTENTION: POUR REDUIRE LE RISQUE DE CHOC ÉLECTRIQUE OU, cuire que dans le contenant fourni AMOVIBLE..↓
20. ATTENTION-surface chaude..↓
21. ATTENTION: afin d'assurer une protection continue contre le risque de choc électrique, connectez prises correctement mise à la terre..
22. lorsque l'appareil fourni avec un cordon souple moins de 4-1/2 pieds (1,4 m) de longueur, la rallonge doit être un type terre à 3 fils du cordon et répondre aux exigences suivantes:..
 - (1) Un court cordon d'alimentation détachable doit être fournie pour réduire les risques résultant de l'enchevêtrement ou du trébuchement sur un cordon plus long..
 - (2) Des cordons détachables d'alimentation plus longs ou des cordons d'extension sont disponibles et peuvent être utilisés s'il est nécessaire pendant l'utilisation..
 - (3) Dans le cas où un long cordon détachable d'alimentation ou un cordon d'extension est utilisé,..
 - a) La puissance électrique indiquée sur le cordon ou le cordon d'extension devrait être au moins aussi grande que la puissance électrique de l'appareil,..
 - b) Le cordon plus long doit être disposé de manière à ne pas reposer sur le dessus de comptoir ou de table où il peut être tirée par les enfants ou causer trébuchement par inadvertance..
- .. POUR USAGE DOMESTIQUE SEULEMENT..

CONSERVER CES INSTRUCTIONS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


CAUTION: Use only scented or fragranced jar candles in clear, glass jars. Do not use frosted, cracked, or damaged jar candles, and do not place bare, plastic, votive, tea light, or pillar candles on the product.

NOTE: This Candle Warmer is designed to let the wax in the glass jar melt slowly, allowing the fragrance to be released continuously. Using a jar candle larger than 3 inches wide and 2½ inches high is not recommended.

1. Plug the Power Cord into a standard 120-volt AC outlet.
2. Remove any attached lid from the jar candle, and then place the jar candle onto the Warming Plate.
3. To turn on, slide the Power Switch to the “ON” position. The Power Indicator will illuminate indicating that the heating element is on.

CAUTION: Do not touch the Warming Plate, jar, or wax while the product is in use as they will be hot.

4. To turn off, slide the Power Switch to the “OFF” position, and then unplug the Power Cord from the electrical outlet.

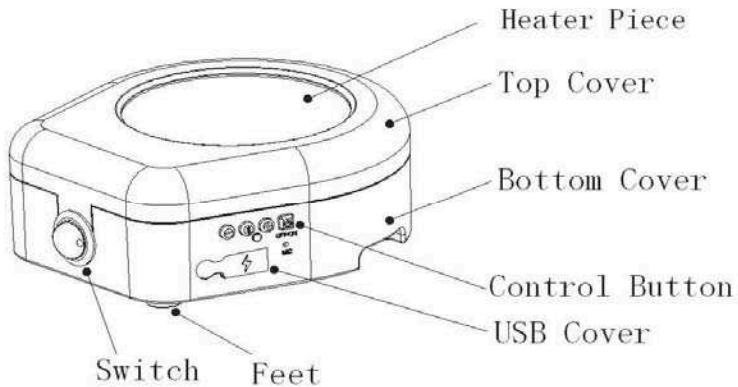

Bluetooth Function:

Turn unit on

.Press on / off button (4) for One Second.

Search for Bluetooth Signal:

.Press Bluetooth Button (2) for three seconds, the Bluetooth function is turned on.


.After the Bluetooth is turned on, the voice prompts “Bluetooth On”, and the Bluetooth search “LED” (6) flashes as a status indicator. Start mobile phone Bluetooth search mode. tap Bluetooth Speaker from the menu, Phone will be connected to Coffee Maker. After phone is paired, the Bluetooth Coffee Maker will automatically detect your phone after coffee maker is turned on or phone is brought in range. (Phone must have Bluetooth function on)

Play the song/music:

Open the music player in phone. Select desired song and press play on phone. To "Play or Pause music from coffee maker, press Bluetooth button (2). Short press "PREV / V-" button (1) to select the previous song, press and hold to reduce volume reduction; short press "NEXT / V +" button (3) to select the next song, press and hold to increase.

Telephone answering function:

When a call comes in, press Bluetooth button (2) to answer. To reject call, press and hold Bluetooth button (2).

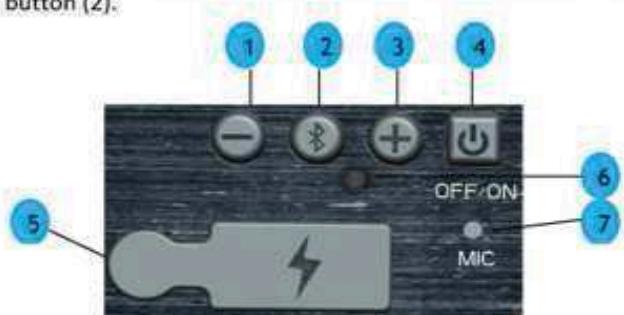

USB Charger:

Whenever the Coffee maker is plugged into the wall outlet, the USB charger is active. To charge your phone or tablet remove the silicon cover from the USB plug by rotating it counter clockwise. Be careful not to pull the silicon cover out of its socket. We recommend that you replace the silicon cover back over the USB port whenever it is not in use. Make USB cover is dry before replacing on the USB Charger.

WARNING: Always ensure the product is unplugged and allowed to cool before handling, relocating, or cleaning it.

- Clean the surface by wiping with a damp cloth and allow it to dry completely before storing or using it again.

NOTICE: Do not use harsh or abrasive cleaners/pads to clean the product.

- Store the product in a cool, dry place.

Electrical Specifications

CP-SA01X; CZ-SA01X (Where "X" maybe any letter "A~Z" or digits "0~9" or "-" or "/" or blank to indicate marketing issue or different color of appearance)

Voltage	Frequency	Wattage	
120VAC	60Hz	20W	

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

“This device complies with Industry Canada Licence-exempt RSS-210. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.”