

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, burns, or other injuries or damages.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect the appliance, turn control to "off", then remove plug from wall outlet.
- Do not use this appliance for anything other than its intended use.
- Scalding may occur if the lid is opened during the brewing cycles.
- To reduce the risk of fire or electric shock, do not remove the bottom cover from the appliance. No user serviceable parts inside. Call our toll-free customer assistance number for repair.
- Coffee Maker must never be used on top of range top.

IMPORTANT WARNINGS AND CAUTIONS

- Warning: Hot Steam.
- Caution: To reduce the risk of scalding, do not open lid when coffee is brewing.
- Warning: To reduce the risk of fire or electric shock, do not remove bottom cover.
- No user-serviceable parts inside. Repair should be only done by authorized service personnel.

EXTENSION CORDS

A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).


POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit

into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

OPERATION STEPS:

- Remove packing materials, read all instructions carefully before use.
- Clean the coffee maker thoroughly with water before using for the first time. Water is not allowed to splash inside the machine.

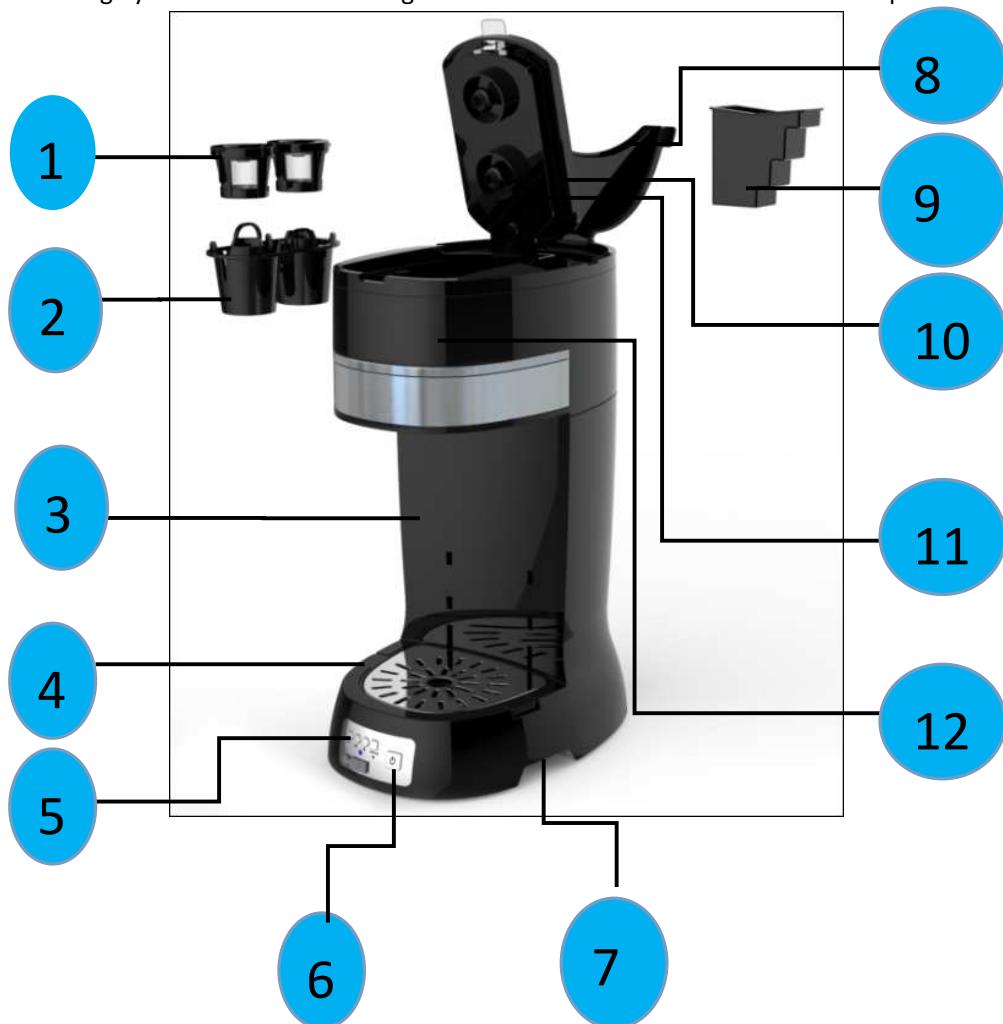


1. Filter cup 2. Funnel 3. Under the house 4. Water box 5. The bluetooth key

6: power button 7: Bottom cover 8: The tank cover t 9: The tank scale 10: Brewing covered

11: Brewing stents 12: On the house

Operating steps:

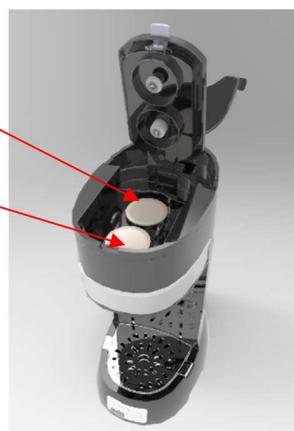

1



2

1、Put the capsule in the filter basket

2、Both A、B capsules are placed well, water flows out from both outlets
胶囊同时放时，两个出水口同时出水。

3、If only place B capsule, no water will flow from the outlet A
只放 B 胶囊时，A 出水口不出水。

4、If only place capsule A, water will flow out from both outlets A and B.
只放 A 胶囊时，A、B 出水口同时出水，所以

So if want brew one capsule only, please always put it on the position B.
需要煮一个胶囊时优先 B 位置。



3




4

3、Connect to power supply

4、Push start key to brew the coffee

1
2
3
4

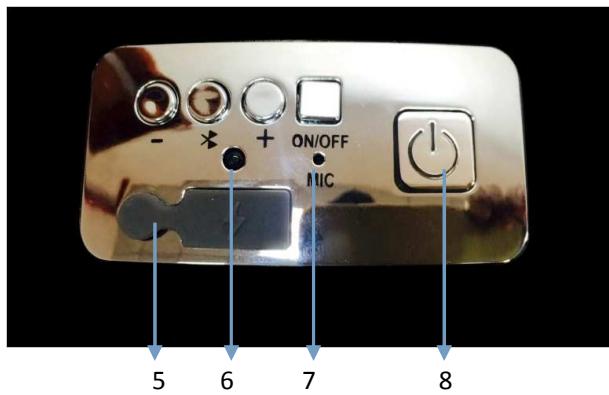

Turn unit on

- Press on / off button (4) for One Second.

Search for Bluetooth Signal:

- Press Bluetooth Button (2) for three seconds, the Bluetooth function is turned on.
- After the Bluetooth is turned on, the voice prompts "Bluetooth On", and the Bluetooth search "LED" (6) flashes as a status indicator. Start mobile phone Bluetooth search mode. Tap Bluetooth Speaker from the menu, Phone will be connected to Coffee Maker. After phone is paired, the Bluetooth Coffee Maker will automatically detect your phone after coffee maker is turned on or phone is brought in range. (Phone must have Bluetooth function on)

Play the song/music:

- Open the music player in phone. Select desired song and press play on phone. To "Play or Pause music from coffee maker, press Bluetooth button (2). Short press "PREV / V-" button (1) to select the previous song, press and hold to reduce volume reduction; short press "NEXT / V +" button (3) to select the next song, press and hold to increase.

Telephone answering function:

- When a call comes in, press Bluetooth button (2) to answer. To reject call, press and hold Bluetooth button (2).

8: (1) when plug in, power indicator turns on; press the power button, power indicator start flashing, brewing starts, when the brewing finishes, power indicator recovers to keep on, the unit stops working.

当咖啡机接通电源时，电源指示灯一直常亮；启动电源键时，电源指示灯开始闪烁，机器开始煮咖啡，煮咖啡完成，电源指示灯处于常亮状态，机器停止工作；

(2) If press the power button while working, the power indicator will keep on always, the unit stops working.

如中途按动电源键，电源指示灯处于常亮状态，机器停止工作；

(3) When plug in, the power indicator keeps on; in the case of no water inside the water tank, press the power button, power button starts flashing quickly, the unit will not work, 10 seconds later, the power indicator recovers to keep on.

当咖啡机接通电源时，电源指示灯一直常亮；水箱没有水的状态下,启动电源键时，电源指示灯出现快速闪烁状态，机器不工作，10秒后，电源指示灯处于常亮状态，

(4) **Warning: This machine is equipped with drainage function, it is forbidden to tilt pouring water. If the water tank needs be drained off for cleaning, plug the unit in, press the power button for 3 seconds, the indicator flashes slowly, heating tube stops working, the pump starts working until the water runs out. The indicator recovers to keep on always.**

警告:这台机器配备了排水功能，禁止倾斜倒水。(当咖啡机水箱内需要清洗，水需要排除时；机器接通电源，长按煮咖啡键3秒，指示灯进行慢闪，1秒开1秒关，发热管不工作，水泵自动抽水，直到水箱水抽完，指示灯恢复为常亮状态。)

Warning

- 1: After brew cycle, the coffee machine will automatically power off.
- 2: For your use safety, when the coffee machine is brewing, do not open the lid;
- 3: This machine is equipped with an instant heating system & water pump pressure system which brews delicious coffee. We suggest each capsule should be used one time only. If Capsule is reused, the coffee taste will be decreased and may cause the capsule to overflow too.
- 4: After the brewing coffee, throw away the used capsule. In order to improve the service life of the coffee machine, it is recommended to use pure water
- 5: Warning: Always unplug coffee maker from outlet when not in use.
- 6: **This machine is equipped with drainage function, it is forbidden to tilt pouring water.**
警告:这台机器配备了排水功能, 禁止倾斜倒水。

CLEANING

- 1: Proper maintenance will ensure years of service from your appliance. Clean the appliance after every use. This appliance contains no user serviceable parts and requires little maintenance. Leave servicing or repairs to qualified personnel.
- 2: Warning: Unplug the appliance and let it cool down completely before cleaning
- 3: Caution: Do not immerse the coffee maker, or the power cord with plug into water or any liquids. Do not use abrasive pads or alcohol.
- 4: Take out the capsule or coffee holder out from the coffee machine. Empty grounds from holder and clean it.
- 5: Clean the housing and warming plate with a clean, damp cloth.
- 6: Make sure all parts are completely dry after washing before use.
- 7: After cleaning, reassemble the coffee maker.
- 8: Note: Do not dry the inside of the water tank with a cloth, as lint may remain.

TECHNICAL DATA

Rated voltage: 120V~60Hz

Rated current: 7.5A

Rated power input: 1000W

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

"This device complies with Industry Canada License-exempt RSS-210. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device."

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.