

DRIFTER

Bring your music, Leave your phone

Hey Rockstars,

You're holding in your hands the future of music. Drifter is the world's first outdoor action speaker with a brain, which means it goes with you wherever without ever missing a beat.


Find your favorite music streaming apps and you're ready to go, with your playlists, your albums, and your songs!

But it's more than just music. Drifter's integrated Android operating system give you Netflix, Hulu, and thousands of other media apps.

We're excited to see where you go and what you do with it. Use the intergrated camera to send us a picture or two showing where you're taking your music.

Team Drifter



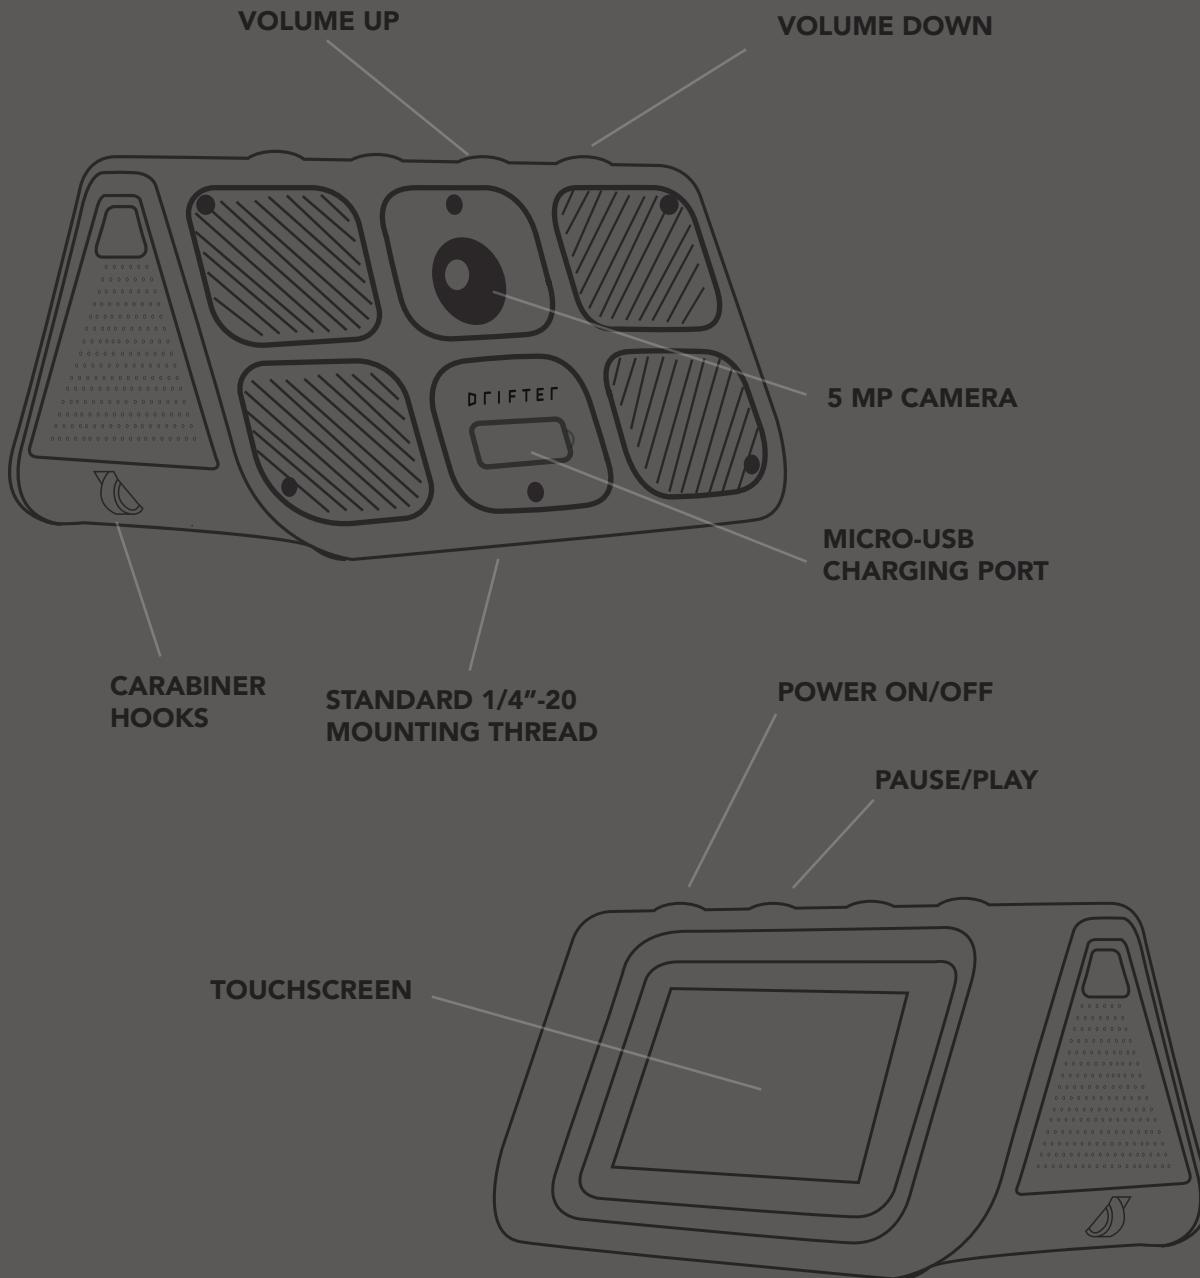

Set-up

01 Fully charge Drifter

Attached Drifter to either a USB port on a computer or a stand-alone USB power converter. The red light on the upper left of the screen should illuminate while the device is charging. Once fully charged, the light will turn off.

02 Turn on Drifter

Once the device is fully charged, firmly hold down the power button for four seconds. Drifter will turn on. After the bootup video, Drifter is ready to go.

Connecting to Wifi

01 Go to Home Screen

Press the Drifter icon  to go to the home screen.

02 Go to Settings

Press the Apps button  on the right side of the screen. Press the Settings icon.


03 Turn on the Wifi

Press the Wifi switch to turn Wifi search on. Select the Wifi category button to view the available network.



04 Select network

Click on the name of the Wifi network you want to connect to. If the network requires a password, supply it now.

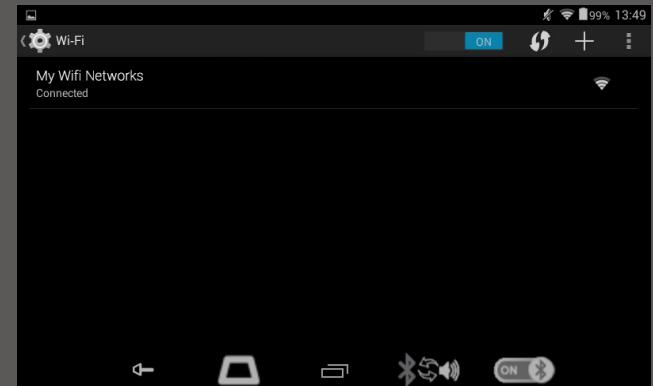

Installing New Apps

01 Go to Home Screen


Press the Drifter icon  to go to the home screen.

02 Go to Play Store

Press the Apps button  on the right side of the screen. Press the Play Store icon.

03 Create an Account

If you have an existing Google Account, log in now. If not, create one, either now by pressing "New" or by going to accounts.google.com and log in here.

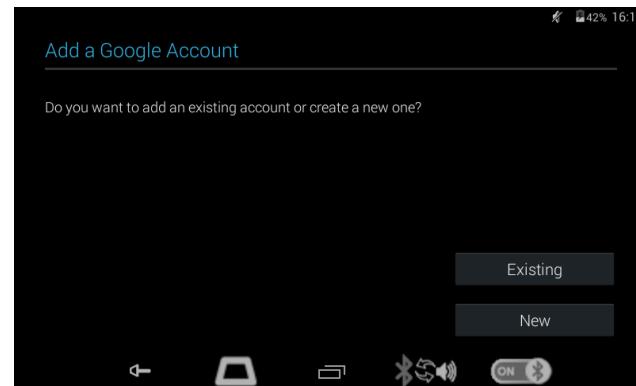


04 Search or Browse

Search or Browse for the apps you're interested in. Click on the App and select INSTALL and AGREE to the terms and conditions.

05 Add to Home Screen

App will download and install in the background. Once complete, the App will appear in the Apps Screen. To add to the home screen, click and hold the app for a few seconds. Drop the app into required position.

Note: Drifter must have an active wifi connection to browse and install new apps.

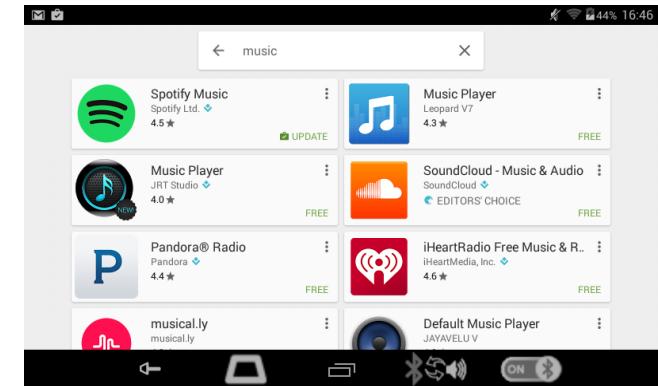


Connecting Bluetooth

01 Go to Home Screen

Press the Drifter icon  to go to the home screen.

02 Turn on Bluetooth

At the bottom right of the screen, turn the Bluetooth switch to ON. If the switch is already on, turn the switch to OFF and back to ON to enter pairing mode

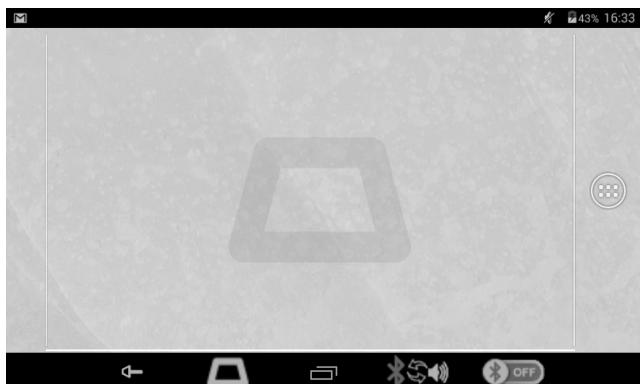

03 Connect to Phone

Make sure the Bluetooth function on your phone or other device is set to ON and that it is actively searching for new devices. Drifter should appear in those new devices.

Click Drifter to connect to your phone. In the future, turning on Drifter's Bluetooth functionality should autopair Drifter to your phone whenever both devices are in range and have Bluetooth activated.

04 Change Media Source

Make sure the Media Source button  shows Bluetooth as the media source, rather than the internal sound coming from Drifter.



Photos & Video

01 Open the Camera App

Press the Apps button  on the right side of the screen. Press the Camera icon.

02 Go to Settings

Use the camera app to take photos and video. Photos and video are saved on Drifter's internal hard drive.

03 View Photos & Video

Swipe from right to left in the camera app to enter Gallery mode and view photos & video.



 **Change Settings**

 **Take Photo**

 **Camera/Video/Panorama**

**BACK**

Go back to previous screen

**HOME**

Go to the main home screen (Doing this does not close the current app)

**VIEW ALL APPS**

See all open apps as a cascade. Close apps by swiping up.

**MEDIA SOURCE**

Change sound input between external Bluetooth and Drifter's internal sound

**BLUETOOTH**

Turn Bluetooth on and off. Also used to enter Bluetooth pairing mode.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.