

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RADIO OPERATION

Turn on the power switch, adjust appropriate volume, turn band switch to the band you would like to listen, then adjust TUNING knob to choose the required radio program.

USB/SD OPERATION

Turn on the power switch, adjust appropriate volume, insert USB/SD card, it will automatically play the music file in USB/SD card (can play MP3 WMA WAV formats music file), Press PREV/NEXT buttons to choose music file you would like.

RECORDING FUNCTION OPERATION

1: RECORD FORM INSIDE RADIO PROGRAM: Choose the radio program, insert USB/SD card, press MODE/REC button to switch to radio playing state, then press MODE/REC button for 2 seconds, the monitor light will twinkle quickly and continually, it means already start to recording state. Press MODE/REC button again, it will stop recording to play the recording file automatically.

2: RECORD FROM OUTSIDE DEVICE: While USB/SD playing, pls press MODE/REC button for 2 seconds, the monitor light will twinkle quickly and continually, it means already start to recording state. Press MODE/REC button again, it will stop recording to play the recording file automatically.

OTHER FUNCTION

During USB/SD playing, press CHANGE/PLAY button for 2 seconds, it will automatically switch to play recording file. Press this same button again, it will switch to play the files you downloaded in USB/SD card. Press PREV+NEXT button at the same time for 2 seconds to delete the files you do not need, then it will emit a warning tone, means the file is deleted successfully.

INTERNAL BLUETOOTH FUNCTION OPERATION

Turn on the radio and the bluetooth of cellphone or other mobile devices with bluetooth function, start to search a bluetooth named "SP-560BT" and pair with it. After successful pairing, it will beep. Now cellphone or other mobile device can play the music through bluetooth on radio. You can select, play and pause the music by pressing NEXT/PREV/PLAY buttons on radio or cellphone or other mobile devices. If you want to stop using bluetooth function just need to turn off the bluetooth in cellphone or other mobile devices. If want to use it again, only need to open the bluetooth in cellphone or other mobile devices again and pair with "SP-560BT" automatically



SP-560BT

AM/FM/SW1-2 4 BAND WORLD RECEIVER INSTRUCTION MANUAL



SPECIFICATION

General specification:

Voltage: AC:120V/60Hz

DC:9V(UM-1X6)

Speaker: 6 Inch 4Ω 30W

Receiving performance index:

Receiving frequency: FM: 87-108 MHZ

AM: 530-1600 KHZ

SW: 3.2-22.0MHZ

Sensitivity index: FM: 15db ± 5db

AM: 85db ± 5db

SW: 15db ± 5db

Noise rate: FM: ≥45db

AM: ≥35db

SW: ≥35db

! WARNING:

To prevent fire or shock hazard, do not expose this appliance to rain or moisture. Do not remove cover (or back), no user serviceable parts inside. Refer servicing to qualified service personnel.