

95.00 mm

105.00 mm

### TWS Function

- Turn on speakers, double press the "PAUSE" button. After an indication voice, two speaker could be connected with a same bluetooth device and then play music together. Long press the "PAUSE" button again to cancel TWS function

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, The device has been evaluated to meet general RF exposure requirement.

**2Boom™**



**SURGE**

Portable Wireless Speaker

Carefully read User Guide to operate this unit properly  
Keep for future reference.

### Instruction Manual

You are welcome to purchase.

To ensure the safe use of this product and to achieve the best results, please read this manual carefully.

This product can be connected to PC, TV, CD, VCD, DVD, TUNER, TAPE, USB, TF, BT and other audio equipment, it is easy to carry, multi-functional with perfect design, excellent sound quality performance, we believe it will bring you New feeling.

### Warm prompt


When charging the unit, please turn off the power switch, so as not to damage the battery, do not constantly use the machine for a long time. In order to keep the battery in good condition,

Please charge and discharge the battery for every 30 days or so.

### Technical Parameters

Bluetooth version: V5.0	Playing time: 1-1.5 hours
Driver size: 3in	Charge time: 4-5 hours
Driver output: 5W	S/N: ≥ 80db
Distance: 32.8ft	FCC ID: 2AIDL-BX110K
Frequency Response: 100Hz-18kHz	
Battery: 500mAh	

### PANEL FUNCTION DECLARATION

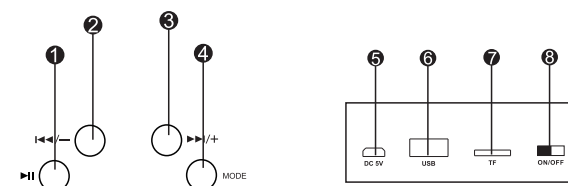

1. Play/Pause (FM: Automatic search)
2. Previous song. Press the button for a second to lower the volume.(FM: Previous channel)
3. Next song. Press the button for a second to enlarge the volume.(FM: The next channel)
4. Mode (USB, TF, FM, BT)
5. Charging socket (DC 5V)
6. USB socket
7. Micro SD card socket
8. OFF/ON Speaker power off , speaker power on

### Connect to BT

- Click the "MODE" button for Bluetooth mode
- Turn on your smartphone's BT and search for the device and select "2BOOM-BX110".
- Connect with Model. Click the "ok" on smartphone. Voice notice appear when connected successfully. (play and select music with smartphone when connected through BT).

### Micro SD Function

- Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically
- Press "PLAY/PAUSE" button to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

### USB Function

- Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to the previous song.

### FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically
- Press "PLAY/PAUSE" button for seconds to enter automatic FM channel searching. Short press the button again to stay on the channel you want. Press "NEXT" button to go to next frequency. Press "PREVIOUS" to go back to previous frequency.