



# TOTAL WIRELESS COMBO



Model: FTW600

User Manual

## Product introduction:



## Function and Description:

### 1. How to connect:

a. For the first time using, take out the earphones and they will turn on automatically. Open the Bluetooth function of smart phone, search the Bluetooth name of "FISHER-FTW600" to pair and connect. Then you can listen to music or calling.

b. For the second time using, the earphones will connect to each other and your phone automatically.

If the earphone doesn't connect with any device in 5 minutes, it will power off automatically.

**Note:** If you want to use single earphone, any one earphone will work separately.

### 2. How to Disconnect:

Put earphones into charging case, they will be disconnected automatically and start charging. Or you can press charging case button to start charging.

### 3. How to use:

#### On Music:

- a. Press right earphone three times to play next song.
- b. Press left earphone three times to play previous song.
- c. One press on left or right earphone to play or pause the song.
- d. Press right earphone about 1.5S to increase volume, Press left earphone about 1.5S to decrease volume. (Not support for some of phone software versions).

#### On Call:

- a. One press to answer the call and then one click to hang-up the call.
- b. Long press to reject the incoming call.

#### Google & Siri :

Doublepress left or right earphone to activate Google or Siri then one press to quit.

#### 4. How to charge:

##### Charging for earphone:

Put the earphone into charging case, they will be charged automatically. When the charging case battery is low, connect the type C cable to charge, the led light will be red and flash quickly. When the case is fully charged, the red LED light will stop flash. When the charging cable is unplugged, the red light will change to blue.

##### Charging for charging case via cable:

- 1) Use included cable to charge earphone.
- 2) Recommend to charge with 1A – 2A charger.

##### Charging for charging case via wireless charger:

- 3) Use included cable to power wireless charger.
- 4) Recommend to charge with 1A – 2A charger.
- 5) Put the charging case onto the wireless charger to charge.

When charging, the indicator light will flash red; when the case is fully charged, the indicator light will stop flashing and keep red.

#### 5. Package Includes:

- a) True wireless earphones
- b) Wireless charger
- c) Case cover
- d) Pair of Silicone wings
- e) Neck strap
- f) Carabiner
- g) 1 USB cable
- h) User manual
- i) Warranty card

#### Product specification

##### 1. Earphone specification:

Earphone battery capacity	40mAh
Bluetooth version:	5.0
Transmission distance	33ft
Frequency	20-20KHZ
Earbuds working time:	Up to 6hours of playtime with case
Charging time	About 40min-1.5 hours

##### 2. Charging box parameter

Battery of Charging box	230mAh
Charging time	About 40min-1.5 hours
DC charging voltage	DC 5V

(Note: Battery life & charging time may vary based on usage & types of devices used.)

### 3. Wireless charger specification

Output power	5W
Input	DC 5V,2A
Output	DC 5V,1A

#### **FCC-ID:**

**TRUE WIRELESS EARPHONES FCC ID :2AIDL-SS-FTW600**

**Charging compartment FCC ID :2AIDL-SS-FTW600C**

**Wireless charger FCC ID :2AIDL-SS-FTWI600**

#### **FCC WARNING:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 & part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**RF exposure (TRUE WIRELESS EARPHONES) :**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**RF exposure (Charging compartment & Wireless charger) :**

This equipment must be installed and operated with a minimum distance of 15 cm between the radiator and user body.

Matters needing attention

1. Please confirm if your device supports wireless charging function, otherwise it will not be charged.
2. Please do not place magnetic objects such as metal/magnetic discs/credit cards on the wireless

charger, as this may result in inability to charge.

3. Do not use this product in high temperature and humid environments to avoid malfunctions, damage, or leakage.

4. Do not splash water or other liquids onto the wireless charger. If cleaning is required, please make sure to disconnect the power supply.

Migear International Group LLC,

21 W 38th Street, 14th Floor, NY, NY 10018 USA

TEL: 929-390-4504