

104 mm

142.5 mm

homtime 汉时

V2 Alarm Clock with Bed Shaker



TIPS / IMPORTANT:
All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

homtime 汉时

Safety Instructions
Read all safety instructions before using this product.

WARNING YOU SHOULD SAFELY INSTRUCTED USER MANUALS. FROM NOW ON CAUSE DAMAGE TO PERSONS AND PRODUCTS.

Please read this manual carefully including safety instructions, parts instruction and operation manual before using this product. Install the product strictly according to this operation manual. Use only with Homtime-recommended attachments, accessories, and replacement parts.
Please do not open the decomposition of the product.
Please use the original power cord.
Please do not place items on the product and cord. Please do not bend, cut off or process the cord. Please do not use with a damaged cord or plug.
Before cleaning the product, please disconnect the power supply first and clean the product with dry cloth.
Suitable for dry locations only.
Do not use outdoors or on wet surfaces. Never locate the product where it may fall into a bath or other water container.
Please do not put other parts into this product.
Please stop using the product immediately if the product is damaged, smell or smoked caused by improper use.
It may cause product damage and data loss if the product has been crushed or dropped.
Unplug the power cord when encounter a thunderstorm or do not use the product for a long time.

homtime 汉时

#Please strictly follow above safety instructions, otherwise it may lead to short circuit, electric shock, fire and other malfunction. #If the product is not functioning properly. Please contact our technical support team or the s authorized service provider

This product is precise. Please do not store and use under the following conditions:
- Vibrate or shocking place.
- Direct sunlight or high temperature place.
- Wet and flooded place.
- Dusty place.
- Strong electromagnetic waves and electromagnetic force place.
- Strong static place.
- In the condition of moisture.
- Close to the radiator, electric heater or heat generating device.
- Applicable only for in areas below 2000m above sea level.
- Applicable only for non - tropical climates.

#Please do not step on the product and the cord.
#Please consult your distributor if you have any questions regarding the installation, operation and safety of this product.

Honored customer, thank you for purchasing our product. Please read this manual carefully before using this product.

homtime 汉时

Features and Functions

1. Alarm: Easy operating, High/Medium/Low alarm volume, Snooze
2. Clock: Big LED screen to display 12/24 hour mode
3. 4 level dimmable
4. 5V 1A USB charging port
5. Standby mode
6. Dual Alarm Mode: Shaker/Ringtone
7. One touch to turn off the alarm

Included in this Package
(Please check the accessories included in this package after purchasing)
①V2 main unit 1 pc ②Micro USB power cord 1 pc
③Shaker 1 pc ④User manual 1 pc
⑤Warranty card 1 pc

Diagram of the LED Display & Controls



① AMPM ② Snooze ③ Alarm
④ Vibrating alarm ⑤ Time display

 
homtime 汉时

Top Controls



⑥ Press to adjust clock and alarm time ⑦ Snooze / LED dimmable
⑧ Alarm volume ⑨ Alarm time setting
⑩ Press to adjust clock and alarm time ⑪ Turning off alarm

Controls on the back



⑫ Battery compartment ⑬ Alarm mode switch (Buzzer/Vibration/Buzzer&Vibration)
⑭ Time setting ⑮ 12H/24H mode switch
⑯ USB charging output ⑰ External power input-DC 5V

side 1

homtime 汉时

Operation Instruction

1: Turn on the Device & the Shaker
Connect the micro USB power cord with a 5V power adapter (not included) and push the micro USB terminal into the power input port on the back of the device or install 3 AAA batteries (not included). On battery mode, USB charging function can not work and the LED display will turn to standby mode in 10 seconds. Install 3 AAA batteries (not included) into the shaker to turn on the shaker. The shaker is on when it vibrates a second. It will connect with the device automatically as the shaker is paired with the device before it leaves the factory. If fail to connect with the device, please refer to the label on the bottom of the device.

2: Time Setting
Press TIME button on the back of the device, the time figure begins to flash. Press +/- to select time by minute. Press and hold +/- to select time quickly (Recommended). Press TIME button to confirm time setting. No operation on any keys in 10 seconds, it will confirm the setting and exit automatically.

3: 12H/24H Mode
Use the 12H/24H switch behind the unit to select 12 hour or 24 hour display. On 24H mode, AM or PM will display on the screen.

4: Alarm Setting
Press SNOOZE button to set alarm. 12:00 and the alarm icon begin to flash on the screen. Press +/- button to select time by minute. Or press and hold +/- button to select time quickly (Recommended). Then press SNOOZE button to confirm the setting. The alarm icon will stop flashing automatically in 10 seconds if no operation occurs. If the alarm is not cancelled, the alarm works everyday.

homtime 汉时

5: Turn off Alarm
When the alarm sounds, press and hold SNOOZE button to turn off alarm. The alarm icon will display on the screen. Alarm will work in the next day.
When the alarm sounds, press SNOOZE button, then alarm is cancelled. The alarm icon disappears.

6: Alarm Mode Setting
Press ALARM MODE button on the back of the device to switch buzzer, vibration and buzzer & vibration. The B icon is for buzzer and the V icon is for vibrating alarm and the BV icon is for buzzer & Vibration. If choosing vibration or buzzer & vibration alarm. If choosing vibrating alarm, please make sure you have installed 3 AAA batteries (not included) inside the bed shaker.
The default alarm mode is buzzer & vibration.

7: Alarm Volume & Vibrating Level
On buzzer mode, press SNOOZE button to switch High (V3) (Medium) (V2) (Low) (V1) alarm volume. The default volume is medium volume. V1, V2 and V3 are the icons displaying on the screen. Setting vibrating level is same as setting alarm volume.

8: Snooze
When the alarm sounds:
1: Press SNOOZE button to activate snooze function, snooze icon Z² is on, the alarm will activate again in 9 minutes. Press and hold SNOOZE button to turn off snooze mode and snooze icon Z² disappears.
2: The alarm will sound for 30 minutes if no button is pressed, after 30 minutes, the alarm will be off automatically for the day. The alarm will work in the next day.

homtime 汉时

9: Display Brightness Adjustment
Press SNOOZE button to adjust brightness of the LED display. There are 4 brightness levels.

10: USB Charging
The USB charging port supports charging mobiles and supplies 1A charging current.

Battery Operated Mode
When the device is powered by batteries only, the display will be off in 10 seconds and the alarm will only sound for 3 minutes. USB charging function does not work.
The battery life can last for one year normally.
We recommend the use of a long-life battery to ensure maximum performance.

Power Adapter
Please make sure the power adapter is 5V 1.5A or above (Recommend 5V 2A).

Restore Factory Settings
To restore factory settings, press TIME and SNOOZE button for 5 seconds at the same time, after hearing DIDI sound, then all settings are cleared.

homtime 汉时

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shanghai Funwei Electronic Technology Co., Ltd
www.homtime.com

side 2

DEG			✓		
DIV	A	B	C	D	
0~10	±0.02	±0.05	±0.1		0~30° ±0.5°
11~20	±0.05	±0.1	±0.15		31~60° ±0.5°
21~30	±0.1	±0.15	±0.2		61~90° ±1°
31~50	±0.15	±0.2	±0.3		
51~	±0.2	±0.25			

 Model Name: V2 (Homtime) 黑/白	3rd Angle Projection 
Part Name: 英文说明书	
Doc No.:	
Material: 120g道林纸	Unit mm Scale 1/1
Finish: 正反面+风琴折	Sheet 1 of 1




Draw	Date: 2020-03-11
Check	Date:
Approval	Date:



homtime | 美时

V2

Alarm Clock with Bed Shaker

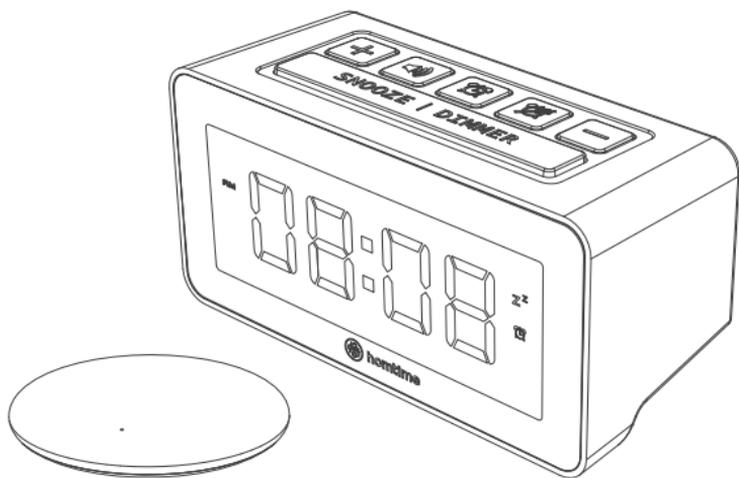

TIPS / IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

Safety Instructions

Read all safety instructions before using this product:



WARNING

IF YOU IGNORE SAFETY INSTRUCTIONS, ERROR MANIPULATION MAY CAUSE DAMAGE TO PERSONS AND PRODUCTS.

Please read this manual carefully including safety instructions, parts instruction and operation manual before using this product.

- . Install the product strictly according to this operation manual.
- . Use only with Homtime-recommended attachments, accessories, and replacement parts.
- . Please do not open the decomposition of the product.
- . Please use the original power cord .
- . Please do not place items on the product and cord, Please do not bend, cut off or process the cord. Please do not use with a damaged cord or plug.
- . Before cleaning the product, please disconnect the power supply first and clean the product with dry cloth.
- . Suitable for dry locations only.
- . Do not use outdoors or on wet surfaces. Never locate the product where it may fall into a bath or other water container.
- . Please do not put other parts into this product.
- . Please stopping using the product immediately if the product is damaged, smell or smoked caused by improper use.
- . It may cause product damage and data loss if the product has been clashed or dropped.
- . Unplug the power cord when encounter a thunderstorm or do not use the product for a long time.

#Please strictly follow above safety instructions, otherwise it may lead to short circuit, electric shock, fire and other malfunction.
#If the product is not functioning properly. Please contact our technical support team or the s authorized service provider

This product is precise. Please do not store and use under the following conditions:

- . Vibrate or shocking place.
- . Direct sunlight or high temperature place.
- . Wet and flooded place.
- . Dusty place.
- . Strong electromagnetic waves and electromagnetic force place.
- . Strong static place.
- . in the condition of moisture.
- . Close to the radiator, electric heater, or heat generating device.
- .  Applicable only for in areas below 2000m above sea level.
- .  Applicable only for non - tropical climates.

#Please do not step on the product and the cord.
#Please consult your distributor if you have any questions regarding the installation, operation and safety of this product,

Honored customer, thank you for purchasing our product. Please read this manual carefully before using this product.

Features and Functions

1. Alarm: Easy operating, High/Medium/Low alarm volume, Snooze
2. Clock: Big LED screen to display, 12/24 hour mode
3. 4 level dimmable
4. 5V 1A USB charging port
5. Standby mode
6. Dual Alarm Mode: Shaker/Ringtone
7. One touch to turn off the alarm

Included in this Package

(Please check the accessories included in this package after purchasing)

- | | | | |
|----------------|------|-----------------------|------|
| ◎V2 main unit | 1 pc | ◎Micro USB power cord | 1 pc |
| ◎Shaker | 1 pc | ◎User manual | 1 pc |
| ◎Warranty card | 1 pc | | |

Diagram of the LED Display & Controls

Display



① AM/PM


② Snooze

③ Alarm

④ Vibrating alarm


⑤ Time display

Top Controls

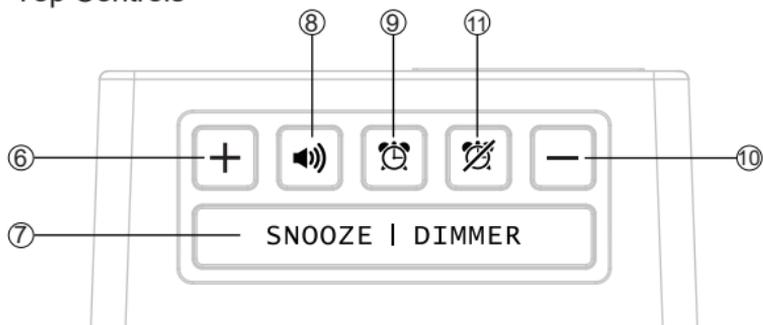

- ⑥ Press to adjust clock and alarm time
- ⑦ Snooze / LED dimmable
- ⑧ Alarm volume
- ⑨ Alarm time setting
- ⑩ Press to adjust clock and alarm time
- ⑪ Turning off alarm

Controls on the back

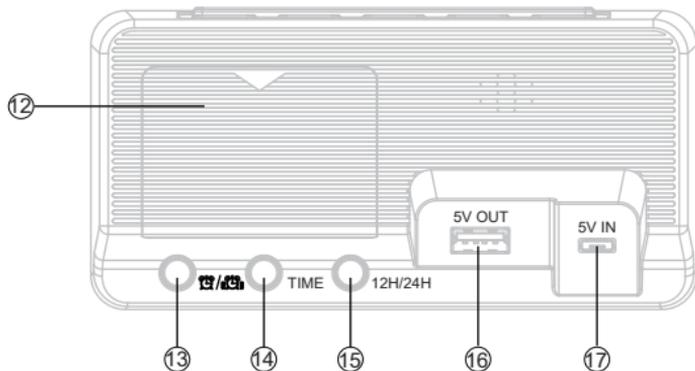

- ⑫ Battery compartment
- ⑬ Alarm mode switch
(Buzzer/Vibration/Buzzer&Vibration)
- ⑭ Time setting
- ⑮ 12H/24H mode switch
- ⑯ USB charging output
- ⑰ External power input-DC 5V

Operation Instruction

1: Turn on the Device & the Shaker

Connect the micro USB power cord with a 5V power adapter (Not included) and push the micro USB terminal into the power input port on the back of the device or install 3 AAA batteries (not included). On battery mode, USB charging function can not work and the LED display will turn to standby mode in 10 seconds. Install 3 AAA batteries (not included) into the shaker to turn on the shaker. The shaker is on when it vibrates a second. It will connect with the device automatically as the shaker is paired with the device before it leaves the factory. If fail to connect with the device, please refer to the label on the bottom of the device.

2: Time Setting

Press TIME button on the back of the device, the time figure begins to flash. Press +/- to select time by minute; Press and hold +/- to select time quickly (Recommended). Press TIME button to confirm time setting (If no operation on any keys in 10 seconds, it will confirm the setting and exit automatically).

3: 12H/24H Mode

Use the 12H/24H switch behind the unit to select 12 hour or 24 hour display. On 24H mode, AM or PM will display on the screen.

4: Alarm Setting

Press  button to set alarm. 12:00 and the alarm icon begin to flash on the screen. Press +/- button to select time by minute. Or press and hold +/- button to select time quickly (Recommend). Then press  button to confirm the setting. The alarm icon will stop flashing automatically in 10 seconds if no operation occurs. If the alarm is not cancelled, the alarm works everyday.

5: Turn off Alarm

When the alarm sounds, press and hold SNOOZE button to turn off alarm. The alarm icon will display on the screen. Alarm will work in the next day.

When the alarm sounds, press  button, then alarm is cancelled. The alarm icon disappears.

6: Alarm Mode Setting

Press ALARM MODE button on the back of the device to switch buzzer, vibration and buzzer & vibration. The  icon is for buzzer and the  icon is for vibrating alarm and the  is for buzzer & Vibration. If choosing vibration or buzzer & vibration alarm. If choosing vibrating alarm, please make sure you have installed 3 AAA batteries (not included) inside the bed shaker.

The default alarm mode is buzzer & vibration.

7: Alarm Volume & Vibrating Level

On buzzer mode, press  button to switch High (V3)/Medium (V2)/Low (V1) alarm volume. The default volume is medium volume. V1, V2 and V3 are the icons displaying on the screen. Setting vibrating level is same as setting alarm volume.

8: Snooze

When the alarm sounds:

- 1: Press SNOOZE button to activate snooze function, snooze icon  is on, the alarm will activate again in 9 minutes. Press and hold SNOOZE button to turn off snooze mode and snooze icon  disappears.
- 2: The alarm will sound for 30 minutes if no button is pressed, after 30 minutes, the alarm will be off automatically for the day. The alarm will work in the next day.

9: Display Brightness Adjustment

Press SNOOZE button to adjust brightness of the LED display. There are 4 brightness levels.

10: USB Charging

The USB charging port supports charging mobiles and supplies 1A charging current.

Battery Operated Mode

When the device is powered by batteries only, the display will be off in 10 seconds and the alarm will only sound for 3 minutes. USB charging function does not work.

The battery life can last for one year normally.

We recommend the use of a long-life battery to ensure maximum performance.

Power Adapter

Please make sure the power adapter is 5V 1.5A or above (Recommend 5V 2A).

Restore Factory Settings

To restore factory settings, press TIME and  button for 5 seconds at the same time, after hearing DiDi sound, then all settings are cleared.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.