

 
## Use

- Connect the plug (C) to a suitable outlet. The product lights up.
- Press the button on the wired controller (F) to toggle between different color modes:
  - Red → Green → Yellow → Blue → Purple → Cyan → Cool white
  - Warm white → White flash color mode → Dynamic color mode → Gradual color mode → Flash and dynamic color mode → Off




## Remote Control

- To activate the remote control, pull the protective strip out.

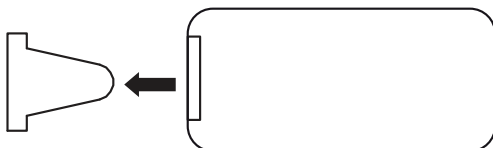

 - Press the corresponding button on the remote control to set desired color mode:

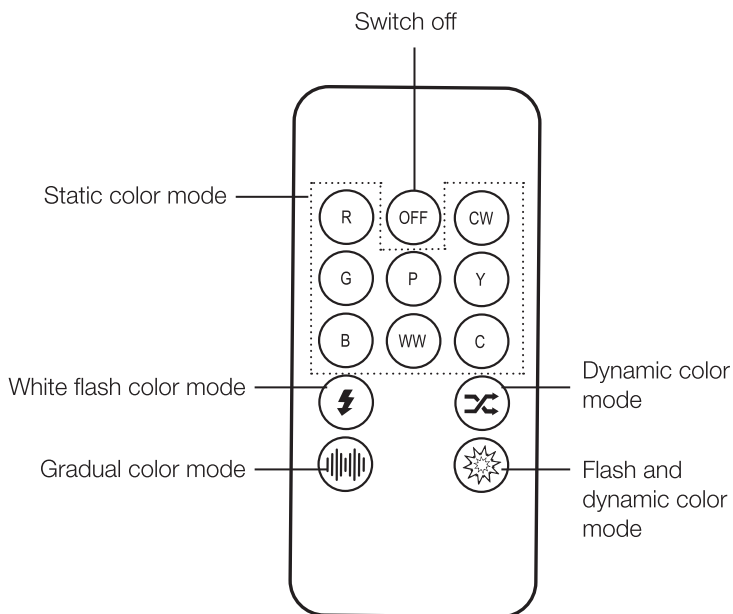



## Use and Care Instructions

**⚠ WARNING Risk of electric shock!** To prevent electric shock, unplug before cleaning.

**⚠ WARNING Risk of electric shock!** During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

### Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

### Maintenance

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

 


## User Servicing Instructions

### Fuse replacement

**NOTICE** The product requires a max. 5 Amp, 125 Volt fuse.

- Grasp the plug (C) and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Slide open the fuse access cover on top of the plug (C) towards blades.
- Remove the fuse carefully. Use a pointed object to push the fuse out of the socket.
- Replace the fuse with a spare one located in the fuse compartment and slide close the fuse access cover on top of the plug (C).

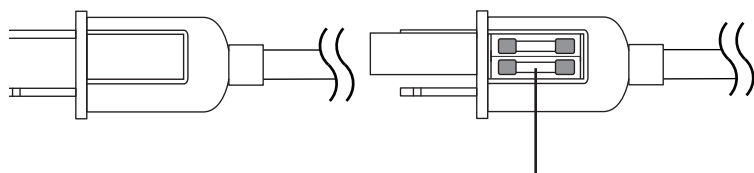

Fuse: max. 5 Amp, 125 Volt  
 "Spare fuse for replacement"


**⚠ CAUTION Risk of fire!** Replace only with max. 5 Amp, 125 Volt fuse.

**⚠ CAUTION Risk of fire!** Do not replace the plug (C). It contains a safety device (fuse) that should not be removed. Discard product if the plug (C) is damaged.

### Battery replacement

 **NOTICE** The product requires a 3 V CR2025 button cell battery.

- To replace the battery, push the side tab and pull the battery holder.
- Insert a new battery into the battery holder with a positive "+" polarity facing up. Then push the battery holder into the remote control.

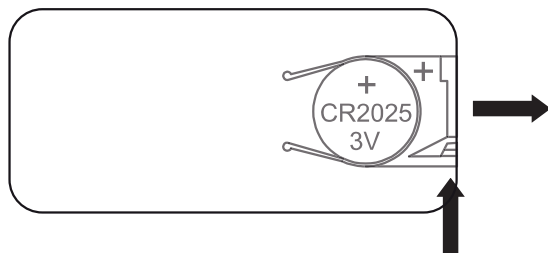



## FCC – Supplier’s Declaration of Conformity

<b>Unique Identifier:</b> B07TS35ZMM - 210 LED Color Changing Rope Light with Remote Control, 20-Foot	
<b>Responsible Party</b>	Amazon.com Services, Inc
<b>U.S. Contact Information</b>	410 Terry Ave N. Seattle, WA 98109, United States
<b>Telephone Number</b>	(206) 266-1000

### FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
  - (1) this device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

### FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

### RF Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.