

MINISO

PRODUCT MANUAL

使用說明書

WIRELESS SPEAKER
家庭影院款雙喇叭藍牙音箱

Model:A18

MODEL: A18

使用產品前請仔細閱讀本使用說明書，並請妥善保管。

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

Dear Customer


Thank you for purchasing MINISO speaker. In order for you to get familiar with operating the machine as soon as possible, we provided the detailed user manual, from which you can read about the product introduction, usage, system settings and cautions. Before using this product, please read this manual, as it may help you better understand of this product.

We were very careful in the preparation of this manual, and we believe that all the information provided in this manual is correct and reliable. If there are any omissions, please kindly forgive and kindly correct. If you find any problems in the process of using the product, please contact us in time.

Caution

Keep the battery (battery pack or assembled battery) away from direct sunlight, fire and high temperature. There is a risk of explosion if the battery is not replaced properly, only replace it with the same type or equivalent type of battery.

Product

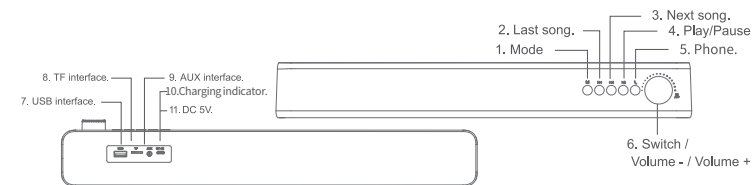

Specification

BT version: V5.0 Call time: 15H~22H Battery: 3.7V 2200mAH
 BT Modulation: A2DP,AVRCP,HFP,HSP Standby time: more than 15 days Pairing password: No need
 Distance: 10m Charging time: 2.5H Pairing: A18
 Play time: 10H~12.5H LED: Red& Blue

NO	Function	Status	Action	Sound
1	Turn on	Turned off	Rotate the Volume knob to the right until it is turned on	Voice prompt
2	Receive call	Incoming call	Press once to answer	No
3	Hang up	During call	Press once to hang up	No
4	Redial last number	Standby/ listening to music	Press twice to redial	No
5	Reject	Incoming call	Long press	Prompt
6	Increase volume	During call/ listening to music	Rotate the Volume knob to the right	Max. volume prompt


7	Decrease volume	During call/ listening to music	Volume knob to the left	No
8	Play/pause	Standby/ listening to music	Press Play/ Pause button	No
9	Previous song	Listening to music	Short press "Previous Song" button	No
10	Next song	Listening to music	Short press "Next Song" button	No
11	Turn off	Standby/ listening to music	Rotate the Volume knob to the left until it is turned off	No
12	Change mode	Standby/ listening to music	Short press Mode button	
13	Disconnect BT	Standby/ listening to music	Long press Play/ Pause button	

Accessories

1x Wireless speaker, 1x User Manual, 1x charging cable, 1x audio cable

Instructions

- Mode button: Short press to change between BT, TF card and USB mode.
- Previous song: Short press for previous song
- Next song: Short press for next song
- Play/Pause button: press once to play music, press once again to pause.
- Receive call button: Short press to answer the call. Press once again to hang up. Long press to reject. Double press to redial the last number.
- Turning on/off & Volume control: Rotate the Volume knob to the right until it is turned on; Rotate the Volume knob to the left until it is turned off; Rotate the Volume knob to the right to increase the volume; Rotate the Volume knob to the left to decrease the volume;
- USB port: Can be connected with other device and play the music content from that device
- TF card port: Compatible with TF cards and can play the music content from cards.
- AUX port: Connect $\Phi 3.5\text{mm}$ plug of the audio cable for audio signal
- Charging light indicator: When charging, the red indicator light will be turned on. After being fully charged, the light will turn off.
- DC 5V: insert charge cable into power interface with electricity power to charge the machine.

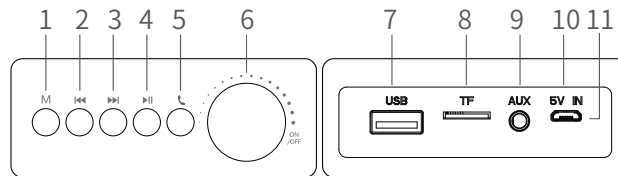

Troubleshoot

The volume is too low- Rotate the Volume knob to the right to increase the volume; Rotate the Volume knob to the left to decrease the volume;

How long should it be charged? For about 2.5hours. (Until indicator light dim out).

Songs are interrupted when playing – Not enough power, charge the product. Or the distance is too big. Avoid placing close to interference sources such as wireless routers.

Cannot connect successfully- 1. Make sure that speaker has enough power. 2. Open the BT on your phone and place close to the speaker. 3. Turn the speaker on, and search for A18 on your cellphone and connect.

It is connected though the cable/ TF card but does not play the music- Make sure that there is enough power. Make sure AUX cable is properly connected (usually green port). Rotate the Volume knob, change the mode between BT-cable-card



www.miniso.jp Designed by Japan, Made in China

株式会社 名創優品産業 〒104-0061 東京都中央区銀座3-10-7 銀座京屋大厦7楼 MINISO INDUSTRIES CO.,LTD. GINZA KYOYA BLDG. 7F 3-10-7 GINZA, CHUO-KU, TOKYO 104-0061, JAPAN	MINISO JAPAN
---	-------------------------

FCC information:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.