

# **LoopPay TPD User Manual**



# samsung pay

Copyright © Samsung Pay, Inc. All right reserved. LoopPay TPD User Manual

#### Introduction

The LoopPay TPD is a token payment device key fob; it supports MST and NFC technologies for payment and is controlled by a companion app over a Bluetooth Low Energy connection.

Install the LoopPay app from the iOS AppStore or Google Play, create an account, connect the LoopPay TPD with your phone, load your credit and debit cards and start making payment with your LoopPay TPD in the stores by holding your device close to the payment terminal reader and pressing the device button to make payment.

## **Packaging List**

- 1. LoopPay TPD
- 2. Lobster clasp
- 3. Micro-USB cable

## **Charge your LoopPay TPD**

- 1. Plug the micro-USB male in the LoopPay TPD connector
- 2. Plug the USB male in your computer USB or USB power adaptor
- 3. LoopPay TPD is charged when the LED is green



### **Specifications**

Capacity: 140mAh Battery: Li-Polymer Input: 5V/90mA Full-charge time: 1h Cycle life: >100 times

Functioning temperature: 0°C ~ +45°C

Dimensions: 59 x 37 x 4mm



### Setup LoopPay TPD with LoopPay app

- 1. Download and install the LoopPay app from the Apple AppStore or Google Play
- 2. Launch the LoopPay app and create a LoopPay account
- 3. Make sure the LoopPay TPD is charged and keep it next to your phone
- 4. Make sure Bluetooth is enabled in your phone and click on Connect Device button
- 5. For iOS, click on "Pair" button when prompted
- 6. When prompted, press and hold the LoopPay TPD button until you hear a beep
- 7. Click on the Add Card and follow instructions to load a card in the LoopPay TPD

### Select a card

- 1. Launch the LoopPay app
- 2. If you have more than one card, press and hold down on a card from the card list to select the card in LoopPay TPD

## Make a payment

Place LoopPay TPD near POS terminal and press LoopPay TPD button to transmit card and make a payment



#### **Security and Precaution**

- 1. Please do not strike the device with any blunt or sharp article.
- 2. Please use adaptor with output 5.0V/5.5V to charge this device.
- 3. Please check battery capacity of your device before charging.
- 4. If no output, just recharge it to go back to normal.
- 5. Never put the device in the water or close to a fire or in high or low temperature.
- 6. Never let children play with the device, including accessories.
- 7. Please do not disassemble and refit the device to alter the protection system, it can cause fire or explosion.
- 8. Please contact or send the device to dealer service center for examination and repair immediately if any overheat, discolor or shape change.
- 9. Please do not pull in and out with big force to avoid the damage to the socket and your devices.
- 10. Please do not press the button with big force to avoid the damage switch
- 11. This product will have a 5% discharge automatically if not in use. Please ensure to charge the device once at least every 3 months to maintain its normal use life.
- 12. After long time using the device, it is normal that it will become warm but not enough to burn your hand.
- 13. After finished charging your devices, please pull out the cable immediately to avoid consuming the capacity of this product.
- 14. The manual will be updated as the product upgrades; there will be no more notice.
- 15. Any incorrect operation and placement will decrease the use life. Please understand that supplier will not take responsibilities on such case.
- 16. This product has a built-in lithium polymer battery, please use carefully.
- 17. All accessories and adaptor should only be used with this product.
- 18. The designer of this product has the final judgment and recession right on all above items.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

https://pilotsupport.looppay.com

Samsung Pay, Inc.
3 van de Graaff Drive, 4th floor, Burlington, MA 01803
Tel: +1 617 279 0520

Fax: +1 617 603 7443

