


Boulder Waterproof Outdoor Bluetooth Speaker

Instruction Manual

7199-85

FCC ID: 2AIKE-719985

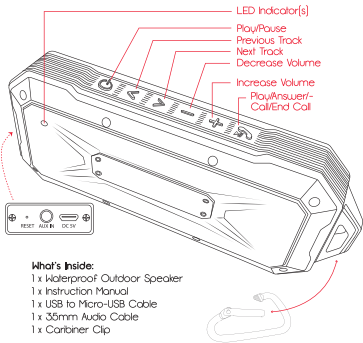

What's Inside:

- 1 x Waterproof Outdoor Speaker
- 1 x Instruction Manual
- 1 x USB to Micro-USB Cable
- 1 x 3.5mm Audio Cable
- 1 x Carabiner Clip

WARNING:

Read Instruction Manual completely before using the Boulder Waterproof Outdoor Bluetooth Speaker. Do not disassemble, crush, open etc. for risk of fire or burns. If internal mechanisms are exposed do not attempt fixing, seek professional assistance.

1

1 Charging the Boulder Waterproof Outdoor Bluetooth Speaker prior to initial use:

- Plug the Micro-USB cable into the port located on the speaker.
- Plug the opposite USB end into the USB part of a computer or compatible AC wall adapter.
- The Red LED turned on to indicate that the speaker is charging.
- Once the Boulder Bluetooth Speaker is fully charged, the LED turns off.

2 Pairing with the Boulder Waterproof Outdoor Bluetooth Speaker:

- Turn the Boulder on by pressing the ON/OFF button. A Blue LED will flash 3 times slowly, then will flash quickly to indicate Bluetooth pairing mode.
- Follow the instructions of your device you wish to pair the Boulder with and search for the speaker.
- Select "Boulder" from the list of possible pairs.
- A Blue LED light will flash slowly when pairing is complete.

• LED indicator description:

Charging	Red LED on
Fully Charged	Red LED shuts off
Pairing Mode	Blue LED flashes fast
Connected	Blue LED on
Play-mode	Blue LED flashes slow

• Tech Specifications:

- Rated Output Power: 3W x 2 (THD = 10%)
- Frequency Response: 120Hz-16kHz
- Driver: 1.5" x 2
- Power Supply: USB, DC 5V 500 mA
- Distortion: $\leq 0.5\%$
- S/N: $\geq 68\text{dB}$
- Battery Capacity: 2000mAh/3.7
- Battery Play Time: Up to 5 hours
- Battery Charging Time: 5 hours
- Product Size: L 193.5 x W 37.5 x H 60 mm
- Product Weight: 400g

2

SAFETY INSTRUCTIONS:

- Charge the device completely before first use
- Do not attempt to repair. Seek professional consultation if powerbank isn't working.
- Do not insert objects that do not belong into power bank.
- Keep out of reach of children.
- Do not use near or around water as this could result in electrocution.
- Keep away from flame.

NOTE:

FC

Made in China

3

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.