



TouchLock™ BT

TouchLock BT Instruction Manual

App Download:



 
- iOS 8.0 or above
- Android 4.3 or above

To watch the video for instructions, please visit:
<http://www.bio-key.com.hk/download.html>


BIO-key International, Inc.
www.bio-key.com
Warranty registration: <http://support.bio-key.com/warranty>
Made in China



TouchLock™ BT

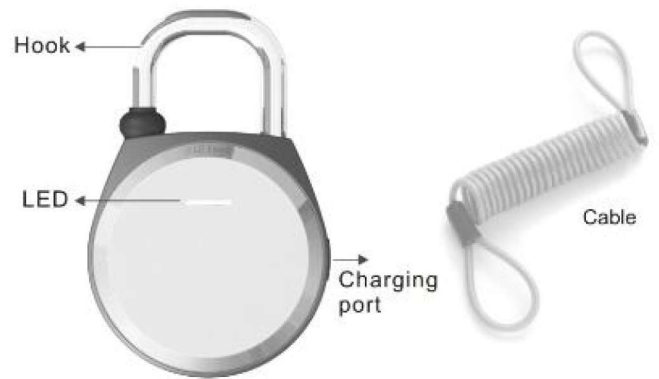

ACTIVATION

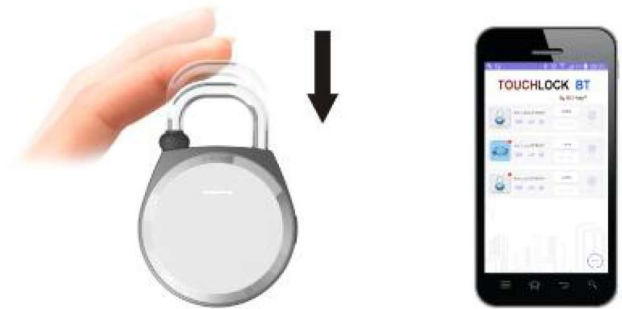 

1. To Activate: Press the hook once and wait for the flashing blue light.

2. Open the App and the activated lock will appear on the screen.

REGISTER ADMIN USER



STEP1

STEP2

 
STEP3

1. Tap the 'Register' button to register your lock.

2. Once you succeed to register the lock, you will see the message.

3. If a red dot appears on the top of right corner, you are administrator to the lock.

REGISTER NORMAL USER

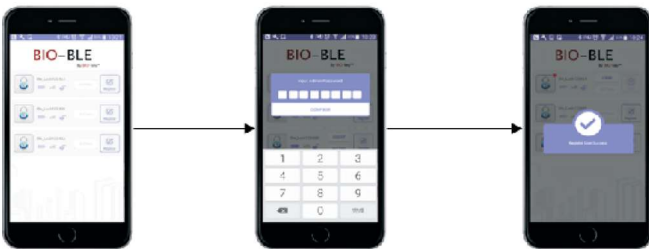

STEP1

STEP2

 
STEP3

1. Tap the 'Register' button you like to register. If you are not first one to register the lock, you are a normal user.

2. Input admin password

3. Completely

SETTINGS

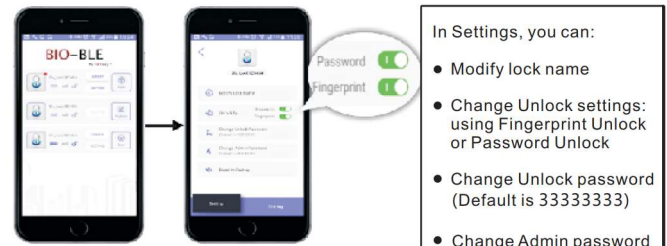


Select one of locks and Tap 'Setting' to view its details

In Settings, you can:

- Modify lock name
- Change Unlock settings: using Fingerprint Unlock or Password Unlock
- Change Unlock password (Default is 33333333)
- Change Admin password (Default is 00000000)
- Reset to Factory

Only admin use can change admin password and reset to factory.

 UNLOCK

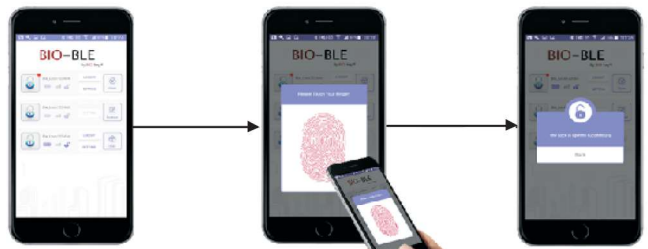

STEP1

STEP2

STEP3




1. Tap the open icon

2. App asks for fingerprint authentication if fingerprint option is on. Scan the finger on the Phone

3. Unlock successfully

SAFETY WARNING & INSTRUCTION

- *Before using this product, please read this "Safety Warning & Instruction" and use it appropriately. After reading, please keep this leaflet in a safe place .
- *The instructions at here is to avoid the danger to the person who uses this product and other people, and to prevent damage to assets from happening.
Please follow the instructions described here.
The explanation of indication
- *The following indication explain the degree of the harm and the damage if do not follow the safely precautions described here, and when the product is used inappropriately.

 DANGER	If you do not follow the safety precautions, there is a high imminent possibility that it will result in death or severe injury.
 WARNING	If you do not follow the safely precautions, there is a possibility that it may result in death or severe injury.
 CAUTION	If you do not follow the safety precaution, there is a possibility that it may result in injury or damage to the households nearby or product breakage.

DANGER

- ***Do not attempt to repair, break apart, remodel or open it.**
-Doing so, may result in personal injury, burn, electric shock or fire.
- ***Do not put it in the fire, apply heat by overheating cookware of a microwave and IH cookware, in high pressure vessel of a pressure iron pot or not place close at their, or in the car under blazing sun.**
-Doing so, may result in personal injury, burn, electric shock or fire.

WARNING

- ***Use a designated power supply and the voltage.**
-When it is charge by wrong power supply and voltage, may result in the product damaged.
- ***Stop to use immediately when abnormality of a smell, an ion, smoke generation, fever, discoloration or transformation was seen during safekeeping, charging or in use.**
-If do not stop to use, may result in personal injury, burn.
- ***Do not give the strong impact such as tread, throwing or vibration.**
-Doing so, may result in the product damaged.
- ***Do not place a conductivity substance (such as a core of metal fragment or a pencil) in terminal, or do not make a terminal short-circuit, also do not put the liquid or the dust in terminal of this product.**
-Doing so, may result in the product damaged.
- ***Do not touch a terminal by hand, finger or metal strap when inserting or removing a microUSB cable to this product.**
-Doing so, may result in the product damaged.

CAUTION

- ***Do not use while being damaged.**
- ***Do not use if a terminal or a microUSB cable hurt.**
- ***Remove a microUSB cable from this product when it is not used or charged.**
- ***When a child uses this product, a guardian must teach a handling process and make them sure to use appropriately.**
- ***Do not leave this product at the place an infant reaches.**
- It may causes a swallowed by mistake or an injury.
- ***When this product is left long, the voltage will fall down by own discharge, please charge this product before using.**
- ***Do not throw away this product as a general trash, it should be processed with a regulation of a local government.**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

管理者登録




<p>STEP1</p> <p>1.登録したい錠を選んで、'Register' (登録) ボタンをタップします。</p>	<p>STEP2</p> <p>2.錠が登録されると、メッセージが表示されます。</p>	<p>STEP3</p> <p>3.管理者として登録されると、錠記号の右上に赤い丸印が表示されます。</p>
---	---	---

 ユーザー登録

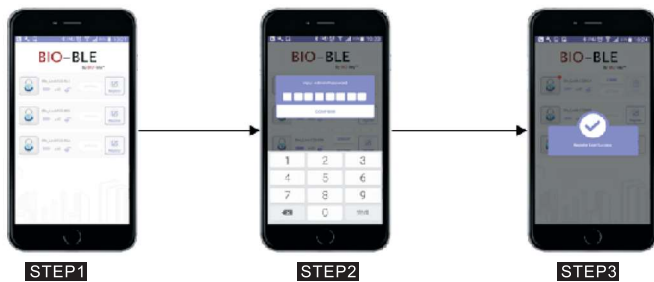

<p>STEP1</p> <p>1.登録したい錠を選んで、'Register' (登録) ボタンをタップします。1人目の登録者が管理者となり、それ以外はユーザーとなります。</p>	<p>STEP2</p> <p>2.管理パスワードを入力します。</p>	<p>STEP3</p> <p>3.登録されました。</p>
---	---	---------------------------------------

 設定変更

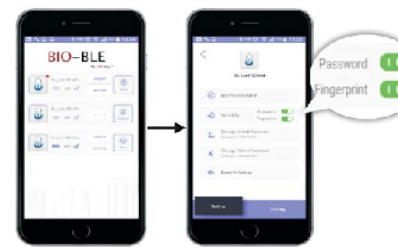


錠を選んで'Setting' (設定) をタップするとその錠の詳細設定が表示されます。

次の設定変更が可能です:

 - 錠の名前の変更
- 開錠方法の切替:
Fingerprint(指紋)を使う
Password(パスワード)を使う
- 開錠パスワード(8桁)の変更
(初期値 33333333)
- 管理パスワード(8桁)の変更
(初期値 00000000)
- 工場出荷時の設定に戻す

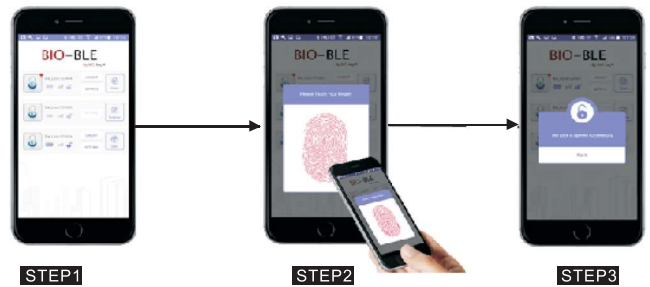


開錠



<p>STEP1</p> <p>1.Openアイコンをタップ</p>	<p>STEP2</p> <p>2.'Fingerprint' (指紋) オプションがオンになっているときは、指紋認証画面が表示されます。スマートフォンの指紋センサーに指をおいてスキャンしてください。</p>	<p>STEP3</p> <p>3.錠が開きます。</p>
---	---	--------------------------------------

安全上のご注意

- ・ご使用前に、この「安全上のご注意」をよくお読みの上、正しくお使いください。また、お読みになった後は大切に保管してください。
- ・ここで記述された注意事項は、お使いになる人や、他の人への危険、財産への損害を未然に防ぐための内容を記載していますので、必ずお守りください。**表示の説明**
- ・次の表示の区分は、表示内容を守らず、誤った使用をした場合に生じる危害や損害の程度を説明しています。

 危険	この表示は、取扱いを誤った場合、「死亡または重傷を負う危険が切迫して生じることが想定される」内容です。
 警告	この表示は、取扱いを誤った場合、「死亡または重傷を負う可能性が想定される」内容です。
 注意	この表示は、取扱いを誤った場合、「軽傷を負う可能性が想定される場合および物的損害の発生が想定される」内容です。

危険

- ・分解、改造をしないでください。
 - 火災、やけど、けが、感電などの原因となります。
- ・火の中に投入したり、電子レンジ、IH調理器などの過熱調理器で熱を加えたり、圧力釜などの高圧容器に入れたり、近くに置いたりしないでください。また炎天下の車内などに放置しないでください。
 - 火災、やけど、けが、感電などの原因となります。

警告

- ・指定の電源、電圧で使用してください。
 - 誤った電源、電圧で充電すると本機の故障の原因となります。
- ・使用中、充電中、保管中に、異臭、イオン、発煙、発熱、変色、変形などの異常が見られた場合は、ただちに使用を中止してください。
 - 本機の故障の原因となります。
- ・落下させる、踏みつける、投げつけるなど強い衝撃、振動を与えないでください。
 - 本機の故障の原因となります。
- ・本機の端子に導電性異物（金属片、鉛筆の芯など）を接触させたり端子をショートさせないでください、また、水などの液体やほこりが内部に入らないようにしてください。
 - 本機の故障の原因となります。
- ・本機にmicroUSBケーブルを抜き差しするときは、金属製ストラップなどの金属類を端子に接触させたり、手や指など体の一部を触れないでください。
 - 本機の故障の原因となります。

注意

- ・本機が破損したまま使用しないでください。
- ・microUSBケーブルのコードや端子が痛んだら使用しないでください。
- ・使用しない場合には本機からmicroUSBケーブルを抜いてください。
- ・子供が使用する場合は、保護者が取扱い方法を教え、誤った使い方をさせないでください。
- ・乳幼児の手の届く場所に置かないでください。
 - 誤って飲み込んだり、けがなどの原因となります。
- ・本機を長時間放置しておくとも自己放電により電圧が低下します。ご使用前に充電を行ってください。
- ・不要になった本機を一般のゴミと一緒に捨てないでください。地方自治体の条例に従って処理するをお願いします。