

FUSION⁵

User Manual



FWIN232 PLUS S2

Welcome

Thank you for choosing the Fusion5 Windows tablet. This portable device is designed to take advantage of micro-mobility and direct interaction through touch input and wireless connectivity (Wi-Fi/Bluetooth) to provide distinct and different experiences for both study and entertainment. This is a tablet when you want it and a laptop when you need it.

This manual will introduce the main function, operation method and other information. Please read this manual carefully before using the device. This user guide describes features that are common to most models.

Package Contents

Please check carefully for the following items inside the package. If anything is missing or appears to be damaged, please

- Tablet PC
- Docking Keyboard (Optional)
- Charger Cable
- User Manual
- Warranty Card

Safety Notice

1. Do not store the device in extreme hot, cold, dusty, dry, or humid environment.
2. Handle the device with care. The device can be damaged if dropped, burned, punctured, or crushed, or if it comes in contact with liquid. Do not put heavy objects on laptop which can damage it. Consider using a case or cover to protect the device.
3. Do NOT attempt to open the device by yourself. Disassembling the device may damage it or cause injury to you. We do NOT assume the responsibility of data loss by unauthorized repairs or wrong operation. Please contact Vulcan Electronics or an authorized service provider.
4. The storage capacity on the operating system will be smaller than the storage specified. This is normal and standard as the software requires certain space.
5. Please note that the new battery is only able to achieve best performance after two or three full charge and discharge cycles. During the first three full charge cycles, please make sure to charging for at least 8-10 hours. After this, the battery can be fully charged in about 4 cycles of 8-10 hours. This ensures that the lithium battery will achieve its best performance in the future.
6. Please charge the battery under below situations:
 - The battery icon show low battery level and requests charging
 - Device power off automatically
 - Operating but is unresponsive




Do NOT throw the device in municipal waste. The symbol of the crossed out wheeled bin indicates that device should not be placed in municipal waste. Check local regulations for disposal of electronic products.



The device contains a lithium-polymer battery that is flammable. Do NOT throw the Tablet PC in fire. Do NOT short circuit the contacts.

Appearance and buttons

- | | |
|--------------------|----------------|
| 1 Power On/Off | 7 Speaker |
| 2 Volume + | 8 USB Port |
| 3 Volume - | 9 TF Card Slot |
| 4 Camera | 10 Type C |
| 5 Keyboard Docking | 11 HDMI |
| 6 DC In | 12 Earphone |

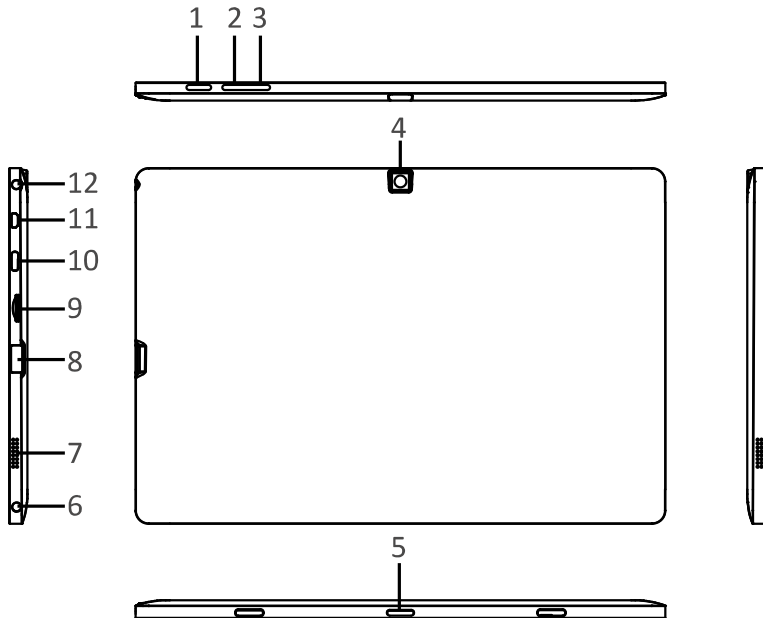

Basic Operation

Turn the Tablet On

To turn the Tablet On.

Press and hold the Power button.

To turn the Tablet Off.

1.Press the power button to turn off. Press and hold to shut down.

2.Go to  > Power > Shut Down to turn off the tablet.

Installing the Storage Card

TF/Micro SD™ cards are available in a wide range of capacities, varying from 128MB to 128GB

Install TF/Micro SD™ Card

1.Find the slot for the TF/Micro SD™ card.

2.Insert the TF/Micro SD™ card gently.

Remove TF/Micro SD™ Card

1.Unmount the SD Card (Menu>Settings>Storage>Unmount SD Card).

2.Turn off the tablet.

3.Push the TF/Micro SD™ card to eject from the slot.

4.Remove the TF/Micro SD™ card.

Note:

When Micro USB port is connected to other devices, please remove USB cable before turning off tablet.

Connect Devices


Add a Bluetooth Device

1. Turn on the bluetooth device and make it discoverable. To learn how to check the info that came with your bluetooth device or the manufacturer's website.
2. Make sure Bluetooth turned on, then wait while windows searches for bluetooth devices.
3. Follow the onscreen instruction to finish pairing your device for your accessory requires a pairing code, you'll be prompted for it. If you don't know the code, check the info that came with your device on the manufacturer's website.


Account Setup

New account setup and sign in

A Microsoft account is the email address and password that you use to sign in to services like Outlook.com, OneDrive, Windows Phone, and Xbox. If you use an email address and password to sign in to these Microsoft services, then you already have a Microsoft account. To switch from a local account to a Microsoft account:

1. Go to , click Settings > Account > Your Account > Connect to a Microsoft account.
2. Sign in to your Microsoft Account. If you do not have an account or more than one person uses your device, you can create a new account to sign in and personalize everything. Select Add a Microsoft Account and follow the onscreen instruction.


To create a user account

To create another user, Go to , click Settings > Account > Family & other users > Add Family or Add someone else to this PC. Follow the onscreen instruction. You can setup the new account as an Administrator, Standard User, or Child.

Family Safety

Family Safety is an integrated part of Windows, so it's easier than ever to keep track of when and how your kids use the device.

To setup and manage Family Safety


Go to , click settings > Account > Family & other users > Add Family > Add a minor. Follow the onscreen instruction. You can set limits on exactly which websites, apps, and games they're allowed to use.

Unlock and sign in

Here's how to unlock and sign in to your device:

1. Press a key, or press and release the Power button.
2. Dismiss the lock screen by swiping up from the bottom edge of the screen or pressing a key.
3. If prompted, type the password for your account. If you want to sign in with a different account, tap or click the Back button.

To create or change a password

1. Go to , click Settings >Account > Sign-In Options.
2. You have the choice of Password, Picture password, and PIN
2. Click Add and follow the onscreen instructions.
3. If you already have a password, click Change and follow the onscreen instructions.

Choose when a password is required

You can choose when a password is required to sign in.

1. Go to , click Settings >Account > Sign-In Options.
2. Select your choice under Password Policy.

Wi-fi

This device has built-in Wi-Fi that you can use to connect to a wireless network. If you don't know your wireless network password, use the info below to find it.

Find your password on your hardware

Some wireless router manufacturers set a default security key or password which may be on the bottom of your router or in the router's documentation. Look for the following terms:

Security Key
Wireless Key
WPA Key
WPA2 Key
WEP Key

Find your password on a Windows PC

If you have a computer running Windows that is connected to your wireless network, you can find the password by doing the following:

Windows 10: Find your password

Step 1: Go to , click Settings

Step 2: In the Find a setting box, enter "view network connections", and in the search results tap or click View network connections.

Step 3: In the Network Connections window, press and hold or right-click the network name, and then tap or click Status.

Step 4: Tap or click the Wireless Properties button.

Step 5: Tap or click the Security tab, and tap or click the Show characters check box.

Step 6: The password for the wireless network is displayed in the Network security key field.

Apps and Programs

Use apps and programs

Find and open apps Like the Start button in previous versions of Windows, the Start screen is where you go to start apps. This can run two types of apps:

- Windows Store apps—such as Music, Mail, and Weather.
- Desktop apps—such as Notepad and Office . To find an app or program on your device:
 - Apps view. Swipe up from the center of the Start screen (or click on the lower-left of Start). A list of apps appears. Type an app name or scroll to see all your apps.
 - Use Search. Open the Search charm, and type an app name like Skype or Outlook.
- If you don't see the app or program you want, look in the Windows Store.

You can also start desktop apps from the desktop. You can create shortcuts for desktop apps or pin the desktop apps that you frequently use to the taskbar. For info about this, see [How to use the taskbar on Windows.com](#).

Gestures

To go to Start:


- Touch. Press the  Windows button on the touchscreen.
- Keyboard. Press the Windows logo key on your keyboard.
- Mouse. Click the Start button in the lower-left corner of the screen.

Open apps

- Touch or mouse. Tap or click an app tile on the Start screen. Or, enter an app name in the search box.
- Keyboard. Go to Start and enter an app name (such as Word or OneDrive).

You can see all your apps by swiping up from the center of the Start screen. Or, if you're using a mouse, click the arrow in the lower left corner of the screen.



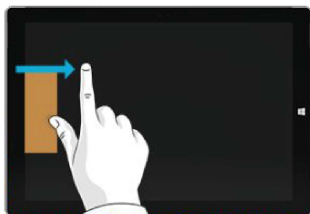

Switch between open apps You can switch between open apps by swiping in from the left edge of the screen. You can keep swiping, and each time you'll switch to another app.






Gestures (Cont.)

Touch: Swipe, tap, and beyond


Here's a glossary of touch gestures that you can use.

Gesture	How to do it	What it does
<p data-bbox="154 360 193 384">Tap</p> 	<p data-bbox="406 360 630 384">Tap once on an item.</p>	<p data-bbox="701 360 983 435">Opens, selects, or activates whatever you tap. Similar to clicking with a mouse.</p>
<p data-bbox="154 572 294 596">Tap and hold</p> 	<p data-bbox="406 572 656 647">Press your finger down and hold for about a second.</p>	<p data-bbox="701 572 986 748">Shows info to help you learn more about an item or opens a menu specific to what you're doing. Only works for some items. Similar to right-clicking with a mouse.</p>
<p data-bbox="154 788 325 812">Pinch or stretch</p> 	<p data-bbox="406 788 680 940">Touch the screen or an item with two or more fingers, and then move the fingers toward each other (pinch) or away from each other (stretch).</p>	<p data-bbox="701 788 992 836">Zooms in or out, like with a website, map, or picture.</p>
<p data-bbox="154 1051 227 1075">Rotate</p> 	<p data-bbox="406 1051 669 1126">Put two or more fingers on an item and then turn your hand.</p>	<p data-bbox="701 1051 953 1155">Rotates items in the direction you turn your hand. Only some items can be rotated.</p>

Gestures (Cont.)

Gesture	How to do it	What it does
<p data-bbox="154 276 300 300">Slide to scroll</p> 	<p data-bbox="400 276 652 323">Drag your finger on the screen.</p>	<p data-bbox="695 276 977 355">Scrolls through what's on the screen. Similar to scrolling with a mouse.</p>
<p data-bbox="154 483 350 507">Slide to rearrange</p> 	<p data-bbox="400 483 675 762">Press and briefly drag an item in the direction opposite the way the page scrolls, then move it wherever you want. (For example, if you would scroll left or right, drag the item up or down.) When you've moved the item to the new location, let it go.</p>	<p data-bbox="695 483 977 531">Moves an item. Similar to dragging with a mouse.</p>
<p data-bbox="154 786 322 810">Swipe to select</p> 	<p data-bbox="400 786 680 914">Swipe an item with a short, quick movement in the direction opposite the way the page scrolls. For example:</p> <ul data-bbox="400 930 680 1106" style="list-style-type: none">* If the page scrolls left or right, swipe the item up or down to select it.* If the page scrolls up or down, swipe the item left or right to select it.	<p data-bbox="695 786 983 834">Selects an item, and often brings up app commands.</p>

Gestures (Cont.)

Gesture	How to do it	What it does
<p data-bbox="152 284 333 308">Swipe from edge</p> 	<p data-bbox="400 284 669 408">Starting on the edge, either swipe your finger quickly or slide across the screen without lifting your finger.</p>	<ul data-bbox="695 284 997 1126" style="list-style-type: none"><li data-bbox="695 284 997 488">* Open the charms (Search, Share, Start, Devices, Settings). Swipe in from the right edge. Open a recently used app. Swipe in from the left edge. Keep swiping to switch between all of your recently used apps.<li data-bbox="695 501 997 705">* Open another app at the same time. Slide in from the left edge without lifting your finger and drag the app until a divider appears. Then move the app where you want it, and slide the divider to adjust the app size.<li data-bbox="695 718 997 868">* See a list of recently used apps. Slide in from the left edge without lifting your finger, and then push the app back toward the left edge.<li data-bbox="695 880 997 986">* Show commands for the current apps, like New and Refresh. Swipe in from the top or bottom edge.<li data-bbox="695 999 997 1126">* Close an app. Slide down from the top edge without lifting your finger, and then drag the app to the bottom of the screen.

Troubleshooting

The following sections describe several common issues and solutions.

The Device is unable to start up

- If the device does not turn on when you press the power button, the following suggestions may help you determine why the computer does not start up:
- If the computer is plugged into an AC outlet, plug another electrical device into the outlet to be sure that the outlet is providing adequate power.



NOTE:

- If the computer is plugged into an external power source other than an AC outlet, plug the device into an AC outlet using the AC adapter. Be sure that the power cord and AC adapter connections are secure.

The device is unusually warm

- It is normal for the device to feel warm to the touch while it is in use.
- If you suspect that the computer is overheating, allow the computer to cool to room temperature.



WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the device directly on your lap. Use the device only on a hard, flat surface. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation.

If the screen is blank but you have not turned off the computer, one or more of these settings may be the cause:

- The device may be in the Sleep state. To exit Sleep, briefly press the power button. Sleep is an energy-saving feature that turns off the display. Sleep can be initiated by the system while the computer is on but is not in use, or when the computer has reached a low battery level. To change these and other power settings, right-click the Battery icon on the Windows desktop in the notification area, at the far right of the taskbar, and then click Preferences.

Software is functioning abnormally

If the software is unresponsive or responds abnormally, restart the computer by point/touch to the right side of the screen. When the charms display, click Settings. Click the Power icon, and then click Shut down. If you cannot restart the computer using this procedure, see the previous section, The computer is on but not responding.

Troubleshooting

The following sections describe several common issues and solutions.

The Device is unable to start up

- If the device does not turn on when you press the power button, the following suggestions may help you determine why the computer does not start up:
- If the computer is plugged into an AC outlet, plug another electrical device into the outlet to be sure that the outlet is providing adequate power.



NOTE:

- If the computer is plugged into an external power source other than an AC outlet, plug the device into an AC outlet using the AC adapter. Be sure that the power cord and AC adapter connections are secure.

If the device is turned on but is not responding to software or keyboard commands, try the following emergency shutdown procedures, in the sequence provided, until shutdown occurs:



CAUTION:

- Hold the power button for at least 5 seconds.

The device is unusually warm

- It is normal for the device to feel warm to the touch while it is in use.
- If you suspect that the computer is overheating, allow the computer to cool to room temperature.



WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the device directly on your lap. Use the device only on a hard, flat surface. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation.

If the screen is blank but you have not turned off the computer, one or more of these settings may be the cause:

- The device may be in the Sleep state. To exit Sleep, briefly press the power button. Sleep is an energy-saving feature that turns off the display. Sleep can be initiated by the system while the computer is on but is not in use, or when the computer has reached a low battery level. To change these and other power settings, right-click the Battery icon on the Windows desktop in the notification area, at the far right of the taskbar, and then click Preferences.

Software is functioning abnormally

If the software is unresponsive or responds abnormally, restart the computer by point/touch to the right side of the screen. When the charms display, click Settings. Click the Power icon, and then click Shut down. If you cannot restart the computer using this procedure, see the previous section, The computer is on but not responding.

Follow these suggestions if an external device does not function as expected:

- Turn on the device according to the manufacturer's instructions.
- Be sure that all device connections are secure.
- Be sure that the device is receiving electrical power.
- Be sure that the device, especially if it is older, is compatible with the operating system.
- Be sure that the correct drivers are installed and updated.

The wireless network connection is not working

If a wireless network connection is not working as expected, follow these suggestions:

- To enable or disable a wireless or wired network device, right-click the Network Connection icon on the Windows desktop in the notification area, at the far right of the taskbar. To enable devices, select the check box from the menu option. To disable the device, clear the check box.
- Be sure that the wireless device is turned on.
- Be sure that the computer wireless antennas are free from obstructions.
- Be sure that the cable or DSL modem and its power cord are properly connected and that the lights are on.
- Be sure that the wireless router or access point is properly connected to its power adapter and to the cable or DSL modem, and that the lights are on.
- Disconnect and then reconnect all cables, and turn the power off and then back on.

Cleaning your computer

Cleaning products

Use the following products to safely clean and disinfect your device:


- Dimethyl benzyl ammonium chloride 0.3 percent maximum concentration (For example: germicidal disposable wipes. These wipes come in a variety of brand names.)
- Water with mild soap solution
- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes



CAUTION:


Cleaning procedures

Follow the procedures in this section to safely clean your device.

 **WARNING!** To prevent electric shock or damage to components do not attempt to clean your computer while it is turned on:

Turn off the device.

Disconnect external power.

 **CAUTION:** Do not spray cleaning agents or liquids directly on any device surface. Liquids dripped on the surface can permanently damage internal components.

Cleaning the display

Gently wipe the display using a soft, lint-free cloth moistened with an alcohol-free glass cleaner. Be sure that the display is dry before closing the display.

Cleaning the sides and cover

To clean and disinfect the sides and cover, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable germicidal disposable wipe.



NOTE:

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.