
Smart Watch L5 User Manual

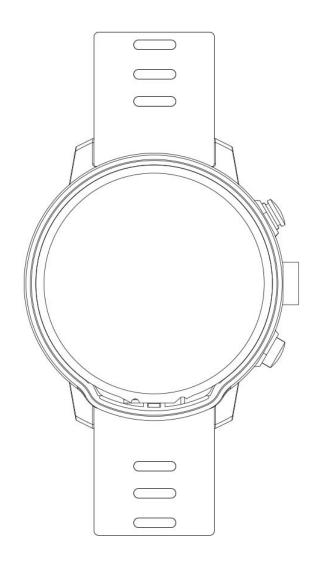

Thank you for choosing our product!

To have a comprehensive understanding and using this device, to know all the features and simple operation method, please read this manual first.

The functions on the user manual may be little different with physical, please make the final products as the standard.

The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.

Package: One gift box, one user manual, one smart band unit.

Remark: The product supports waterproof with IP68 level, it is available to wear it while wash hands, swim, in raining, etc.


⚠Do not use it when have a hot shower/bath or sauna, the vapors will get into the host, scratch damage of peripheral components. All these are beyond the scope of the warranty.

Buttons Instruction:

Switch button: long press to switch on/off the device, short press to on/off the screen; short press in the operate interface to back homepage.

Torchlight: Switch light on/off.


Touch instructions: tap to select and enter a menu, slip right to return. At the home slide down into status bar; slide right into notification center; slide left to enter the main menu.

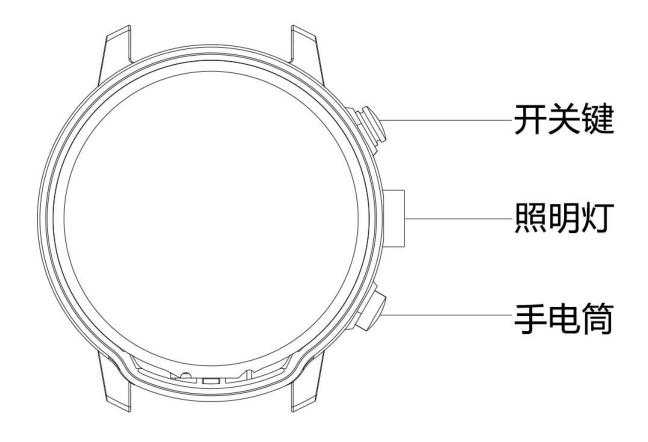

开关键: Switch button 照明灯: Light lens 手电筒: Torchlight button

Charging instruction: this product adopts magnetic force charging. Put the charging point connect to the back of the device charging pins, it will charge automatically. It usually takes 2 hours to full charging, device standby time up to 30 days, 5-7 days for working. Do not use the watch when charging.

Caution: Do not make the magnetic charging cable any 2 pins connect with conducting material at same time, it may cause short circuit.

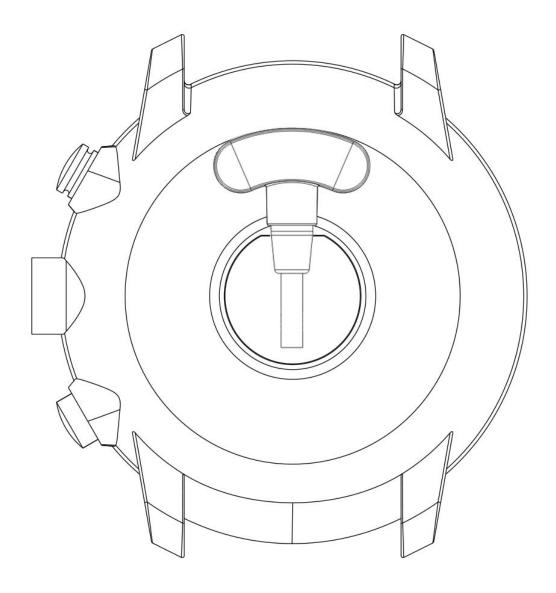

Watch connects to Phone, download the App "Fundo" in the Phone at very first, reference following 2 methods:

- 1) Android/iOS Phone: Scan following QR code image by browsers or by any Scanner to Download "Fundo".
 - 2) Android Phone: search and download "Fundo" app from Google Play; iOS phone: search and download "Fundo" app from Apps Store;



After installation, turn on cellphone Bluetooth and Fundo App, confirm the notifications and others permission Apps asks are enabled, and fill up personal information. Tap "Add device", search "L5XXX" device (turn on the GPS in the smart phone before binding) and tap connect.

• **Firmware upgrade:** When Bluetooth connected, in same interface of "**Fundo**", click "More- "Updates", if there is new firmware available, click to update to the latest watch firmware version.

Notice: If it is unsuccessful to upgrade, please reconnect the Bluetooth and try to upgrade again.

As the Bluetooth protocol is different between all the mobile phone brands. Sometimes the Bluetooth connection will be instability between mobile phone and smart watch. Please restart the Bluetooth, then try to connect again. Some settings on the phone need to be done for the data transmission work smoothly. Please ignore if your phone does not have those functions below:

Main Features:

- Language/Time/Date: It will synchronize the date & time from the phone when Bluetooth is connecting.
- **Standby interface:** There are couples of dials for options, long press 2 seconds on the home button to change when on the homepage.
- Status Bar: pull-down from the standby state screen. There will show Bluetooth connection status, power percent information and brightness adjust. Slide left in status bar to enter weather information, data sync from App, need keep phone GPS and network on.

Settings

About: Tap to enter, check device model, firmware version, Bluetooth address.

QR code: Scan to download Fundo.

Reset: Recovery device.

- **Notifications:** synchronous all the phone notifications, such as Facebook, WhatsApp, SMS, Email etc., if you want to display the notifications with contents, need to setup to display the details of Facebook and WhatsApp notice function in the Apps in the phone, it can show the latest 5 notifications, you can read the details, slide to read next message. It will vibrate for incoming calls and messages. Press the Home Button to stop the vibration.
- Activity info: Showing the health data including Steps, Mileage, Calories of the day and it will be saved at 12 o'clock every night then reset to 0 in the coming day. In the histories you can find all the data that saved inside.
- Exercise: Select a sport mode to record your work out. It will pause when press the power button, then can choose to save, delete or continue the measuring. It will record calories and heart rate in all the modes, you can check the details by sliding the screen.
- **Health:** Tap to enter, there are Heart rate and SPO2H, slide down to check history. **Heart rate:** Waiting 2 seconds to start measuring and record the heart rate data by scanning the surface capillary of the skin by green optical, slide to other menus to stop measuring. Normally it will be 60-90 bpm, professional athletes may less than 60 bpm. When doing strenuous exercise, the date may up to 200 bpm. Keep exercising can increase heart and lung.

Blood Oxygen: SPO2H, it is the percent of oxygen in blood, normal rate is 94-99%.

- Sleep monitor: The smart watch will turn on it automatically from 10p.m to 8a.m. You can check the details of sleep quality by connecting Apps in the phone.
- **Stopwatch**: Press the start and pause, again press for stop.
- Remote control music: Play the music at phone side, control at the watch side.
- More

Alarm: Set several alarm clocks through the App in the phone.

Sedentary Reminder: You can set time to remind yourself stand up.

Find your phone: Tap it and phone makes a ringtone alert.

Wrist bright screen: Set it in the App, it takes more power consumption when it is on.

Units Setup: Metric or British system.

Data transmission: All the data will be saved in the device. No matter pedometer, heart rate, sleep quality, and multi-sport mode, the data all can be transmitted to the APP in the phone.

Warranty

1. If it appears quality problems caused by manufacturing, materials, design within one year (since the day of purchase), we will offer free warranty for main part. We

- will offer free warranty for battery and adapter within 6 months. Premise is using normally and correctly.
- 2. About the fault caused by the users' personal reasons, we don't offer free warranty, as follows:
- 1). Disassemble or refit the product.
- 2). Caused by immodesty drop
- 3). All artificial damage or misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral components, etc.), all these are beyond the scope of the warranty.
- 3. When ask for free warranty, you must provide a warranty card with the seal of purchase place and purchase date.
- 4. If you met problems during use, please contact the shop customer service which you bought from.
- 5. Please make the final products as the standard.

Date of purchase:

IMEI code:

Buy store:

Customer signature:

Clerk Signature:

Shop stamp:

FCC statement:

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between theequipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.