



Symphony



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

Safety Precautions

Warning: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFEGUARDS

Caution: Please carefully read all of the following important safeguards to ensure safe operation.

1.Read Instructions:

All the safety and operating instructions should be read before the appliance is operated.

2.Retain Instructions:

The safety and operating instructions should be retained for future reference.

3.Follow Instructions:

All operating instructions should be followed.

4.Heed Warnings:

All warnings on the unit and the operating instructions should be adhered to.

5.Power Source:

The appliance should be connected based on instructions.

6.Heat:

Keep the unit away from heat sources such as radiators, refrigerators, stoves or other appliances that may radiate heat.

 
7.Non-use Periods:

The power cord of the unit should be unplugged from the outlet when you do not use it for a long time.

8.Damage requiring service:


The unit should be repaired by qualified service personnel in the following cases:

- The power plug or cable has been damaged;
- Objects have fallen or liquid has been spilled on the appliance;
- The appliance has been exposed to rain;
- The appliance is functioning abnormally.

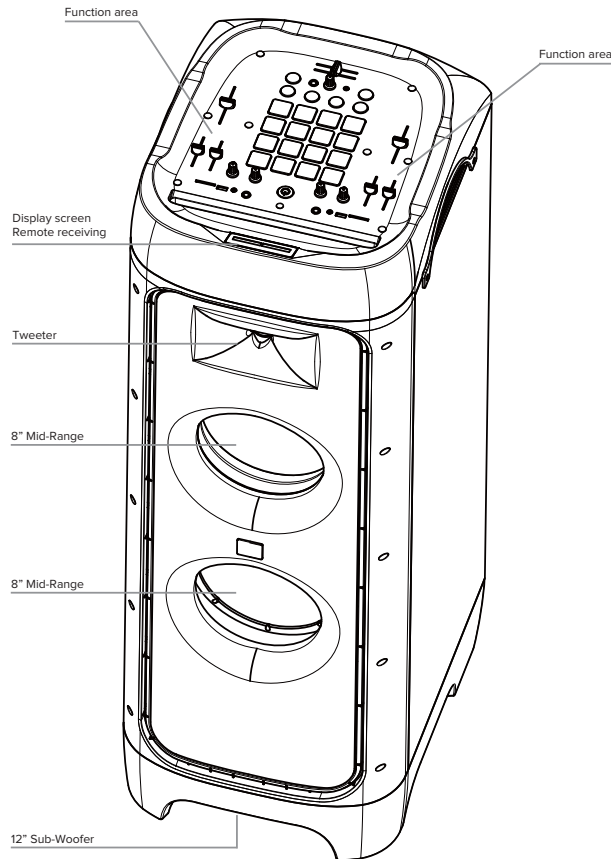

1

 
FRONT PANEL-CONTROLS AND FUNCTIONS

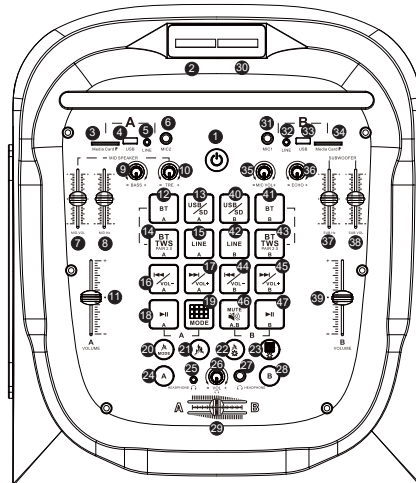

- | | |
|-----------------------------------|---------------------------------------|
| 1.Power ON/OFF | 24.A System headphone output |
| 2.A System display screen | 25.Headphone output slot |
| 3.A System SD card input slot | 26.Headphone Volume |
| 4.A System USB input slot | 27.Headphone output slot |
| 5.A System Line input slot | 28.B System headphone output |
| 6.Microphone 2 input slot | 29.A.B System fader |
| 7.Mid Speaker -Range Volume | 30.B System display screen |
| 8.Mid Speaker -Range Frequency | 31.Microphone 1 input slot |
| 9.BASS increase/weakers | 32.B System Line input slot |
| 10.Treble increase/weakers | 33.B System USB input slot |
| 11.A System Volume control | 34.B System SD card input slot |
| 12.A System BT input key | 35.Microphone volume increase/weakers |
| (BT searching name:Symphony A) | 36.ECHO increase/weakers |
| 13.A System USB/SD card input key | 37.Subwoofer -Range Frequency |
| 14.A System TWS | 38.Subwoofer -Range Volume |
| 15.A System Line input key | 39.B System Volume control |
| 16.A System Previous key, | 40.B System USB/SD card input key |
| long press for volume decrease | 41.B System BT input key |
| 17.A System next key, | (BT searching name:Symphony B) |
| long press for volume increase | 42.B System Line input key |
| 18.A System Play/Pause key | 43.B System TWS |
| 19.Button light mode switch | 44.B System Previous key, |
| 20.Front panel light mode | long press for volume decrease |
| 21.Front panel light fire mode | 45.B System next key, |
| 22.Front panel light switch | long press for volume increase |
| 23.Button light switch | 46.A.B System mute of whole unit |
| | 47.B System Play/Pause key |


2

 TWS mode

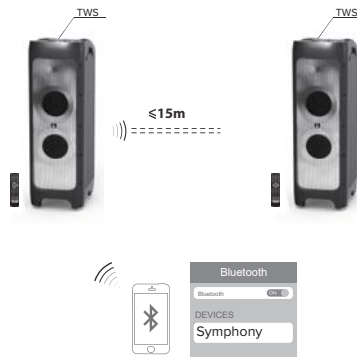


Under Bluetooth mode, connect to the other speaker which is also selected TWS function by pressing TWS button, to get the effect of using two speakers at the same time and play music under bluetooth 2.0 channel.
TWS can be only used under bluetooth function, and will not work if the speaker is set AUX or USB/SD mode.

 CONNECTIONS

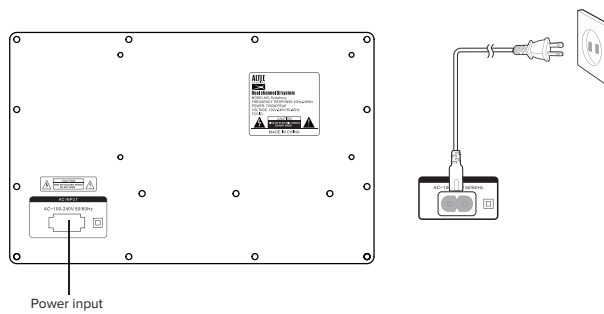

3

 REMOTE INSTRUCTION

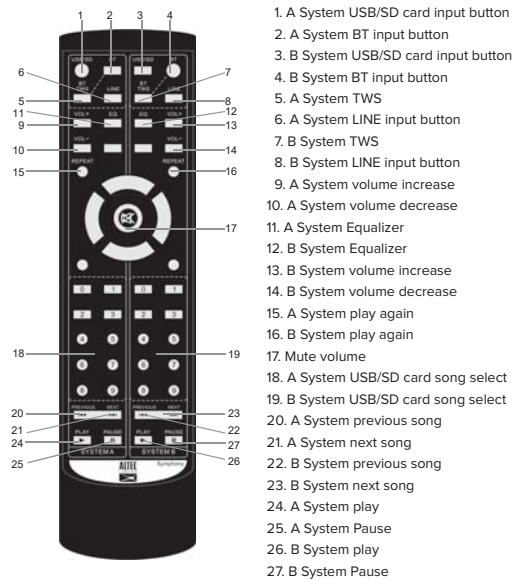


Accessories



HOW TO USE BLUETOOTH CONNECTION

 Dual Bluetooth Speaker

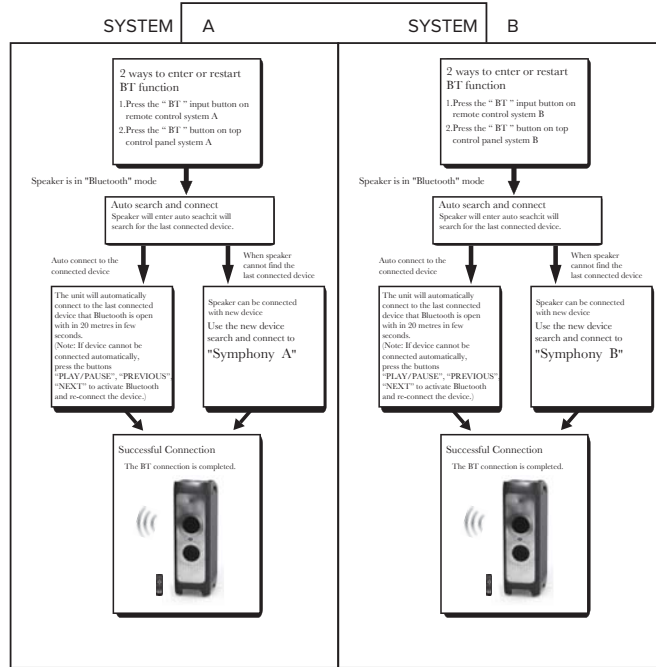

Limited Warranty

This Limited Product Warranty is provided by Britelite Enterprises. Britelite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then Britelite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to Britelite by emailing service@britelite.net or calling 310-363-7110 (Mexico customers can call 0155 4624 0251). Please retain the original dated receipt as evidence of proof of purchase.



Important: Please read this before returning this product

Please do not return the product to the dealer or initial place of purchase.
If your having difficulties installing or using this product, our support organization can help you regarding installation, set up and missing or replacement parts.

You can contact us:
E-mail- Service@britelite.net
Phone- (888)-604-8881
In Mexico Please Call 0155 4624 0251



FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.