

**PORTABLE MICROPHONE  
CS-M008 KARAOKE SPEAKER WITH HOLDER**



 
**The User Manual**

 
**Thank you for choosing Portable Microphone CS-M008 Karaoke Speaker.  
Please read this manual before usage.**

## Technical Specification

- Name: Portable Wireless Microphone Bluetooth Speaker with holder
- Item NO.:CS-M008
- Source Input: TF Card/USB/BT/ Flashing Light/LINE-OUT
- Input:DC5V;500mA
- Output Power:5W\*1
- Bluetooth version:V4.2
- Wireless frequency:2404-2480MHz
- Product size:80\*74\*277mm
- Weight:407.6g
- LED power:800mw
- Distortion: <1%
- Battery capacity:1200mAh
- Material: ABS
- Charging Time: About 4 hours
- Playing Time : About 8 hours( The playing time depends on volume and LED)
- Transmission distance: about 10m

## Illustration

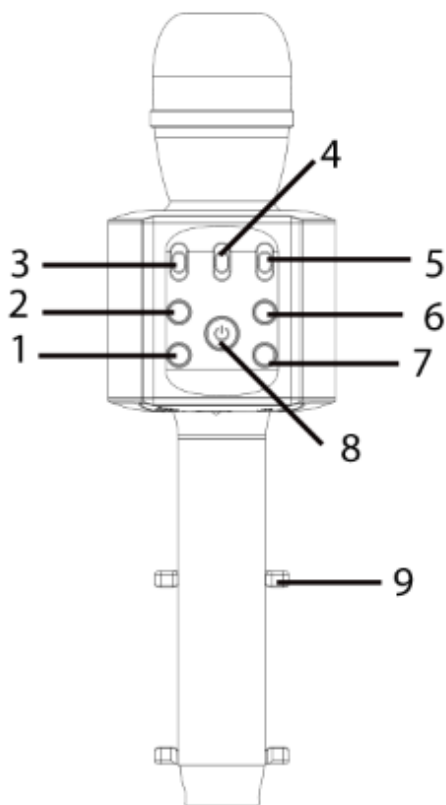

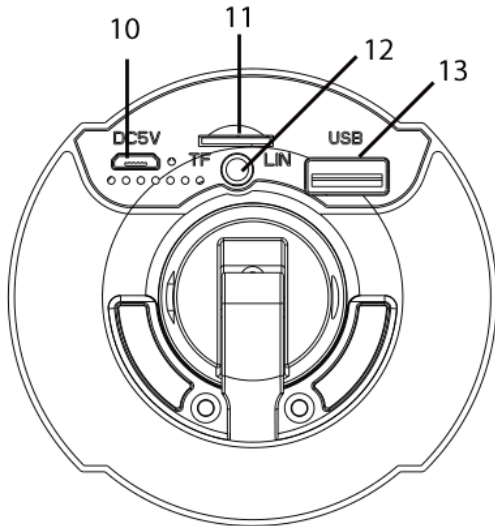

1. Play/pause button
2. Previous song
3. Mic volume +/-,slide switch
4. Echo+/-,slide switch
5. Music volume +/-,slide switch
6. Next song
7. LED lights on/off
8. Power on/off; mode: Bluetooth/TF card/USB reader
9. Phone holder
10. USB charging socket
11. TF card socket
12. Line-out socket
13. USB driver socket


### **Charging**



Please make sure that the CS-M008 karaoke speaker is fully charged before first use.

- Connect the product with USB cable.
- The indicator will show red light when charging.
- The indicator will turn off when fully charged.

### **Bluetooth Pairing**

1. Turn on Microphone (Long press  button ), LED light will come on and will release "Bluetooth

mode”.

2. You can search “ CS-M008 ”to connect it on your device. Once connect successfully there will be sound indicate that “Connected”.
3. Enter ‘0000’ and click OK if there a prompt that requires you to enter a password.
4. Apply any karaoke APP or select song from your device music player, and adjust Mic Volume, Echo, to the right position.
4. You can sing along with Microphone.

### **TF card mode**

1. Turn on Microphone, Insert the TF card preloaded with songs, you will hear “SD card mode”sound into the TF Card Slot of the speaker respectively. Speaker would automatically start playing songs from the TF Card.
2. To adjust next song:Short press the ►► button.
3. To adjust previous song:Short press the ◀◀ button.
4. To Pause the Track:Short press the ►|| button.
5. To Play the Track:Short press the ►|| button.

### **USB card mode**

1. Turn on Microphone, Insert the USB driver preloaded with songs, you will hear the sound into USB driver slot of the speaker respectively. Speakerwould automatically start playing songs from the USB driver.
2. To adjust next song:Short press the ►► button.
3. To adjust previous song:Short press the ◀◀ button.
4. To Pause the Track:Short press the ►|| button.
5. To Play the Track:Short press the ►|| button.




### **Line-out mode**

When this speaker playing music, insert 3.5mm earphone to line-out socket, you will hear the sound from earphone. Then You can enjoy the beauty of music on the earphone. Or insert line-out cable to socket, on the other side to connect other BT speaker, BT speaker will paly beauty of music.


### **Karaoke with holder**

Make sure the speaker is in pairing mode, put your mobile phone on the holder(please take out phone case, it will be very stable without case). You can choose favorite song to karaoke,then you can watch lyric on the holder while you`re singing. It can give you happy feeling about KTV.

## **Magic sound**

Turn on Microphone, double click this  button to enter magic sound function, the microphone will release prompt sound to enter this function. then short press this  button again will change different sound (it has four magic sounds); Double click this  button again will exit magic sound function.

## **Troubleshooting**

The power light is not ON	Please check the USB cable and charge it.
The microphone has no sound.	Please turn power on and adjust the volume to big.
The microphone has no echo.	Please slide the echo to big, please do not put the speaker on the table under echo opening condition.
The sound has noise.	Please confirm whether environmental interference.
The music is no sound.	Please adjust the volume from cellphone or slide Microphone Volume to big.
The microphone can not Twins-connect	Please double-click the  button quickly of the two microphones separately.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.