BLUETOOTH SPEAKER WITH LIGHT User Manual



Notice: Please read user manual carefully and keep it for your records

Notice for Use:

1.For the first use, please charge the battery first. Do not play music while charging.

2.Please use certified DC 5V cable for charging.

3. When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.

4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.


Specification:


Material:ABS Bluetooth version: 5.0 Bluetooth distance: 10M Rechargeable battery: 1200mAh Speaker power: 2*3W Function: FM/USB/BT/TF/AUX /Handsfree /Led/TWS Dimension: 80*80*270mm Product N.W: 503g

Includes:

1*Micro USB charing cable 1*User Manual 1*Handle

Functional buttons:

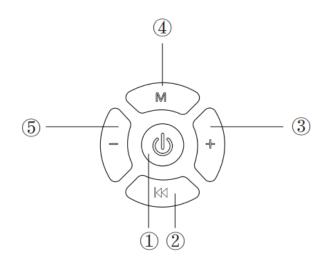

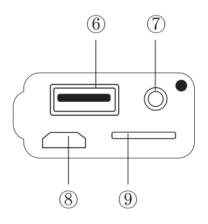

1 ON/OFF

2 Play/Pause

③Volume up/Next song

④ Mode switch

5 Volume down/Previous song

6 U disk playback

- (7) Aux-in slot
- ⑧Micro USB for charging
- (9) TF card playback

ON/OFF Button:

Long press to turn on/off the speaker.

When you turn on the device, a sound will indicate "Bluetooth mode". Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device "AS623BT".

Short press to change the lights mode, total 2 kinds of lights modes. Short press in sequence until finished, the lights will turn off.

M Button:

Short press to switch among BT,FM,USB Drive,TF Card and Aux-in mode. Long press to connect/disconnect TWS.

TWS Function(need 2pcs speakers):

Prepare 2pcs speakers and turn on,long press either M button of the 2 speakers to connect TWS.When you hear the prompt tone, that mean the TWS connection is successful.At this time, your phone will only show one bluetooth name, pair it,then you can hear two speakers playing music at the same time. Long press again to disconnect TWS.

Play/Pause Button:

Click to pause or play music; Double click in short time to redial the last number. For incoming calls, click to answer the call, click again to hang up the call, double click to reject the phone call.

Next Music/Increase Volume Button:

Short press to change to next music Long press to increase the volume

Previous Music/Decrease Volume Button:

Short press to change to previous music Long press to decrease the volume

USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

Aux-in Mode:

Plug 3.5mm cable to the AUX hole, and connect the other end of the 3.5mm cable into your music device such as mobile/MP3/PC.There will be a voice prompt when the AUX mode connection is successful.

Charging:

Connect the small end of the Micro USB charging cable (included) to the Micro USB port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor(not included).The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

Safety instructions:

Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods.

This product is not a toy. Use extra caution while children are using this product. Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibility reach over 200 degrees.Device may become warm while charging.Be assured to turn product completely off when plugging and unplugging into outlet. Damage, shock, and/or injury can occur if this warning is not heeded properly.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.