



CD/BLUETOOTH/FM RADIO



USER'S GUIDE MANUAL DE USUARIO MODE D'EMPLOI

MODEL NUMBER: CDB-234BT



TABLE OF CONTENTS

INTRODUCTIONS	3
SAFETY PRECAUTIONS.....	3
FCC WARNINGS	4
GENERAL INFORMATION	5
PLAYER CONTROLS	6
DISPLAY FUNCTION	8
CONNECTIONS.....	8
TROUBLESHOOTING.....	9
TECHNICAL SUPPORT	10
SPANISH.....	12
FRENCH.....	22

INTRODUCTIONS

Congratulations on your purchase of the CDB-234BT CD/FM RADIO. For your safety and to get the most enjoyment from your player, please completely read these instructions provided.

SAFETY PRECAUTIONS

READ THIS MANUAL CAREFULLY BEFORE OPERATING AND RESERVE IT FOR FUTURE REFERENCE. REFER TO IT WHEN ENCOUNTERING ANY OPERATING PROBLEM.

1. **WARNING:** To reduce the risk of electric shock or damage to the player's main speakers, do not disassemble the player. There are no user-serviceable parts inside. Contact technical support for further assistance.
2. **WARNING:** To prevent fire or electric shock hazard, do not expose the player to rain or moisture (including drips or splashes). Objects filled with liquids, such as vases and water bottles, should not be placed on or near the player.
3. **WARNING:** Do not expose the radio/cassette player or batteries to excessive heat, such as direct sunlight, fire, or other heat sources.
4. **WARNING:** Use only the attachments/accessories provided by the manufacturer, except for a standard 3.5 mm auxiliary cable.
5. Do not place objects on top of the player.
6. Do not place the player on an unstable table, stand, tripod, bracket or cart. The player may fall, resulting in possible damage or injury.
7. Unplug the power from the outlet during lightning storms or when the player is not in use.
8. Pay attention to the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the player.

10. Dispose of this player properly, respecting your local laws for electronics and battery disposal.
11. DO NOT STARE INTO CD PLAYER LASER BEAM.

FCC WARNINGS



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

GENERAL INFORMATION

FEATURES

- CD Boombox can play CD, MP3, CD-R, and CD-RW discs
- LED front panel display
- Audio CDs and MP3 discs are divided into tracks


PLEASE NOTE

- You cannot play DVDs/video discs.
- You cannot play illegally produced discs.
- You cannot play scratched discs.
- You cannot play discs that are dirty (dusty, soiled, marked with finger prints, etc.)

The drawings of the front panel display used in this manual are solely for illustration purposes. The actual display may differ slightly.

DISC HANDLING PRECAUTIONS

- To keep the disc clean, handle the disc by its edge.
- Do not touch the surface.
- Do not stick paper on the disc.
- If there is glue (or similar substance) on the disc, remove the glue completely before using the disc.
- Do not leave the disc in a vehicle parked in direct sunlight. Heat may damage the CD. Do not expose discs to direct sunlight.
- After use, store discs in protective case.
- Do not write on the label of the disc with ball point pens, or other sharp writing device.
- Do not drop or bend discs.

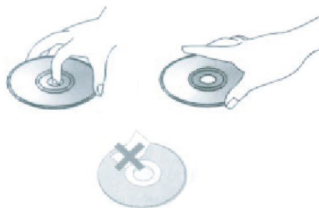

DISC CLEANING PRECAUTIONS

- Before playing, clean disc with a cleaning cloth. Wipe from the center of

the disc to the outer edge.

- DO NOT wipe in a circular fashion, this will damage the disc, and may not be functional.
- DO NOT use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

DISC INSTALLATION PRECAUTIONS

- DO NOT install more than 1 disc on the disc tray at a time.
- DO NOT place the disc on the tray upside down.
- DO NOT try to close the disc tray when the disc is not properly installed.



PARTS AND ACCESSORIES

UNIT COMES WITH:

- MAIN UNIT (1)
- USER'S MANUAL (1)
- POWER CORD (1)
- AUX CABLE (1)

PLAYER CONTROLS

1. POWER (⏻)

To turn the unit ON/OFF.

2. REPEAT/MODE (↺ / MODE)

Short press = REPEAT MODE will be switched ON, ONE/REPEAT ALL/RANDOM Function

Long press (3-4 seconds) = AUX/CD/USB/FM/BT will be switched ON


3. PLAY/PAUSE (▶||)/SCAN

To play/pause in CD/USB/BT mode

To scan FM stations in FM Radio mode; long press to automatically scan; short press to store desired stations, use TUN+ and TUN- to switch between stations

4. EQ/STOP (EQ/■)

Short press = switch to EQ function and select your desired effect: JAZZ/ROCK/POP/CLASSIC

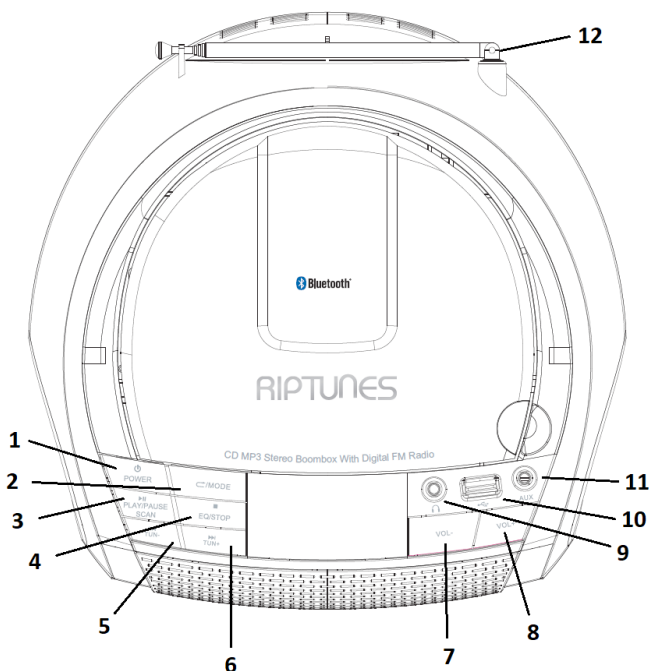

Long press (3-4 seconds) = switch the STOP function on under CD/USB mode

5. PREV/TUNING- (⏮/TUN-)

IN CD/USB/BT mode: PREV, previous track; long press to fast reverse
IN FM Radio mode: TUN-, previous FM radio station; long press for semi-automatic function

6. NEXT/TUNING+ (⏭/TUN+)

IN CD/USB/BT mode: NEXT, next track; long press for fast forward
IN FM Radio mode: TUN+, next FM radio station; long press for semi-automatic function

7. VOL+

Increase volume.

8. VOL-

Decrease volume.

9. EARPHONE (🎧)


10. USB

11. AUX

12. FM ANTENNA

DISPLAY FUNCTION

1. PLAY
2. PAUSE
3. USB
4. BLUETOOTH
5. AUX
6. FM RADIO

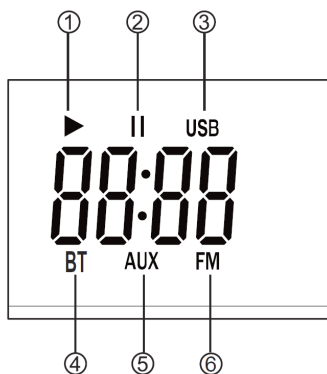

CONNECTIONS

AUX AUDIO INPUT DESCRIPTION

The AUX audio input signal should not be higher than 1v. Press the “MODE” key on the front panel to change to AUX mode. You can use the VOL +/- on the player to adjust the volume level.

BATTERY INSTALLATION (BATTERY EXCLUDED)

1. Open the battery cover.
2. Place 4 D-size batteries (UM-1, 1.5V) into the battery case. Maintain correct placement by matching the “+” and “-” signs with the battery. Please note: If this unit will not be used for a long period of time remove batteries before storing unit.

BLUETOOTH CONNECTION

Press mode button on the front panel to select Bluetooth (BT) mode.

When the correct mode has been selected, open your Bluetooth device, connect to “CDB234”. After connection is complete, play audio from your device.

TECHNICAL SPECIFICATIONS

TUNER SELECTION: TUNING RANGE FM87.5–108MHz; AMPLIFIER: OUTPUT POWER 4W, SIGNAL TO NOISE RATIO 50dB; WORKING VOLTAGE: AC 100-200V 50/60Hz; POWER CONSUMPTION: ≤10W; WORKING TEMPERATURE: -5~+40°C; BATTERY POWER: 4x D-SIZE UM-1, 1.5V (BATTERIES NOT INCLUDED).

WARNING: THE POWER CORD ON THIS PRODUCT CONTAINS LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER HANDLING.

TROUBLESHOOTING

PROBLEM	SOLUTION
No power to unit.	<ul style="list-style-type: none"> • Main power is not connected, connect power cord to power outlet. • Power button is turned to OFF. Turn power button to ON.
Compact Disc does not play.	<ul style="list-style-type: none"> • “NO DISC” appears on screen, disc tray is empty, insert CD. • “NO DISC” appears on screen, disc tray contains upside down disc. Reload disc correctly. • “NO DISC” appears on screen, disc tray contains damaged or scratched disc. Replace with undamaged CD. • “NO DISC” appears on screen, disc tray contains dirty disc. Clean disc and replace.

No sound. Sound out of only one speaker.

- Wrong audio output setting. Switch to proper setting.
- Poor or missing cable connection. Replace cable connection. Check connections

TECHNICAL SUPPORT

For questions not answered in this manual, or for warranty service, please contact Riptunes Technical Support:

By phone: 1-888-217-7688 (9:00 AM to 6:00 PM ET)

By e-mail: service@rip-tunes.com

Online: www.rip-tunes.com

© 2017 Riptunes by Impecca, a division of LT Inc., Wilkes Barre, PA.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



ONE YEAR LIMITED WARRANTY / 90 Days

Riptunes™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided product is registered online within fourteen (14) days of purchase.

PARTS - if the product is determined to have a manufacturing defect, within a period of one (1) year from the date of the original purchase, Riptunes™ will repair or replace the product parts at no charge (for parts) to you in the U.S.A. and Canada.

LABOR - if the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Riptunes™ will repair or replace the product at no charge to you in the U.S.A. and Canada, After ninety (90) days it will be the responsibility of the consumer.

Shipping costs to and from our warranty service center is the sole responsibility of the consumer.

To obtain warranty service by an authorized Riptunes™ service center, please email us at: support@rip-tunes.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the service center nearest you. Once authorized, you must mail the product, to the authorized Riptunes™ service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Riptunes™ determine that the product is outside of the Warranty term, Riptunes™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out of warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Riptunes™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories and disposable parts including but not limited to outside case, connecting cables, batteries and AC adaptors. Riptunes™ reserves the right to repair or replace defective products with the same, equivalent or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this warranty. Further, Riptunes™ hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell, will void this warranty in its entirety.

Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state.

Note: Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii.

Important: Be Sure to Register Your Product at www.rip-tunes.com within 14 Days

Riptunes™ USA • PA 18711 • www.rip-tunes.com • support@rip-tunes.com

**Do not send any returns to this address, as it might get lost and this will delay your repair and service process.*