

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PAUSE FUNCTION

During playback or recording, the tape can be stopped temporarily by depressing the PAUSE BUTTON. Press again to release the pause action.

RECORDING

Recording from the Built-in Microphone

1. Install a plain cassette.
2. Slide the FUNCTION SWITCH to TAPE position.
3. Depress RECORD BUTTON for recording.

Recording from the Built-in Radio

Turn on the radio as instruction "RADIO OPERATION". Slide the FUNCTION SWITCH to RADIO position. Depress RECORD BUTTON simultaneously.

EXTERNAL HEADPHONE JACK

For private listening, insert the plug of a headphone(not included)into HEADPHONE JACK and adjust VOLUME CONTROL accordingly. During the use of headphone, the built-in speaker is automatically disconnected.

MAINTENANCE

Cleaning of the Heads, Pinch Rollers and Capstans

To assure continued high performance from our Recorder periodically. Cleaning the heads, pinch rollers and capstans whenever an accumulation of dust and tape oxide deposits. These particles may be cleaned with a cotton swab moistened with alcohol (methylated spirit) or special head-cleaning fluid.

- * Depress the STOP/EJECT BUTTON and remove the cassette.
- * Carefully rub the face of the heads and also the surface of the capstans and the pinch rollers.

WARNING:

To prevent fire or shock hazard, do not expose this appliance to rain or moisture. Do not remove cover(or back), no user serviceable parts inside. Refer servicing to qualified service personnel.


LEOTEC

FM/AM/SW1/SW2 4 BANDS WORLD RECEIVER CASSETTE RECORDER

FCC ID: 2AIO5RACR-400



LT-BT400RUC INSTRUCTION MANUAL

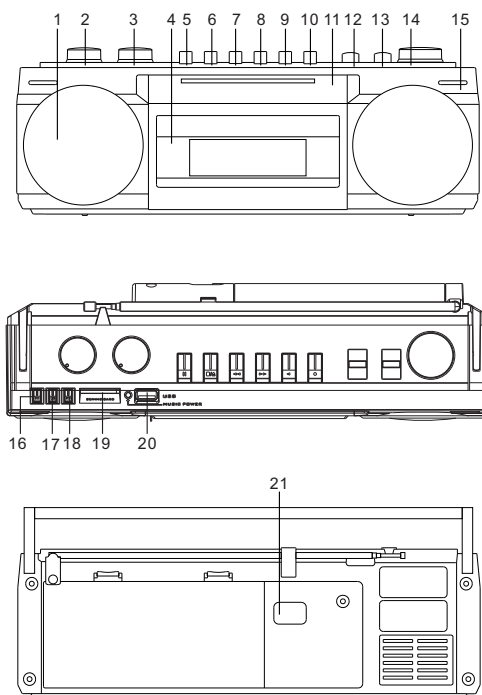

LOCATION OF CONTROLS

- | | |
|------------------------|-----------------------|
| 1. Speaker | 12. Function Switch |
| 2. Volume Control | 13. Band Switch |
| 3. Bass control | 14. Tuning Control |
| 4. Tape Silo | 15. Condenser Mic |
| 5. Record Button | 16. Prev Button |
| 6. Play Button | 17. Pause/Play Button |
| 7. Rewind Button | 18. Next Button |
| 8. Fast Forward Button | 19. SD/Mmc Card |
| 9. Stop/Eject Button | 20. USB/Music Jack |
| 10. Pause Button | 21. AC Socket |
| 11. Dial Scale | |

DRY BATTERY:

Opening the battery door can be installed in the four section "UM-1" or R20 of the battery. Note: before using the battery, disconnect the power cord from the AC power outlet.

USAGEMETHOD:

1. MP3 and Bluetooth partial function operation:

- a. will switch to the BT/USB/SD position, long press USB/SD/BT to play the function of PLAY conversion.
- b. in the Bluetooth state can be connected to the phone after the phone music player, short press the play button to play and pause, Long press the play button to disconnect the Bluetooth connection.
- c. long press PLAY button to USB/ SD card, the USB or SD card to play the music, this Short press REW/NEXT for one song and the next song, long press rewind and fast forward.

Note: please do not pull out the USB/ SD card play, otherwise it will cause damage, can not normally play.

2 switch radio FM location:

- a. turn the volume to a moderate position, and then the band button to the FM position, you can listen to FM band any radio program.
- b. pushed to the SW band, and then twist the dial button, you can listen to any radio program in SW band.
- c. When receiving FM shortwave radio, please pull out the telescopic FM antenna to get better reception Result.

3. function to switch to the radio station, to listen to the AM band:

- a. push the function button to the AM position, and then turn the dial button, you can listen to the AM band any radio program.
- b. when receiving the radio signal is not good, please adjust the direction of the machine to get better Receive result.

OPERATION OF MAGNTEIC TAPE CARTRIDGE:

Open the recording room to press the stop / eject button, insert the record box, and then close the tape box door.

PLAYBACKOPERATION:

Function to switch to the tape position, press the play button, will begin to play; adjust the volume control to the required sound level.

FAST FORWARD AND REWIND:

To play a part or a part of the tape in a magnetic tape. Press stop / The eject button, then press the "fast forward button winding or rewind button and press stop / play Button stop tape.