

尺寸: 148\*210mm+/-2mm,  
材质:封面封底105g铜版纸, 页面80g书纸, 正反面黑白印刷



## Radio Cassette Stereo Boombox

Radio cassette estéreo Boombox

Radio cassette stéréo Boombox



**USER'S GUIDE**

**GUÍA DEL USUARIO**

**MODE D'EMPLOI**

**MODEL: RACR-510BT**

## **TABLE OF CONTENTS**

---

|                                    |    |
|------------------------------------|----|
| Safety Precautions .....           | 3  |
| FCC Warnings .....                 | 4  |
| Introduction .....                 | 5  |
| What's in the Box .....            | 5  |
| Product Diagram .....              | 5  |
| Playback Modes and Functions ..... | 8  |
| Care and Maintenance .....         | 10 |
| Troubleshooting .....              | 10 |
| Technical Specifications .....     | 11 |
| Technical Support .....            | 11 |
| Limited Warranty .....             | 12 |
| <br>                               |    |
| Español .....                      | 14 |
| Français .....                     | 26 |

# SAFETY PRECAUTIONS

---

READ THIS MANUAL CAREFULLY BEFORE OPERATING AND RESERVE IT FOR FUTURE REFERENCE. REFER TO IT WHEN ENCOUNTERING ANY OPERATING PROBLEM.

1. **WARNING:** To reduce the risk of electric shock or damage to the player's main speakers, do not disassemble the player. There are no user-serviceable parts inside. Contact technical support for further assistance.
2. **WARNING:** To prevent fire or electric shock hazard, do not expose the player to rain or moisture (including drips or splashes). Objects filled with liquids, such as vases and water bottles, should not be placed on or near the player. Do not touch the unit with wet hands.
3. **WARNING:** Do not expose the radio/cassette player or batteries to excessive heat, such as direct sunlight, fire, or other heat sources.
4. **WARNING:** Use only the attachments/accessories provided by the manufacturer, except for a standard 3.5 mm (1/8") auxiliary cable.
5. Do not place objects on top of the player.
6. Do not place the player on an unstable table, stand, tripod, bracket, or cart. The player may fall, resulting in possible damage or injury.
7. Unplug the power from the outlet during lightning storms or when the player is not in use.
8. Pay attention to the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician to replace the obsolete outlet.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the player.
10. Dispose of this player properly, respecting your local laws for electronics and battery disposal.

**WARNING: THE POWER CORD ON THIS PRODUCT CONTAINS LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER HANDLING.**

## FCC WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in mobile(min20cm) exposure condition without restriction.

### RF WARNING FOR PORTABLE DEVICE:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

|  |   |   |
|--|---|---|
|   | <p style="text-align: center;"><b>WARNING</b></p> <p style="text-align: center;">⚡ Risk of electric shock, do not open. !</p>   |   |
| <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p> | <p>TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> | <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p> |

## INTRODUCTION

Congratulations on your purchase of this Radio Cassette Stereo Boombox, complete with USB / SD Slots and an AM/FM/SW1/SW2 Radio! For your safety, and to get the most enjoyment from your boombox, please thoroughly read these instructions.

### FEATURES

- Cassette Player
- AM/FM/SW1/SW2 Radio
- SD/USB slots for MP3 Playback and Record
- Record from Cassette, AUX or Radio to MP3
- Wireless Audio - Streaming from your Bluetooth® devices
- AUX in, 3.5 mm line in jack - Connect your Devices
- Headphone Jack
- 5W Speakers
- LED color Flashing Lights with the Music Beat
- Folding Carry Handle
- Telescopic Antenna
- Runs on AC Power 120V or 4 D batteries

## WHAT'S IN THE BOX



Your Boombox



 
AC Power Cable



This User Manual



Warranty

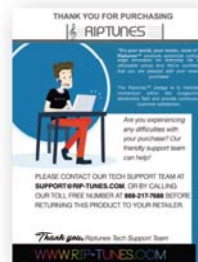




Tech Support Card

# PRODUCT DIAGRAM

   ENGLISH

ESPAÑOL

FRANÇAIS

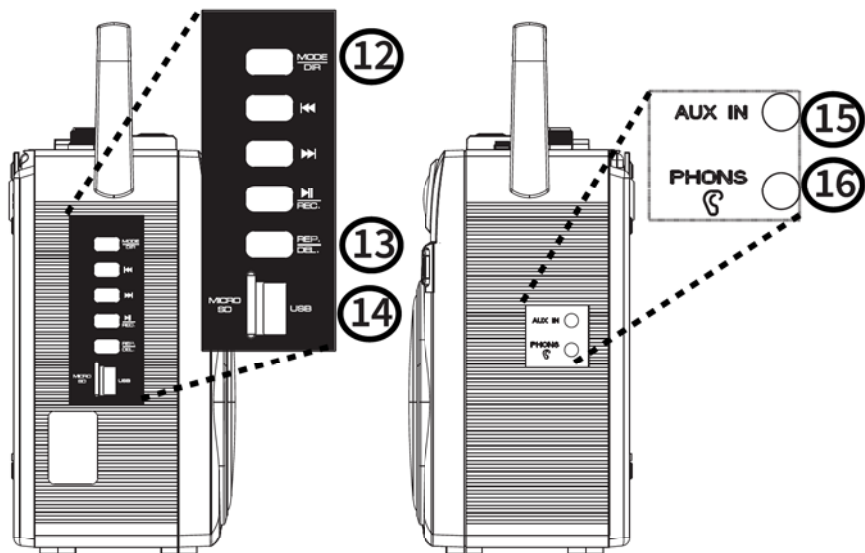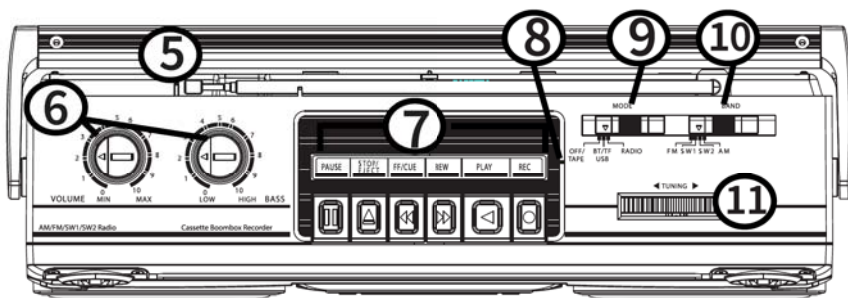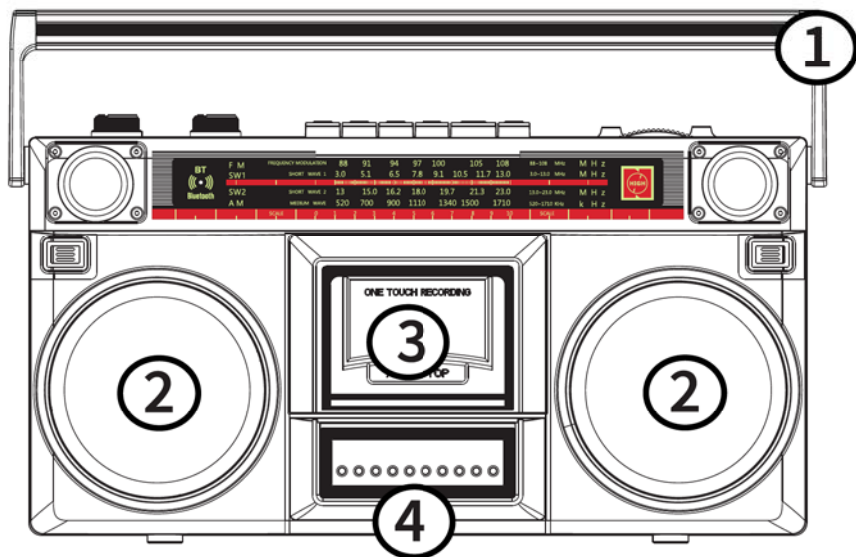


1. **Handle:** Collapsible carry handle
2. **Speakers**
3. **Cassette Tape Door**
4. **LED Panel:** During music playback, 10 LEDs on the panel will indicate the music level in real-time
5. **Telescopic antenna** (for FM/SW1/SW2 radio)
6. **Tone and Volume knobs:** Adjust the bass and volume
7. **Tape transport buttons:** Stop, Play, Fast Forward, Rewind, Record
8. **Microphone:** Record your voice to tape or USB/SD Media
9. **Mode Switch**
  - **Off/Tape:** Play cassette tapes
  - **BT/TF/USB:** The “BT” (Bluetooth) Light will be on when this mode is selected. This mode plays back audio wirelessly from Bluetooth devices, USB Media or SD (Also known as “TF”) Cards.
  - **Radio:** Allows radio playback
10. **Band** (in Radio mode): Set the band for Radio Playback (FM/AM/SW1/SW2)
11. **Tuning Knob:** Manual Tuning for Radio Stations
12. **MicroSD and USB MP3 Play controls**
  - **Mode / Dir Button:** Cycle through folders on the USB/SD Media
  - **Prev:** Go to previous track; long-press to fast reverse
  - **Next:** Go to next track; long-press for fast forward
  - **Play / Pause / REC**
13. **Repeat/Delete** Press once to repeat current song; press twice to repeat all songs.
14. **MicroSD and USB Ports**
15. **AUX IN:** You can connect a mobile device or audio source that uses a 3.5mm (1/8”) cable here. Playback will switch to AUX automatically when plugged in.
16. **Headphones** (🎧): You can connect headphones or earbuds here. The main speakers will be disabled while headphones are connected.
17. **AC Input:** Connect the power cable here (see below).

## BATTERY INSTALLATION (BATTERIES NOT INCLUDED)

 - The boombox takes **4 D batteries**. It also plugs into the wall with the AC cable provided.

To install batteries into the boombox, open the battery cover on the back of the boombox). Then, match the “+” and “-” signs with the batteries. Replace the battery cover. If the boombox unit is not used for an extended period of time, remove the batteries before storing it.

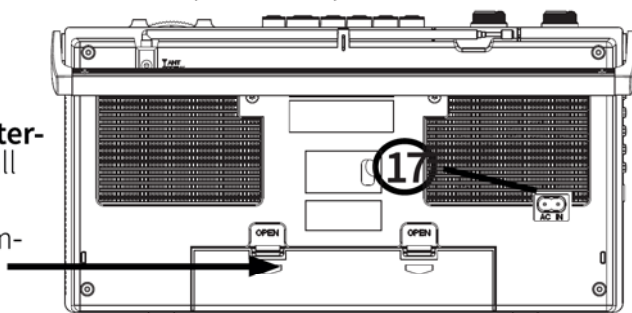

## PLAYBACK MODES AND FUNCTIONS

### CASSETTE TAPE PLAYBACK



Turn the function switch to the **TAPE** position. Press **Stop/Eject** to open the tape door. Place the tape in the cassette compartment upside down, as seen to the left. The side you wish to play/record should be facing outward. Close the door and press the **PLAY** button. If you need to fast forward or rewind, press **STOP** first. Then, press the fast forward or rewind button. To stop the fast forward or rewind, press **STOP**. Then, you can press **PLAY** again. Don't press **PLAY** while fast-forwarding or rewinding. Press **STOP** first, then **PLAY**.

If you need to pause the playback, press the **PAUSE** button. If you press the **PAUSE** button again, playback will resume.

### RECORDING TO CASSETTE TAPE

In any playback mode (BT, USB, SD, Radio or AUX), place a tape in the boombox and press the **REC** button on top of the boombox. It should press down with the Play button and record whatever is currently playing. Make sure the cassette is a recordable one, else the record button may not press down.

**Microphone Recording:** If the **MODE** switch is set to Tape, the tape will record sound from the built-in microphone.

### RADIO MODE

To listen to the radio, adjust the volume to a moderate position and set the **MODE** switch to **RADIO**. Then, select the frequency band with the **BAND** switch (FM, SW1, SW2 or AM). Use the tuning knob to tune the station while looking at the radio dial.

When tuning FM and shortwave (SW) broadcasts, pull out the telescopic antenna and adjust the position to get better reception. This antenna is not required for AM, as AM uses an internal antenna. If you're listening to AM Radio and the signal is poor, adjust the direction and position of the boombox itself to obtain a better reception.

### BLUETOOTH CONNECTION AND PLAYBACK

This boombox allows you to connect mobile devices, such as your phone, to play back through the boombox speakers.

1. Slide the **MODE** switch to the **BT/TF/USB** position. A pairing tone will sound and the blue indicator light will flash quickly as the boombox enters Bluetooth pairing mode.
2. Perform a Bluetooth scan on your mobile device and pair it with **RACR-510BT** (the boombox). After the connection is suc-





cessful, the blue indicator light stops flashing and you can now play audio from your mobile device through the boombox.

During playback, press the **PREV** button (on the side of the boombox) to skip to the previous song. Press the **NEXT** button to skip to the next song. Press the play/pause button to pause/continue playback.

3. Long press the **PLAY/REC** button to disconnect the Bluetooth connection. You will hear a disconnection sound. Long-press the **PLAY/REC** button to reconnect with the Bluetooth device that was last paired.

### AUX IN (AUXILLARY INPUT):

You can connect this 3.5mm input jack to an audio source, such as an mp3 device with a headphone output. **When a device is connected to this jack, it will override anything else that is playing back, and you will only hear what is connected to the AUX IN jack.**

### USB/SD CARD PLAYBACK AND RECORD

**To Playback from USB or SD cards:** Set the function switch to the BT/USB/SD position, insert the USB drive or SD card to be played, and the machine will automatically play the tracks on that media.

During playback, press the **PLAY/REC** button to (on the side of the boombox) pause/continue playing. Press the **PREV** button to skip to the previous song. Press the **NEXT** button to skip to the next song.

- **MODE/DIR:** During playback, press the **MODE/DIR** button to cycle through the selection of music folders on the media.
- **Repeat mode:** During playback, press the **REP/DEL** button to cycle to toggle the repeat playback mode: *loop all* → *single loop* → *loop all*. The blue LED will correspond to the mode chosen.
- **Delete function:** During playback from the USB or SD card, long press the **REP/DEL** key to delete the current track.

**Recording to USB/SD:** You can record Radio, Tape and Aux In to USB/SD. With the Mode set to Radio or Tape (or with an Aux device plugged in), Long-press the **PLAY/REC** button to start recording. During the recording, the blue LED flashes quickly. After the recording is completed, press the **PLAY/REC** button to stop recording. The recording file will be automatically saved to USB or SD. If you then switch the mode to **BT/TF/USB** and press **MODE/DIR**, the track just recorded will be played automatically.

**Microphone Recording to USB/SD:** With the MODE set to **BT/TF/USB**, Long-Press the **PLAY/REC** button to start recording. During the recording process, the blue LED flashes quickly. Press the **PLAY/REC** button again to stop recording. The recording file will be automatically saved, and the newly recorded track will be automatically played afterward.

 
**Note:** *If a USB Drive and SD card are inserted at the same time, USB will have priority. Additionally, this model does not record Bluetooth audio to USB or SD.*

## CARE AND MAINTENANCE

### CLEANING THE BOOMBOX

- **UNPLUG THE UNIT BEFORE CLEANING.** Use a soft, damp cloth to clean the outside. Do not wipe any internal parts or get them wet. Soapy water should be sufficient. Do not use any abrasive cleaning agents.

## TROUBLESHOOTING
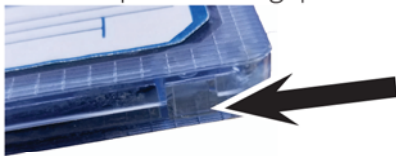
| PROBLEM   | SOLUTION   |
|---|--|
| No power to unit  | <ul style="list-style-type: none"> <li>• Connect the power cord or install batteries.</li> </ul>   |
| No sound from the speakers  | <ul style="list-style-type: none"> <li>• Make sure volume is up, and the unit has power.</li> <li>• Make sure headphones are not connected.</li> <li>• Make sure that nothing is plugged into the AUX input, or make sure that what's plugged in is playing audio properly.</li> <li>• Make sure that the correct mode is selected for the music source you are using. Use the mode button and/or function selector</li> </ul> |
| The record button will not press down to re-record on a cassette. | <ul style="list-style-type: none"> <li>• Make sure the two recording tabs on the top of the cassette are present. If they are not, there will be gaps there instead, which prevent recording. Use a recordable cassette, or place scotch tape over the gaps.</li> </ul>   |

## TECHNICAL SPECIFICATIONS

---

|                                    |                                     |
|------------------------------------|-------------------------------------|
| <b>Power Input:</b>                | A C 120V 60Hz or<br>DC 6V(UM-2 * 4) |
| <b>Weight:</b>                     | 2.15kg                              |
| <b>Dimensions:</b>                 | W380*H250*D100mm                    |
| <b>Supported Cassette types</b>    | Type 1/2/3/4                        |
| <b>File system</b>                 | FAT32                               |
| <b>Supported Audio file/codecs</b> | MP3, Wav<br>Up to 320K bit-rate     |
| <b>Frequency response:</b>         | 100Hz-8KHz                          |
| <b>Speaker Output Power:</b>       | 5 Watts                             |
| <b>Auxiliary Input:</b>            | Female 3.5mm stereo connector       |
| <b>Bluetooth version:</b>          | 5.0                                 |
| <b>Bluetooth distance:</b>         | 10m                                 |

## TECHNICAL SUPPORT

---

For questions not answered in this manual, or for warranty service, please contact Riptunes Technical Support:

**By phone:** 1-888-217-7688 (9:00 AM to 6:00 PM ET)

**By e-mail:** [service@rip-tunes.com](mailto:service@rip-tunes.com)

**Online:** [www.rip-tunes.com](http://www.rip-tunes.com)

© 2020 Riptunes by Impecca, a division of LT Inc., Wilkes Barre, PA.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

# LIMITED WARRANTY



## ONE YEAR LIMITED WARRANTY / 90 Days

Riptunes™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided product is registered online within fourteen (14) days of purchase.

**PARTS** - if the product is determined to have a manufacturing defect, within a period of one (1) year from the date of the original purchase, Riptunes™ will repair or replace the product parts at no charge (for parts) to you in the U.S.A. and Canada.

**LABOR** - if the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Riptunes™ will repair or replace the product at no charge to you in the U.S.A. and Canada, After ninety (90) days it will be the responsibility of the consumer.

Shipping costs to and from our warranty service center is the sole responsibility of the consumer.

To obtain warranty service by an authorized Riptunes™ service center, please email us at: support@riptunes.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the service center nearest you. Once authorized, you must mail the product, to the authorized Riptunes™ service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Riptunes™ determine that the product is outside of the Warranty term, Riptunes™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out of warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Riptunes™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories and disposable parts including but not limited to outside case, connecting cables, batteries and AC adaptors. Riptunes™ reserves the right to repair or replace defective products with the same, equivalent or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this warranty. Further, Riptunes™ hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell, will void this warranty in its entirety.

Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state.

*Note: Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii.*

**Important: Be Sure to Register Your Product at [WWW.RIP-TUNES.COM](http://WWW.RIP-TUNES.COM) within 14 Days**

Riptunes™ USA | PA 18711 | [www.rip-tunes.com](http://www.rip-tunes.com) | support@rip-tunes.com

*\*Do not send any returns to this address, as it might get lost and this will delay your repair and service process.*

