


FM Radio

Note: The DC/Aux In cable (included) doubles as an FM antenna. Insert the cable in the DC/Aux In port for FM reception.

1. Press the **Play button** to scan for stations. The speaker will automatically store scanned stations.
2. Use the **Volume/Skip buttons** to cycle through stored stations.

USB/Memory Card Play

Insert a USB drive or Micro-SD memory card into the appropriate port. The speaker will automatically detect the input and begin playing audio. Use the on speaker controls to play, pause, skip tracks and adjust the volume.

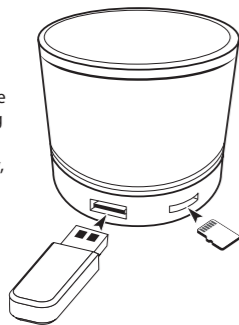

FCC WARNINGS

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ADDITIONAL WARNINGS

- WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- WARNING : Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.


Features

- Supports Bluetooth
- Wireless range: 60 ft.
- FM Radio
- Built-in microphone for answering phone calls
- Aux In (3.5mm audio input)
- Color changing LED lights
- USB and Micro-SD card readers: supports MP3s
- 3.5mm Headphone Jack
- Mini-USB port for battery recharge and Aux In
- DC battery power: built-in rechargeable lithium ion battery
- Battery life: approx. 1.5 hrs

Includes

- USB to mini USB Aux/DC charge cable
- User's guide

Overview & Controls

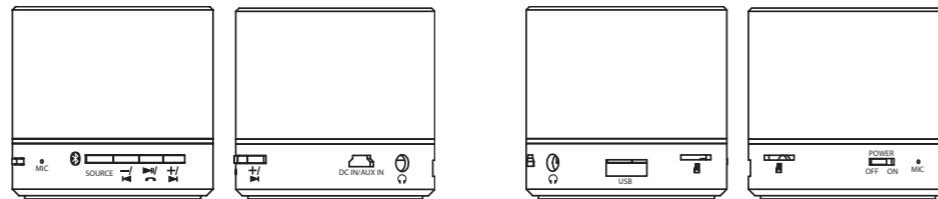

Microphone

Source

Press to switch between Bluetooth, FM radio or Aux modes.

Skip Track/Volume

Press to change track or stored radio stations.
Press and hold to adjust volume.

Pair/Play/Pause/ Speakerphone

Press and hold to pair to a Bluetooth device.
Press and hold to scan and store FM radio stations.
Press to play, pause or answer/end a call.

DC Power Port/Aux In

Headphone Jack

USB Port & Micro-SD Card Slot

Insert USB drive or Micro-SD card to automatically play from the storage devices.


Power ON/OFF

Battery Power

Initial charge time is approximately 2 hours. Charge fully before use.

1. Using a **Mini-USB to USB** cable (included), connect to the USB port of a powered on computer or USB power adaptor (not included) to charge the unit.

When the unit is charging, the **LED lights will display solid red**. When the unit is fully charged, the **LED lights will turn off**.

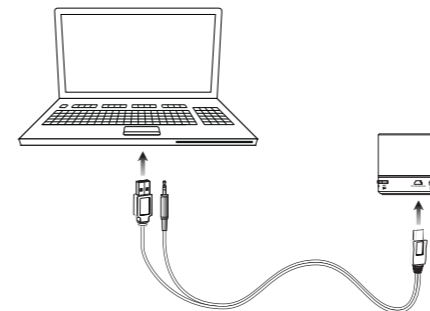

Pairing Bluetooth & Playing Audio

1. Press the **Source** button to switch to **Bluetooth Mode**. A voice prompt will announce "Bluetooth" when the unit is ready.
2. Press and hold the **Play** button to begin pairing. *When pairing, remain within 3 feet of the unit.*
3. Using the controls on your Bluetooth device, select **ISB07** in your Bluetooth settings to pair. *If your device requests a password, enter the default password **0000**. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
4. Use the controls on the connected Bluetooth device to **select and begin playing** audio. Use the controls on the device or the speaker to play, pause, skip tracks or answer an incoming call.

After initial pairing, the unit will stay paired unless unpaired manually by the user, or erased due to a reset of the device. If your device should become unpaired, or you find it is unable to connect normally, repeat these steps.

Aux In

Requires a 3.5mm to Mini-USB cable (included).

1. Press the **Source** button to switch to **Aux In Mode**. A voice prompt will announce "Auxiliary" when the unit is ready.
2. Connect the included 3.5mm to Mini-USB cable to the **DC Power Port** on the unit and the **audio output/headphone jack** on a media player.
3. Use the controls on the connected device to select and play audio.

