
HYUNDAI[®] TECHNOLOGY

TABLETS

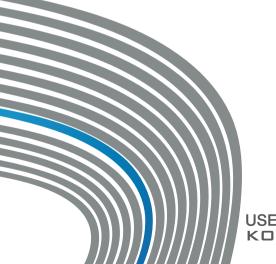

USER MANUAL KORAL 10XL

Welcome

Thank you for choosing the HYUNDAI® tablets. This device is designed to provide distinct and different experiences for both study and entertainment.

This manual will introduce the main function, operation method and other information. please read this manual carefully before using the device. this user guide describes features that are common to most models.

Acknowledgement

Thanks for your purchase of our product KORAL 10XL, is a 10 inches high clear board computer. Its CPU is MT8735, it is based on Android 8.1 operation system, and easy to expand the third application procedure.

The product is designed with various functions, including LTE ,WCDMA, WIFI, BT, GPS,FM, voice call and so on. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; it is also built with high accuracy GPS module, so that it can be used for navigating through installing map software. There are many sensors which offer you brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

Announcements Preventive maintenance

Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.

To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.

To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance

Never shock, throw, prod the MID, or drop, extrude, bend the MID.

Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

Never use the MID when driving car, in order to ensure safe driving.

In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.

To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the MID or using airplane mode when you are boarding a flight,

To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.

Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.

Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.

Never use the MID in the vicinage of high temperature, inflammable gas (gas station).

Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.

Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.

Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.

Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

Abbreviation/Terminology	Full Name	Description			
MID	Mobile Internet Device	Mobile Internet Terminal			
WIFI	Wireless Fidelity	Base on IEEE 802.11b\g\n standard wireless LAN			
TF	TransFlash	Alternative name Micro SD, super miniature memory card			

MID Introduction

Battery Charging

If this navigator is first used, please use AV adaptor to fully charge it.

1. Apply the power adaptor to charge for MID.

MID Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

<u></u>	New email	*	Airplane Mode on
N	USB connected	N	USB debugging connected
Δ	Return button		Downloading
	Display recently-used application	0	Home button
	Current electric volume	•	WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

Quick Start Guide

Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home)	Click it in any interface will return to main interface.
Back button (back)	click it in any interface will return to previous menu
Menu button	This button will display in menu interface.
Setting button	display recently browsed history; double click this button, you can switch between the last two applications

Startup

Long press POWER key for three seconds, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popup shutdown window.

2. Shutdown window contains reboot mode, airplane mode and power off mode three options.

3. Click power off is the last step.

Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1.Screen will be closed on its own if no operation happens for some time to save battery power

2.When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon and enter into Voice Search, upward slide unlock the screen.



MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide indicates

Quickly slide or slide indicates make quick vertical or horizon movement by finger.

Pull

Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to rotate the MID sidewise to change the screen direction from horizon to vertical. For instance, when you are typing words, and watching movies.

Home Page

Main interface as below picture 3.5-1, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.



The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures.



The shortcut icons management in desktop application.

Create folder icon in desktop

1.Drag the icons need to be put together on one icon(can also overlay several icons)



2. Then click the overlaid icons, the applications can be folded.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press.



Remove the icons in desktop

1.Long press the icons need to be remove, then on the right above of the screen, it will appear icons.

2.Drag the icon to the above of the remove icon, till the icon become red. then move your finger to delete the icon.


Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.

2 Click the gallery or wallpaper gallery to select the wallpaper.

Visit Application Procedures

Click 🛄 in right top, enter into main interface as Picture 3.6-1, choose the application procedure you want to visit.

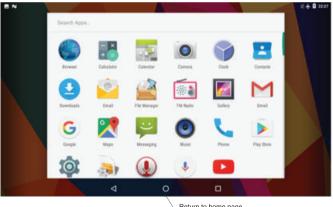

Return to home page

USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.

2.Open the reminder board; please view the MID status and reminder to learn how to open the board.

3.In the reminder board, click the "USB for file transfer", it will as below, then click "File transfers".

4.Now the USB is connected successfully.



Copy the document into memory card

1 Connect the MID to computer with USB cable.

As MID storage configuration, it is connected with computer successfully.
 Open the "My computer" in your computer, check the items in "MTP devices".

4.Copy the documents you need into "MTP devices".

5.After copying finishes, unplug the USB can.

Typing words

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1.Android keyboard

Choose the typing method you want


1.Click Setting procedure application.

2.Click Language and Keyboard.

3.In the text setting area will reveal all the installed words-typing methods in your MID.

4. Tick the typing method you want.

Use and switch of input method

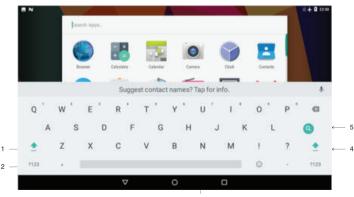

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left on the cursor

Operation Technique

Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.


Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.

Quick Setting

Swipe-down gesture from the top of the screen, there are nine shortcuts icons, such as Wi-Fi, Bluetooth, Auto-rotate, and so on. In the full Quick Settings list you can also tap the edit button at the bottom right to rearrange the tiles or replace them with others. The optional extras list is pretty minimal: Just Hotspot, Data saver and Invert colors. But developers are now able to create custom Quick Settings tiles for their apps, which will definitely make things a lot more interesting in the coming mouths.

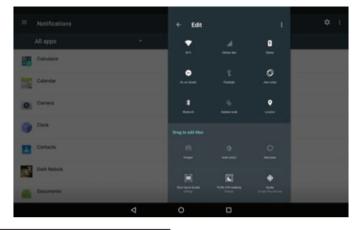

Basic Setting

Wireless and Internet

Connect Wi-Fi

1) In the main menu or interface, choose setting application procedure.

2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet.

3)Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

N					12 + 9 22 23
Wi-Fi					• :
	On				
	Google-test				
	HUAWEHest				
	TP-UNK_F08F2.4				
Ψ.	3F-CG				
-	D-Link_share mid				
-	E9				
-	MikroTik_Guest				
2	600 - 11 M				2
		4	0	•	5

Add Network

1)Click Add network icon in right top.

E N																			12 🛧 🖬 22:21
WIFFI	On Enter SSD											• :							
ч.	TPU	NK A	54		-								CAN	8.					
			-			Su	-990es	st co	ntact	nan	nes?'	Tap 1	lor in	fo.					4
q	5	w	1	e	•	r	ŧ.)	t	1	y	*	u	•	i	*	0	*	р	G
	а		s		d		f		g		h		j,		k		I.		0
±		z		×		с		۷		b		п		m		1		?	*
7125																٢		3	7123
						7	7			0									

2)Input network SSID, the wireless network name, click save. 3)Click user name already saved, click connect to use network

E N				♥ E B 22.43
Wi-Fi				• :
	On			•
•	mtktest Convented			-11
	Google-test			
	HUAWEHest			
•	TP-UNK_F08F2.4			
•	D-Link_share mid			
•	69			
•	MTK_google_line			
		4	0	8


3.Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network.

4.Keep WI-FI on during sleep..

1 Click 🔯 icon in right top, select advanced.

2.Click Keep WI-FI on during sleep

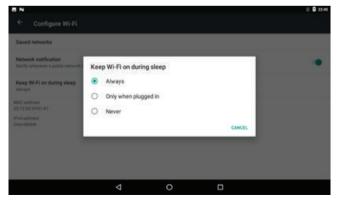

Bluetooth

Bluetooth function operation

1. Click setting application in main menu interface


2.Click Bluetooth and open it.

3.If somebody open Bluetooth in your surroundings, click search device in right above, then MID will automatically search the Bluetooth device nearby.

BN					10	22.46
=	Bluetooth					1
	On					•
Anala	ible devices					
6	MEIZU MKS					
6	OPPO R9m					
6	metal					
ANO10	OID RY to realize to rearby devices white	theory artests a	-			
		⊲	0	Ū.	8	

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.

5. After match successfully, choose the operation you want to, click 🔅 to enter into.

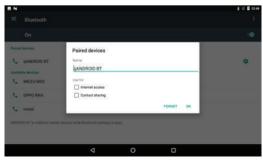

Bluetooth setting

1.Rename tablet

Click **I** icon in right top, select rename tablet, you can rename it as you want.



2.Display the file you received

Choose display the file you received in Picture 4.2-3, you can view download and upload files.

Data Usage

Check SIM card data usage

I N					8 36% 0 103
≡ Data usage					
Usage					
O B cellular data					
Jan 2 - Feb 1					
0.0					2.00 58
2.00-G8 Data warning					
Data saver on					
Cellular					
Cellular data					
Cellular data usage 0.0 usast batween Jan 3 - Feb 1					
	4	0	D	8	

Check WIFI data usage

Slide on the data usage page to find "Wi-Fi data usage" and click it.

					# 3G% @ 10:20
Wi-Fi data usage					
Dec 5, 2016 - Jan 2, 2017 -					
					355
2016					and the
r data accounting may differ from device acc	ounting				
Google Play services					5.16 KB
Android OS					2.15 KB
	⊲	0		8	
	Dec 5, 2016 - Jan 2, 2017 - 2016 data accurreng may differ from decise acc <u>Congle Play services</u>	Dec S, 2016 – Jan 2, 2017 – 2016 e Oogle Play services <u>Android OS</u>	Dec 5, 2016 – Jan 2, 2017 • 2016 2016 Coogle Play services Android 05	Dec 5, 2016 - Jan 2, 2017 - 2016 2016 r Oto scouting may differ from device accounting Google Play services Android OS	Dec 5, 2016 – Jan 2, 2017 • 2018 2018 Coogle Play services Android 05

More

Airplane Mode

Airplane Mode can turn off WIFI and GSM card function quickly, when airplane mode is turned on, WIFI and GSM can't get any signal, then airplane mode is turned off, WIFI and GSM module will recover to previous state.

VPN

Open VPN, click add VPN network. Input name and server address, then save.



Click VPN, input VPN user name and password, click connect.

BN																		+	35% 0 10.34
4	VPN				Connect to Dddd									1			+		
101	Date				Alerti artis														٥
				ł	-	<u>41)</u>						0	ANCEL		-				
					the					1					hi				4
q	N 3	w		е		r	•.)	t		y	*	u	r.	i	*	0	•	р.*	a
	a		s		d		f		g		h		1		k		1		•
+		z		×		с		۷		b		n		m		1		?	<u>+</u>
7123																٥			7123
						7	7			0									

Network sharing and portable hotspots

Portable WI-FI hotspots

1.Click setting application in main menu.

2.Click more when wifi is well connected, open network share and portable hotspot



BN					t 3G# 0 1836
 Tethering & porta 	able hotspot				
USB tethering USB connected, check to letter					0
Portable Wi-Fi hotspot					10
Set up Wi-Fi hotspot AndrodkiP WMC PSK portable W	ATUNITUPOT				
Bluetooth tethering Not sharing this tablet's intervet.	III THUCKIN				12
Hotspot & tethering settings Style					
	4	0	0	8	

3.Click keep WI-FI hotspots on, choose open time.

4.Return to previous menu, open portable WLAN hotspots, click Set up WI-FI hotspots.

BN					(0 \$ 3G 4 1037
← Tethering & portab	in bost search				
	Set up Wi-Fi hotsp	ot		- 55	
USB tethering USB constants: chark to tether	Network Isame			- 88	0
	AndroidAP			_	
Portable Wi Fi hotopot Portable horipot Anti-adult active	Security WPA2 PSK			4	
Set up W-Fi hotspot Analisisty 19742 PSR portuble Wif	Password			- 8	
Buetooth tethering Not alwaying this table is between our	The pastword must have	al least & characters			(P
	Show paseword			- 88	
	Select AP Band 2.4 GHz Band			- A - 1	
			CANCEL	SAVE	
		0			

5.Set passwords you want to, password should be more than 8 numbers.

Mobile Networks

1.Access Point Name(APN)

Choose access points name (APN), choose SIM card you need to connect, Choose connect type

Remark: (CMWAP transmitters data through GPRS, the webpage it visit belongs to wap webpage, and CMNET support www browse mobile phone network, it can also log in webpage in computer. And the charges are also different.)

3.Network Operator

Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network.



GPRS data prior mode

After Open GPRS data prior mode, systems will priority chooses your network.

Sound & notification Sound

1. Open settings, click Sound.

<			1 T 2 8 425 1819
≡ Sound			
Media volume			
Alarm volume			
Ring valume			
Also vibrate for calls			12
Do not disturb			
Phone ringtone Fully Prese			
Default notification ringtone Prez Date			
	4	0	

1.Vibrate

click Also vibrate for calls, MID will vibrate when someone calls you.

2.Volume

click volume, you can set ringtone, media, and alarm volume

Media volume		
Alarm volume		
Ring volume		

3. Voice call Ringtone

click phone ringtone to choose voice call ringtone.



Notification

1. Open settings, click Notification

2.Click on any app icon in the list, then you can choose to show notifications silently, block all notifications or don't silence or block.

	D N.	10 745.1 1 94
=	Notifications	٠
	All apps -	
	Calculator	
2	Culendar	
0	Camera	
9	Clock	
4	Contacta	
.	Dark Nebula	
	Documenta	
	⊲ 0 □	
	0 N	8 O 🛡 45 // 8 His
	Notifications	
Dar	rk Nebula	
Book a	aði aðsin spíllisalinna fraga lítin egy	0
Disew i	alleredly.	
	de Do Not Disturb	
Overnic Lat the	our certificatives container to interlupt when Do Net Distant is set to Prainty Drity	0

Display

Adjust the screen brightness

- 1.Click Setting application procedure.
- 2 Click display, choose brightness,
- 3.Drag the portico to adjust the brightness volume

00 B				\$ ♥ 2 B 67% 0935
= Display			•	
MiraVision* Display picture quality optimizatio	n)			
Brightness level				
Adaptive brightness Optimize brightness level for avail	lable light			
Walpaper				
Sleep After 1 minute of inactivity				
Press power button twice for c Quinkly open camera without unlo				
Screen saver				
	⊲	0		

Wallpapers

- 1. Click setting application.
- 2 Click display, click wallpaper.

3.You can choose different wallpapers as you like—gallery---live wallpapers ---photos--- wallpapers (system defect).

B N					A 1 36 9 0 100
+	Choose wallpaper from				
1	Gallery				
	Live Wallpapers				
	Wallpapers				
		⊲	0	D	5

Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate MID screen by G-sensor.

Sleep

- 1.Click setting application.
- 2.Click display.
- 3.Click sleep.
- 4 Set the sleep time as you want,

BN				(0 8 3652 B 1414
	Sleep			
MitaVision* Teacher gestern gestig auforstatio	O Never			
Brightness level	O 15 seconds			
	O 30 seconds			
Walpoper	I minute			
After 1 ments of Australia	O 2 minutes			
Press power button twice for	O 5minutes			
	O 10 minutes			-
Solven saver Chris	O 30 minutes			
Fort size			CANCEL	
	4	0	D	

Font size Click font size to adjust the size of the text



Display size

Click Display size to adjust the size of the icons.



Mira Vision

Mira Vision is a set of engines to enhance display picture quality.

Storage

Open setting function, click Storage.

8 N	l			01	3674 8 1101
=	Storage settings				
Inter	mal shared storage				۲
727	07				0
Devi	ce storage				
	2.41 MB				
=	Internal shared storage (22.41 MB cand of 4.64 CB				
Ports	able atorage				
-	72707				14
		\triangleleft	0	5	

(1)Internal storage

Internal storage is MID local NAND storage, if you need to check the storage content, you can check it in main menu.

Ben				\$ 3G% 0 1100
← Internal shared st	orage			
83.25 MB				
Apps				44,0160
Images				10.48
Videos				1
Audio				
	⊲	0	8	

(2)SD card

Click SD card to check the storage content

EN.					# 36% 🛙 tt
≡ TZ707				3	۹ 🖬 🖛 ا
android,se.	dmath. III	1080P	間 1080P多格式	Android	B backup
в осм	Download	i egame		In of	In LCORRET.
LCORMA.	E Liefbef	LOSTOR	🖿 мрз	III miklog	mtklog(0)
Pictures	B sharesdk	ntorage	aystem_upd	a tencent	TLL Firmwat.
III 19-9-08.00_	Notoresec.	Bit 1025	BB HILAPK	In Hitthhapp	-
bu 85	In BRHZ				
		÷			
		4	0 0		3

Safely remove or format SD card


- 1.Click 🔳 in.
- 2.Click Settings

3.After the above two steps you can choose what you want to do,remove or format SD card

Note: Removing SD card safely can protect SD card and increase its lifetime.

Battery

Click setting function, select battery, you can view the battery situation.

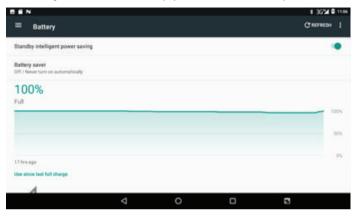

Application program

1 Click setting application in Apps.

 Select application, after enter, you can manage and delete installed application.



Memory

View the used space and available space

BEN				# 36 1 0 1100
≡ _{Memory}				
3 hours -				
Average memory use				
715 мв				
Performance				Normal
Total memory Average used (%)				0.94 GB 755
Free				245 MB
Memory used by apps 27 apps used memory in the last 3 hours.				
	4	0	8	


Click Memory used by apps view the working device.

DEN				# 3GM 0 110
← App usage				
3 hours -				
Average memory use				
O Android OS				460 MB
Google Play services				69 MB
Android System				60 MB
System UI				49 MB
SIM Toolkit				19 MB
	4	0	5	

Account and Sync

- 1 Select setting application
- 2.Open account and sync,



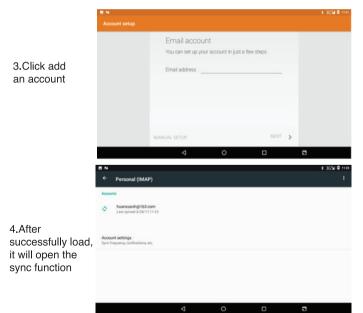

Safery setting

Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: After setting screen locked, you should enter the pass code each time when you startup or screen is locked

Set unlocked picture

- 1.Click setting application in main interface.
- 2.Click security.
- 3.Click screen lock.
- 4.Choose pattern in text setting area.
- 5.Click next following the remind message.

6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. move your finger from the screen when finish. The system will record yours new unlock pattern.

7.Click continue.

8.When you see the reminder, enter the unlock pattern, then click confirm.

BN					t 30% f	1129
Choose your patt	tern					
			Pattern recorded			
		T		•		
		+	٠	•		
				-•		
	CLEAR			cos	(TIMUE	
		4	0		8	

Set unlock PIN code

- 1. Click setting application in main interface.
- 2.Click security.
- 3.Click screen lock.
- 4.Choose PIN in text setting area.
- 5.Enter new PIN code(numbers) and click continue.
- 6.Enter new PIN code again and click confirm.

Set unlock password

- 1 Click setting application in main interface.
- 2 Click safe
- 3.Click screen locked.

- 4.Set password in text setting area.
- 5.Set new password(letters and numbers) and then click continue.
- 6 Enter the password again and the click confirm.

	5 N.	# 36% B 1130
	≡ Security	
	Presenth Make passing/ds stable Device addresentation	
Unknown source 1.In main interface, click setting.	Device administration View or disactivate device administrations	
2.Click safety. 3.Click unknown source	Unknown sources allow isstallation of apps from unknown overces	0
	Data Protection Protect your data from an example access Condential starage	
	< 0 □	5

ENGLISH

Note: Manual installing APK files needs to turn on unknown source.

Language and Input Method

Click setting, select language and input method, choose language , then click Add a language, select the language you want to add from the language list. Back to language preferences page , you can drag the language you want to set to the first to switch language.

					10 ♥2 € 611	6 10.41
÷	Language preferences					Ŧ
1	English (United States)					
2	简体中文 (中国)					-
+	Add a language					
		4	0			
		4	0	0	10.000	
4	ddd o boonnoor	Δ	0		\$ ⊙♥2 \$ #	
← Engli	Add a language	⊲	0	D	10721 <i>***</i>	Q.
Engl		4	0		3 0 ♥2∎m	
Engl	sh (KA) Nol (Estados Unidos)	4	0		\$-0. ♥ ≥ ∎ sn	
Engli Espa	sh (KA) Nol (Estados Unidos)	4	0		X‡O∳® â minin	
Engli Espa Augul	ah (XA) Nol (Estados Unidos) (XB) proges		0		10924a	
Engli Espa aal an Afrik	ah (XA) hol (Estados Unidos) (X8) gueges sans	4	0		1092 8 4	
Engli Espa امرية Afrik Aghe	uh (XA) Nol (Estados Unidos) (XBI) sueges aans	4	0		\$ 0 ♥2¥an	
Engli Espa 4,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	uh (XA) Nol (Estados Unidos) (XBI) sueges aans	4	0		\$ 0 ♥2¥#	

Click setting, choose language and input, choose Google keyboard setting, click input language

E N			# 3G% 🛙 1147
← Google Keyboard sett	lings		
Preferences			
Languages English (US)			
Theme			
Text correction			
Gesture typing			
Dictionary			
Advanced			
8		10.000	
	4	0	8

Choose the language you want to change in the language list.

BN				# 36 4 0 1188
← Google Keyboard				
Google Keyboard				
Use system languages				1.02
Active input methods				
English (US)				
English (Philippines)				12
English (Nigeria)				1.2
English (Kenya)				10
English (South Africa)				12
English (odia)		Store:		12
	0		•	

Backup and Reset

Connect WIFI and login your google account, choose backup my data, system will backup your data into google server.

If you need to recovery factory reset, please click reset, if you need to formulate NAND, please click reset tablet.

Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

- 1. Click Setting application procedure.
- 2. Slide down the screen, then click date and time.
- 3. Turn off "auto setting of date and time".
- 4. Turn off "auto setting zone".

5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.

6. Click Set date, then click upper or down button to adjust date, month, and year, click setting when you finish selection.

7. Click Set Time, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click Setting to finish.

8. Click 24-hour format, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.

9. Click date format setting, then choose the time format you want to show on MID.



Note: If you use the time internet provided, you will not able to set the date

Fixed-time Startup and Shutdown

1. Click Setting application procedure

- 2.Click Schedule power on & off.
- 3 Operate as below

	08			1 〇 ♥ 三 前 21% 1120	
	Schedule power on &	off			
Click it into fixed-time startup setting	07:00				Turn on/off fixed-time startup
Click it into	08:30			(m)	Turn on/off
fixed-time`shu	tdown setting				fixed-time shutdown
		4	0		

Assistance Function

Font size

Click it to make system font large size

Click power button to end calls

When Click call, press "power" button, call will end but not hold.

Touch and hold delay

Click touch and hold delay to increase time



Install webpage script

It will allow you install webpage scrip when you open system,, but it will increase the risk when you are browsing webpage.

Engineer Selection

1. USB debugging After opening USB bugging, you can use some software to read MID software, but when USB debugging is turned on, USB storage needs to manual adjust.

2.Stay awake If you open stay awake, it will never auto sleep when your MID is charging.

3. Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4. Show taps

If you open display touch screen operation, it will display touch operation on the screen. It is suggested to use with same direction as pointer location.

5. Show surface updates If you open screen refresh, it will display related area when the area is refreshing.

6. Show CPU usage After open CUP usage, in the right top of MID will show CPU usage situation

e N						# 36% 0 1140
	Developer options					
	On					۰
Strict	t mode enabled spreet when apps do long op-	rations on max thread				10
	w CPU usage m overlay showing current CPU	Longe .				
Profi	le GPU rendering					
App 1						
	t keep activities ny every activity as soon as its	ciant bassiss it				10
Back	ground process limit					
		4	0	0	8	

About Tablet

Check MID state

1.Check Setting application.

2.Click about tablet, check state message, model, Android version, version No and so on.


1.Click state message, check battery status, battery level, SIM status, IMEI information, IP address and so on.

Multi-Media

Music

Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play

• # +				1741	6:52 m
Artana	© Alterna	đ. Bengs	10 Papinta	C Non playing	
The State of State					
Edia Deleteration					
E-94 Defenses anter					
Track 1 Any trans. Peter Bitterneric					•
Track 55 Uniform artist					
Track 55 Driven attei					
pay - ILBatyle interest and					

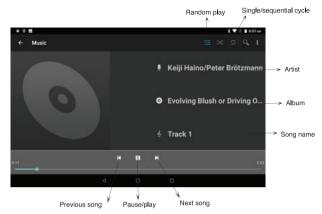

Drag the progress bar to adjust play progress. Operation of music player button.

Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1.Click gallery application in main interface.

2.Enter into gallery, click the folder you want to view.

3.Click the picture you want to view, the system will play it in full screen mode automatically.

4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

Slide Show

1.Open a picture, use virtual key to click menu key, display menu selection. 2.Click slide show, it will auto loop play

Crop

1.Click menu key to display menu selection.

2 Then click crop, click and drag related area to adjust the cropper.

3.Click cropper and drag it inside and outside to adjust the image.

4.After adjust the size you want, click crop.

5. If you wish to give up to crop, click cancel to return to picture browse.

Edit

1.Click menu key, display the menu selection.

2.Click edit.

3. Adjust the brightness, style, color, ant alias setting in selection.

4.Click save.

5.If you want to give up edit, click return key, click not to return to picture browse.

Camera

In the main interface or desktop, click camera application procedure onter into camera


Operation of camera ,Switch camera: choose Menu key, click switch front/back camera





FM Radio

Click in the main interface or desktop to enter into FM radio interface: Radio button operation instruction.

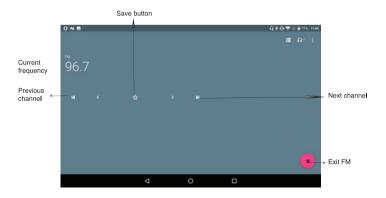

Save channels: Click button in the main interface to save the channel, and the channel will be saved in channels list.

Note: You need to insert earphone as antenna when using FM radio. If no antenna, your MID can't search any frequency band.

Communication Function	

Phone

1. Click Phone application procedure 2.Operate.



Text Message

- 1 Enter into main menu, choose 驒 application procedure.
- 2 Click "Edit new message"




Contact List

Click Contact list



in the main interface, enter into the contact list.

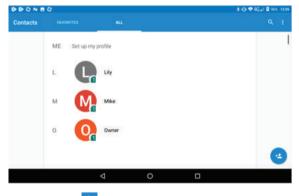

Search contact: click enter into search function Add contact: click (a) button, enter into add contact interface

Internet

Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser 💿 in the main menu or desktop to enter the IE interface.



Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, and you can click the menu you can refresh, save to bookmarks, share page, bookmarks, history and setting the webpage.



Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163).

E N				8 36% 🛙 1121
	Email accour	-it		
	You can set up you			
	You can set up you	r account in just a	new steps	
	Email address			
	MANUAL SETUP		ALC: >	
	Comments of C		,	
	\triangleleft	0		8

a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.

2. Input your email address and password.

3. Click "Next step" button, choose your email type is POP3 or IMAP.

4. Click "Next Step" button to check whether the email box servicer can receive or send emails

 Input the email account and display the email subject, and click finish.
 If the email box is available, you will enter into your mail box automatically.

b. Delete the email account

You can delete stetted POP3 or IMAP email account from your MID.





1.Enter into your mail box.

- 2 Press Menu key
- 3. Click Account
- 4. Press the account you want to delete.
- 5.Click confirm to remove.

c. Send E-mail

- 1. Click 🔛 to display your mail box.
- 2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
- 3. Press Menu key. Menus will popup.
- 4. Click Edit 🤣 to enter into new email editing interface.
- 5. Input the receiver's email address.
- 6. Input the subject and email content.
- 7. If you want to add attachment, click menu key, the menu popup.
- 8. Click "Attach file" (photo, music, video, contacts).
- 9. Click "send" to send the email out.

								1
0 8 0 0							♥ 4G.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
← Compose							ø	▶ 1
PI	um huansueshi	@163.com						
10	6							
	ubject							
0	liame stogmo							
q'w'	e'r	't'	у	u	τ.	•	р	a
a s	d	f g	h	i	k	1		Done
≜ z	x c	v	b	n	m	1	?	+
n23 @							\overline{R}	.com
	V	7	0					

Click it and Add attac

	0 8	0																0 🛡 46.	6 1 965	1410
		mpo																		
				From 1	huaras	entrig	163.0	om												
				To													÷			
				Subject																
				Compo		al .														
q	20	w		е		r	*	t	20	у	•	u	1	4	*	0	•	p	.0	I.
	а		s		d		f		g		h		i		k		I		Done	
+		z		x		с		v		b		n		n	į.	1		?	4	2
7123		@																- 22	.00	m
						V				0										

Split screen function

Click to enter the multi task management page, then hold down one of the cards, and drag up to the top of the screen to open the task. That first app will then appear in the top window(or on the left if you're in landscape mode) and you'll able to choose your second app from the app picker which displays automatically.



Clock

Click Clock procedure, enter into below interface. There are clock, picture, music and homepage buttons.



Calculator

- 1.Click. 🔡
- 2.Enter into the basic board of calculator.
- 3.Soft touch the numbers or operator in calulator to calculate.


....

* Xi 4 + Pi

7			INV	DEG	
4			1805	008	tan
			- 16	log	3
1				1	
1			- 1 C		9
	Þ	0	0		

File Manager

 File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.





a. Copy, cut, delete, rename the files and folder: choose the file or folder, long press the file or folder to enter into the interface, you can operate the file or folder.



b. Paste the copy or cut file: choose the file you want to paste, icon to enter into.



C. Share file:choose any file, long press it, it will popup "share", choose the share way you want in the list.




d. Install apk file: Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

e. Build new folder: Choose the menu you want to build the file, click icon in right top, choose new folder, you can build new folder as reminder.

Recorder

In the main interface or desktop, click recorder icon
to enter into record interface, click record key
to start record. Click Stop key
to stop recording. Click Play key
to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

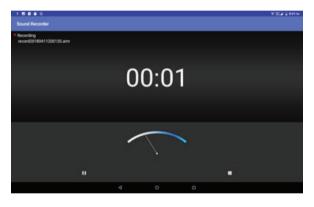

Installation of Procedures

Installation

Install the third party application procedure

1.Click "file manager" application procedure; choose the application procedure you need to install.

2.Hold the application procedure you need to install.

3.It popup install, click install apk.

4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with apk.

Uninstall

Uninstall application procedure

1.Click setting icon in main interface.

2.Click apps, list all the application procedures installed in the system.

3. Click the APK you want to uninstall, click uninstall.

4 Click confirm to finish uninstallation.

Skill: The procedure manager installed by system has many convenient methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application software, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2.MID can't connect Wi-Fi

Make sure the wireless router of internet service can work in normal. Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.

Ensure the user name and password both correct.

3.MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4.Email can't be set or Registration of application procedure.

Ensure your internet is well connected. Make sure your email setting way is correct. Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press Reset key(next to power port) to reset the system.

6. The webpage can't be opened

Please keep the distance between from route to MID in effective range. Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference ence will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

HYUNDAI® All Rights Reserved

Google,Android ,Google Play and other marks are trademarks of Google LLC; Oreo is a trademark of Mondelez International,Inc.group. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

The information contained herein is subject to change without notice. The only warranties for Hyundai and services are set forth in the express warranty statements accompanying such products and services.

Nothing herein should be construed as constituting an additional warranty. Hyundai shall not be liable for technical or editorial errors or omissions contained here in.

First Edition: May 2016

Advertencia Nota para uso en Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Contact Us

Visit us at http://www.hyundaitechnology.com/

For sales inquiry (US & Worldwide)

Email: sales@hyundaitechnology.com

For technical support, please contact HYUNDAI®

U.S. and Worldwide

Toll Free Number: 1-855-280-3895 Monday - Friday 8:00 am - 5:00 pm PST Email: support@hyundaitechnology.com

Mexico (Spanish)

Toll Free Number: 1-800-639-5535 Monday - Friday 8:00 am - 5:00 pm PST Email: soporte@hyundaitechnology.com

SAR Information Statement

The product is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted with the product transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the product while operating can be well below the maximum value. This is because the product is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a product model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model product when tested for use worn on the body, as described in this user guide, when properly worn on the body is 1.056W/kg.

(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various product and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model product with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model product is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/ oet/fccid after searching on.

FCC ID: 2AIOHHT1004L16 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Asso-ciation (CTIA) web-site at https://www.ctia.org/ In the United States and Canada, the SAR limit is 1.6 watts/kg (W/kg) averaged over onegram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protectionfor the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm is used between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.