

size:105*140mm

- radio station.
- 3. Press and hold the SCAN button 2-3 seconds for searching and recording all radio stations within frequency range 87.5-108MHz.
- 4. Short press the NEXT TRACK button or PREVIOUS TRACK button for listening next or previous already saved radio station.

Tips!

1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth/ AUX/ FM radio.
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

Colour Changing LED lights (except Disco light) in front of speaker

1. Turn on the speaker.
2. Short press the "LIGHT" button can switch to different light modes. The light modes include: color changing LED light -> dynamic LED light with playing music -> red -> blinking red with playing music -> green -> blinking green with playing music -> blue -> blinking blue with playing music -> off.

Using the Microphone

1. Turn on the speaker.
2. Insert the plug of the Microphone (not included) into the MIC INPUTS of the speaker.
3. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation with fun volume.

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version : 5.0
Unit size : 9.84" (L) x 8.86" (W) x 21.46" (H)
Unit weight : 6.38 lbs

6

Power input : DC 5V
Charging Time : 4-5 hours
Play time : 2-3 hours
Bluetooth range : 33 feet
FM frequency range : 87.5-108MHz
Built-In Rechargeable Lithium Battery: 3.7V 1500mAh
(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
No sound	Volume in minimum position. The connected device is not in play mode. Input source incorrect.	Turn the VOLUME knob to increase the volume. Play the music in the connected device and make sure the volume level is in high level. Press the MODE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn the VOLUME knob to decrease the volume.

7

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

8

SOUNDLOGIC XT
Power House
True Wireless LED Party Speaker



21426

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

1

Getting Started

- Remove the speaker from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- True Wireless LED Party Speaker
- USB Charging Cable
- 3.5mm Aux. Cable
- Instruction Manual

Key Features


- True Wireless LED Party Speaker
- Built-in Bluetooth 5.0 – connect & stream wireless music anytime, anywhere
- Built-in 2 loud speakers
- Built-in microphone input x 2 (Microphone not included)
- Color changing LED battery
- Built-in rechargeable battery
- Auxiliary ports
- USB charging cable included
- Vertical or horizontal positioning
- Ideal for parties, events, outdoors, recreational activities & more

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, ink, etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

2

Description of Parts

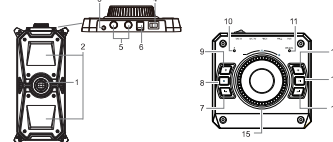

Number	Item	Function
1	DISCO LIGHTS	Color changing disco lights
2	COLOR CHANGING LIGHTS	Color changing LED lights
3	AUX IN	External audio input
4	POWER ON/OFF SWITCH	Turn the speaker On or Off
5	MIC INPUTS	Microphone inputs
6	DC IN	Charging port
7	PREVIOUS TRACK	Short press to the previous track in Bluetooth, or short press to the previous radio station in FM radio mode.
8	MODE BUTTON	Short press to change the mode between Bluetooth/AUX/FM radio
9	BLUETOOTH BUTTON	Short press to Bluetooth pairing mode
10	CHARGING INDICATOR	Turn PWR while charging. Turn off when fully charged
11	PLAYING/MODE INDICATOR	Bluetooth mode (blue) / Aux mode (red) playing indicator
12	LIGHT BUTTON	Short press to different light modes (except disco lights)
13	PLAY/PAUSE/SCAN	Play/pause in Bluetooth mode, scan FM radio stations (only in FM radio mode)
14	NEXT TRACK	Short press to the next track in Bluetooth, or short press to the next radio station in FM radio mode.
15	VOLUME KNOB	Increase/decrease the speaker volume

INSTRUCTIONS FOR USE

Charging the Speaker
For best results, fully charge the unit before use.

3

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 4-5 hours to fully charge the battery.

Turn On/Off the Speaker

Press the POWER ON/OFF SWITCH to ON position to turn on the unit with disco lights & color changing LED lights, or OFF position to turn off the unit.

Pairing your device with the Speaker –

- Your Bluetooth Party Speaker can stream wireless audio from any Bluetooth enabled device within the range of up to 33 feet. Simply follow the below steps:
1. Rotate the volume knob to your favorite sound level.
 2. Turn ON the speaker.
 3. An indication tone would be heard, blue LED light flashes rapidly and color changing LED lights are on, that the speaker is now in pairing mode.
 4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
 5. It will search for available Bluetooth devices.
 6. Powerhouse Bluetooth Wireless Speaker would appear as "Power House", in the list of searched devices. Select it from the available list of devices.
 7. You might be prompted with "Pair with Power House?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
 8. If required, enter the password "0000" to confirm pairing.
 9. Once paired successfully, another indication tone would be heard and blue LED light stays on.
 10. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (Phone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase/Decrease Volume	Playing music	Turn the VOLUME KNOB to increase/decrease the volume to your desired level

4

Pause	Playing music	Short press PLAY/PAUSE button once to pause music.
Play	Pause	Short press PLAY/PAUSE button once to resume music.
Previous track	Playing music	Short press the PREVIOUS TRACK button to the previous track.
Next track	Playing music	Short press the NEXT TRACK button to the next track.

TWS pairing use (If you own 2 True Wireless LED Party Speaker)

- Make sure both speakers are "ON" and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
 - Choose either one as your master speaker.
 - Long press the PLAY/PAUSE button on master unit.
 - Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
 - Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
 - Search for available Bluetooth devices and you would find "Power House" – Pair it with this device.
 - You might be prompted with "Pair with Power House?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
 - If required, enter the password "0000" to pair with the device.
 - Once paired successfully, another indication tone would be heard.
 - You can now stream wireless music on your speaker through your source device.
- Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, just long press the PLAY/PAUSE button on any one speaker.

Listening to Music using AUX-In

1. Turn on the speaker.
 2. Plug the 3.5 mm Aux-In cable (included) into the AUX-In port of the speaker, an indication tone would be heard, and red LED light is on.
 3. Plug the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
 4. Select your favorite song at the source device to play.
- Note: While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device.

Listening FM radio

1. Turn on the speaker.
2. Short press the MODE button each time until it reaches FM radio mode with sound from a FM

5