

# PROSCAN

## Instruction Manual

85W DUAL 12 INCHES WOOFERS LIGHT UP BLUETOOTH SPEAKER-FM RADIO  
Model no.: PSP1282



PROSCAN™ IS A REGISTERED TRADEMARK OF TECHNICOLOR USA INC.  
AND USED UNDER LICENSE TO CURTIS INTERNATIONAL LTD.

Please read carefully and keep this manual before your use this device.

### ⚠ Caution

- This device is not a toy, do not allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device by yourself.
- Do not expose the product to extreme temperatures.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.

 
### Specification

Main Function: BT, AUX, USB, TF, FM radio, MIC, VOL\*5, Screen Display, DISCO ball with wheels.  
Speaker Drive: 2\*12" woofer + 1\*1.5" tweeter  
Rated power: 85W  
Rated frequency: 2.4G  
Power supply: 110V-220V  
Transmission distance  $\geq 10\text{m}$   
Signal to noise ratio  $\geq 75\text{dB}$

### In the Box

2 x 12" LIGHT UP BLUETOOTH SPEAKER-FM RADIO  
1\* wired microphone  
1\* AUX cable  
1\* Remote control  
1\* AC-DC adaptor  
1\* User manual


### Precautions for using the remote control

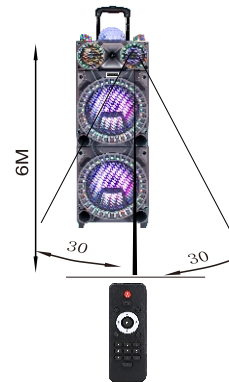


1. Under normal circumstances, the remote control should be used within the range of 6 meters, left and right of the remote control receiving window
2. When operating the remote control, aim the remote control at the receiving window. There should be no obstacles between the remote control and the receiving window
3. If the remote receiver is in a direct position to receive strong light, the remote control function is disabled
4. Avoid mixing old and new batteries, and regularly check whether the remote control battery leaks
5. When the remote control is found to be insensitive or effective only when operated at a short distance, the battery of the remote control may be low. Please replace the battery of the same model in time

### Install Power Adapter

 Follow below picture connect power adapter  
Connect small end of adapter **FIRST**. Plug the adapter body to power outlet.

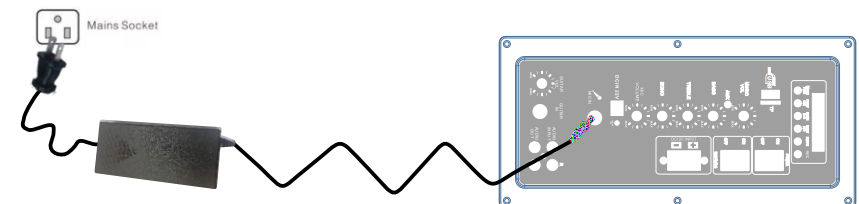


## Control Panel

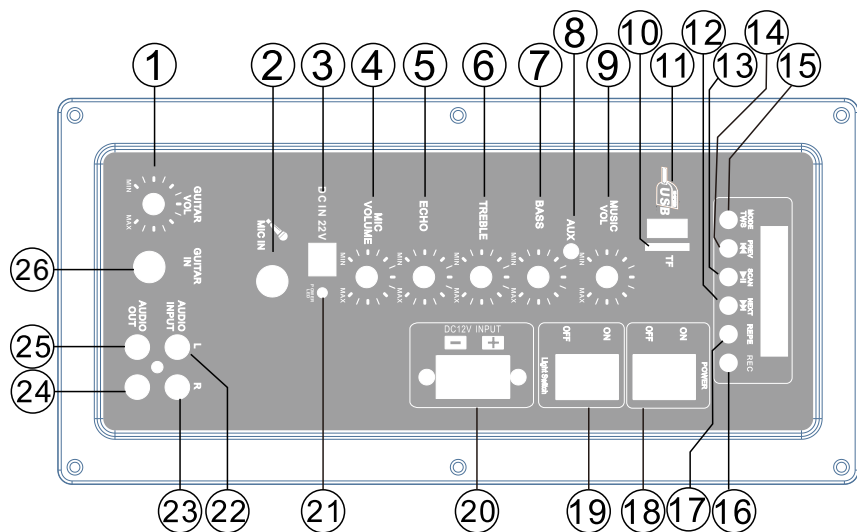 

- |                              |                        |
|------------------------------|------------------------|
| 1. GUITAR. volume adjustment | 16. Rec/Recplay        |
| 2. Wired Mic. input jack     | 17. Repeat key         |
| 3. DC 22V input              | 18. Power on/off       |
| 4. Mic. volume adjustment    | 19. LED on/off         |
| 5. Mic. Echo adjustment      | 20. DC 12V input       |
| 6. Treble volume adjustment  | 21. Power-on indicator |
| 7. Bass volume adjustment    | 22. AUDIO L input      |
| 8. AUX. audio input          | 23. AUDIO R input      |
| 9. Master volume adjustment  | 24. AUDIO R out        |
| 10. TF input jack            | 25. AUDIO L out        |
| 11. USB input jack           | 26. GUITAR. input jack |
| 12. Next song                |                        |
| 13. Pause/Play               |                        |
| 14. Previous song            |                        |
| 15. Mode selection           |                        |
| Scan Bluetooth               |                        |
| connectivity                 |                        |

## Remote Control

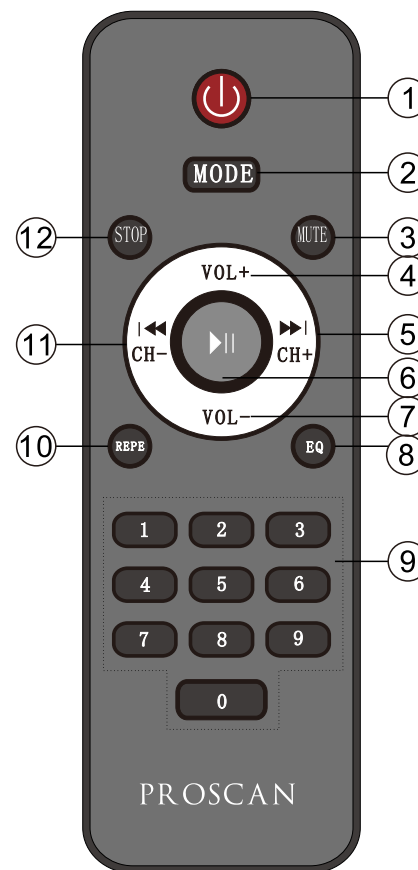 

- |                    |
|--------------------|
| 1. Power on/off    |
| 2. Mode selection  |
| 3. Mute            |
| 4. Volume+         |
| 5. Next song       |
| 6. Pause/Play/Scan |
| 7. Volume-         |
| 8. Equalization    |
| 9. Program         |
| 10. Repeat         |
| 11. Previous song  |
| 12. Stop song      |

## Power ON/OFF

ISlide the power switch to the ON position to power the device on. When power on, the device will automatically enter pairing mode.

ISlide the power switch to the OFF position to power off.

## Bluetooth Pairing

1. Turn on the power switch of the speaker and automatically enter the Bluetooth mode
2. Set your mobile device to search for Bluetooth device. When it appears, select PRO PSP1282 to click and connect to the device.
3. Once successfully paired, the prompt will be heard and the led indicator will slowly flash in blue.

## Connect to the Aux Port

- Press the mode key to switch to aux mode, and the speaker will broadcast "aux mode"
- Plug 3.5mm connector of auxiliary audio cable into the auxiliary input port on the device, plug the other connector into your media playing device.

## Play Music

To listen music on the device, make sure it is paired to a Bluetooth-enabled device or connected to auxiliary input port. See the Bluetooth pairing and connecting to the AUX port sections of this manual for detailed instruction.

## FM function

Press the mode key to switch to FM mode, and the speaker will broadcast "FM mode"

Convert to FM state, press SCAN automatic search platform, lock platform, press Prev and next to convert to step down

## Card reading function

Put the TF card or U disk into the MP3 song, insert the corresponding interface and automatically read and play. You can also use the conversion key to conversion mode in the state of inserting the card

## Recording function

The TF card or U disk requires more than 1MB of memory. After inserting the corresponding interface, long press the recording key to connect with the microphone to recording, and then press the recording key to play the recording content

## Connect to the Audio Out port

Connect to Audio Output with the lotus cable with audio output, which can be connected to another machine input to play music at the same time

## FCC STATEMENT BT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

This symbol signifies that this is a wireless device powered by Bluetooth technology. The bluetooth word mark and logos are registered trademarks owned by the bluetoothSIG, Inc. and any use of such marks by CURTIS is under license



## Customer Support

For any questions or problems with this product, please email [support@curtiscs.com](mailto:support@curtiscs.com) or call 1-800-968-9853.

## Warranty Information 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

## PURCHASE INFO

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

FCC ID: 2AIP7-PSP1282