



Wireless Light-Up Tower Speaker with Remote Control



Important Safety Precautions

When using your Wireless Tower Speaker with Remote Control, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
- 2. Clean using a soft cloth or paper towel.
- 3. Do not allow children or the infirm to play with your speaker without adult supervision.
- 4. Do not expose your speaker to excessive heat, flames or fire.
- 5. Always press all buttons or switches carefully. Do not manhandle your speaker.
- 6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
- 7. Do not expose your speaker to temperatures above 40°C.
- 8. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
- 9. Do not drop, puncture or expose your speaker to excessive trauma.
- 10. Your speaker is not intended for commercial use.
- 11. Do not place near objects that generate a strong magnetic field.
- 12. Unplug this device when not in use for long periods of time or during lightning storms.
- 13. In order to avoid the risk of fire or electric shock, do not expose this unit to rain or moist environments.
- 14. Only use product indoors. Do not expose to water or moisture.
- 15. Keep your speaker on a dry, cool even surface.



WARNING:

In order to avoid the risk of fire or electric shock, do not expose this unit to rain or moist environments.

*Please note: this product is for indoor use ONLY.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Introduction

Thank you for purchasing the Vivitar Wireless Light-Up Tower Speaker, item V60093BT-NOC. Your speakers are designed specifically for indoor use. Please read this manual first before using your device.

Package Contents

- -Light-Up Tower Speaker
- -Remote Control -Power Adapter
- -User's Manual with

Warranty Information

Specifications

Bluetooth: V5.0

Bluetooth Range: Up to 33 feet (10 meters)

Rated Voltage: DC5V

Frequency Response: 50Hz-18KHz


Bluetooth Transmitting Frequency: 2.40---2.48GHz

 
S/N Ratio: ≥78dBA

 
Remote Battery Type: One Lithium CR2025 Button Cell Battery

A Look at Your Speaker Controls

Speaker Controls

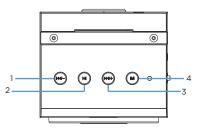






- 1. Previous Track (press and hold to decrease volume)
- 2. Play/Pause
- 3. Next Track (press and hold to increase volume)
- 4. Mode(Bluetooth, AUX, FM, LED)
- 5. DC 5V Power Input
- 6. Power ON/OFF
- 7. AUX Input Jack

A Look at Your Remote Control

Remote Control

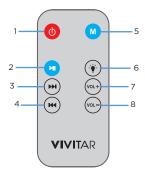

- 1. **SWITCH**: press to power ON/OFF
- 2. PLAY/PAUSE: press to Play or Pause media playback.
- 3. **NEXT TRACK**: press to skip to the next track.
- 4. PREVIOUS TRACK: press to skip to the previous track.
- 5. MODE: press to change input modes.
- 6. **LIGHT**: press to change LED light modes.
- 7. **VOL +**: press the button to increase the volume.
- 8. **VOL -**: press the button to decrease the volume.

Note: When using your remote, keep at a close distance to the IR sensor on the speaker.

Powering Your Speaker

 
Insert the Power Adapter into the DC 5V power input, then plug the other end into a suitable power outlet. Power on the speaker system by pressing the Power button on the speaker or the remote.

Power Adapter WARNING

-Make sure that the power supply of your home corresponds with the voltage of this unit.

-Never handle the power cord or plug with wet hands. -Ensure that the main power switch is in the "OFF"

position before connecting the Power Adapter to the power supply to avoid damage to this unit.



-A damaged power cord can easily cause an electric shock or fire hazard; never use a power cord after it had been damaged.

Inserting Batteries In Your Remote

- 1. Slide open the battery case located on the back of your remote.
- 2. Insert one CR2025 button cell battery with the correct polarity (+, -). 3. Slide the battery case back into place.

WARNING:Chemical Burn Hazard. Keep batteries away from children.

This product contains a button/coin cell battery. If a new or used button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the

batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The cells shall be disposed of properly, including keeping them away from children: Even used cells may cause injury

BATTERY WARNING:

Do not mix old and new batteries

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Batteries are not to be inserted with the wrong polarity. Exhausted batteries are to be removed.

The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly.

Contact local recycling facilities and/or the manufacturer of your battery for further information.

Bluetooth Mode

Once the speaker is turned on it will automatically go into Bluetooth mode. To connect a Bluetooth-enabled device follow the steps below.

- 1. If your speaker does not automatically go into Bluetooth mode, press the MODE button on the speaker or the remote until Bluetooth mode is turned ON.
- 2. Turn on Bluetooth from the device you would like to connect. Then select pairing name "V60093BT" from the Bluetooth menu to pair.

Note: Keep Bluetooth device within signal range (10 meters).



AUX Mode

To use the speaker's AUX mode, attach a 3.5mm auxiliary cable into the AUX input jack. Attach the other end of the AUX cable into a computer, music player or other media-playing device.

The speaker will automatically switch to AUX mode after following the steps above. If not, press the MODE button on the speaker or the remote to switch to AUX mode.

FM Mode

To use the speaker's FM radio function, press the MODE button to switch to FM mode.

- -Press and hold the Play/Pause button for some seconds to search stations and save radio satations with strong signals, once scan finished will play automatically.
- -Press again to stop scan.
- -Press the Previous or Next track buttons to switch the FM radio station.

Maintenance and Care

- -Before using your speakers or before charging, inspect the ports to make sure that they are clear of dust and debris.
- -Use a soft cloth to clean your speakers. Never use any harsh chemicals or detergents.

 Make sure your speakers are dry before charging.
- -When your speakers are not in use, they should be stored in a cool, dry place.
- -When your speakers are not in use, they should be stored in a cool, dry place
- -Connect and disconnect cables as carefully as possible.
- -Never expose your speaker to high temperatures or extreme cold.
- -Please recycle or dispose of your speakers properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speakers for further information.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information: Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR. REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT, BE LIABLE FOR ANY INCIDENTAL. DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING. CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.



© 2023 Sakar International 195 Carter Drive Edison, NJ 08817 Support: 800 592 9541 www.vivitar.com