

MARGARITAVILLE®



WIRELESS
Boombbox
Light Up Speaker

User's Manual



FOR ITEM: MA130-MGV



Important Safety Precautions

When using your Wireless Boombox Light Up Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Clean using a soft cloth or paper towel.
3. Do not allow children or the infirm to play with your speaker without adult supervision.
4. Do not expose your speaker to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not manhandle your speaker.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your speaker to temperatures above 40°C.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
9. Do not drop, puncture or expose your speaker to excessive trauma.
10. Your speaker is not intended for commercial use.
11. Do not place near objects that generate a strong magnetic field.
12. Unplug this device when not in use for long periods of time or during lightning storms.
13. Never submerge in water or any liquids.
14. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced.
- Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing the Wireless Boombox Light Up Speaker, item MA130. You can use your speaker with most smartphones and Bluetooth devices to stream music wirelessly while also enjoying exciting outdoor play. In order to get the best results when using this device, please read this manual first before using.

Package Contents

- MA130 Wireless Boombox Light Up Speaker
- USB-C Charging Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Range: Up to 30 FT

 
Input Power: DC 5V

Battery: Rechargeable Lithium Battery

Play Time: Up to 5 hours*


*When used at 50% volume

A Quick Look at Your Device

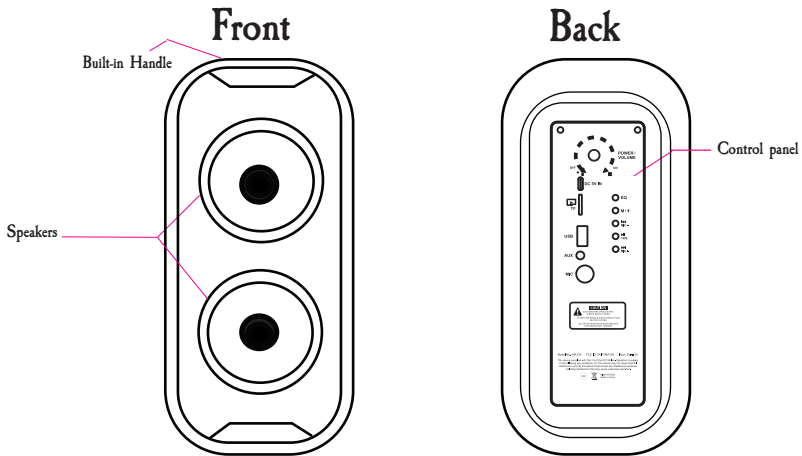


Control Panel

 
Located on the back of the speaker

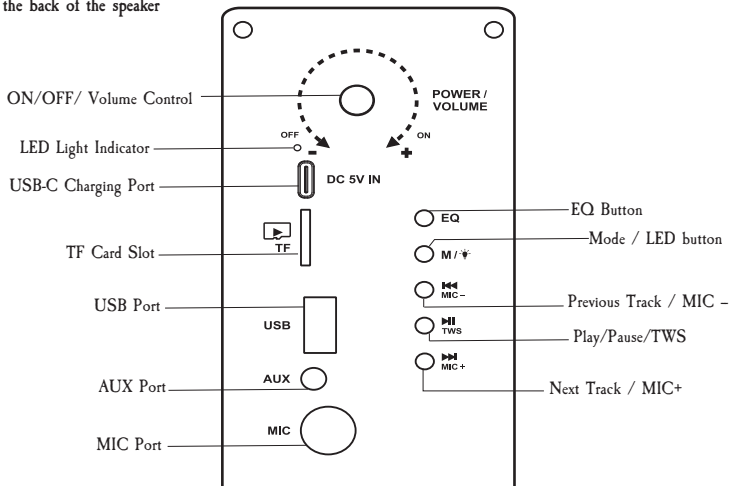


Charging Your Speaker

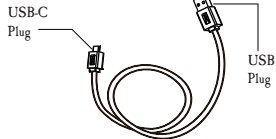 

 1. The USB-C charging cable has a USB-C plug and a standard USB plug.

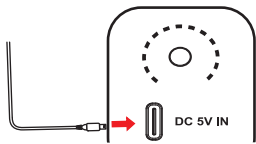


 2. Insert the charging cable's USB-C plug into the USB-C Charging Port on the control panel of your speaker.



3. Insert the standard USB plug into the USB port of a computer or suitable USB charging adapter.

 LED CHARGING INDICATOR LIGHT

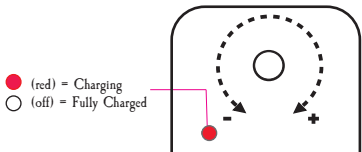


4. The charging indicator light turns red while the speaker is charging. When the speaker is fully charged, the indicator light turns off.

NOTES:


- Remove the charging cable once charging is complete.
- Overcharging could reduce the life of the battery.
- A charged battery will lose its capacity when speaker is idle.

Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.

 Bluetooth Pairing

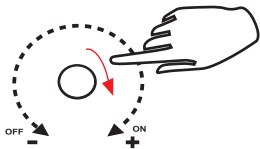

 1. Turn the volume knob clockwise to power on your speaker. The speaker will immediately enter Bluetooth mode after powering on.

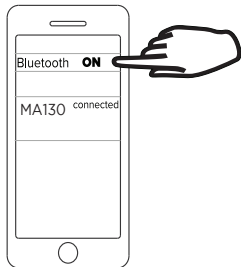


2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "MA130". A tone will sound once Bluetooth pairing is successfully.

TWS Pairing Mode


With True Wireless Pairing (TWS), your Wireless Boombox Light Up Speaker can be paired with another Wireless Boombox Light Up Speaker. Follow the directions below to successfully connect the speakers together:

1. Turn the volume knob of each speaker clockwise to power them both on.
2. To activate TWS pairing mode, press the TWS button twice on either speaker.
3. A tone will sound from both speakers indicating they have paired together successfully.
4. Once the speakers are connected, go into the Bluetooth settings page on your mobile device and connect to the available device MAI30.

   
NOTE: To disconnect speakers, press the TWS button twice on either speaker. A tone will sound from both speakers when disconnected.

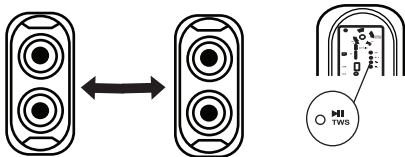



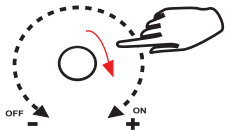



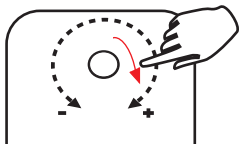







Using Your Speaker



Turn the volume knob clockwise to power your speaker ON.
Turn the volume knob counterclockwise to power your speaker OFF.

 


 + Turn the volume knob clockwise to raise the volume.
 - Turn volume knob counterclockwise to lower the volume.


-  EQ Press EQ to change between 5 sound effects: 1. Jazz 2. Rock 3. Bass 4. Normal 5. Classical.
-  M  Press and hold M  to turn light effects On/Off.
-  MIC + Press  to go to the next track. Press and hold to raise the MIC volume.
-  MIC - Press  to go to the next track. Press and hold to lower the MIC volume.
-  TWS Press  to go to play or pause a track.
-   Plug in your TF card/USB device to play music.

Changing Modes


Press the Mode Button **M** /  repeatedly to toggle through your speaker's various modes. You can choose between Bluetooth Mode (default), USB Mode, or TF Memory Card Mode, AUX Mode.

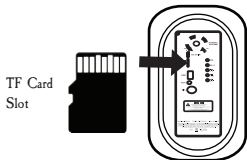

 
When a TF or Micro SD memory card is inserted into the TF Card Slot, your speaker will play any .MP3 music file stored on the card.

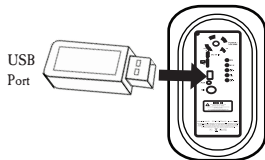

 
When a USB thumb drive or jump drive is inserted into the USB Port your speaker will play any .MP3 music file stored on the drive.

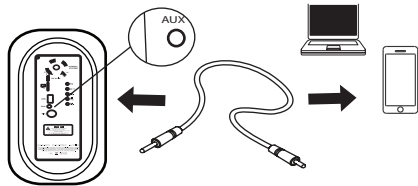

Insert one end of a 3.5mm auxiliary cable* into the AUX port. Attach the other end to a computer, MP3 or other media-playing device. The speaker will automatically switch to AUX mode. If not, please press the Mode Button **M** /  to enter into AUX Mode.

*Accessory Not Included

 Microphone Function

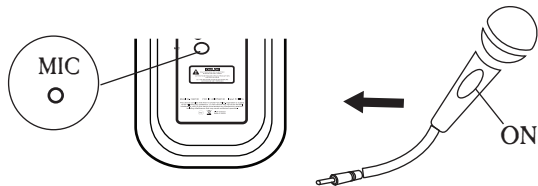

Plug the end of a wired microphone* into the MIC port.

Turn the microphone on.

To adjust microphone volume, press and hold **MIC+** or **MIC-** to raise or lower the volume.

*Accessory Not Included

Care and Maintenance

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on the USB cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Sakar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at www.sakar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), **MUST** be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

Sakar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.