# (Fold Inward) - - - - ▶

## (Back Cover)

# (Front Cover)


Using a Microphone

ophone feature may be used during any mode.

Plug the 1/4" connector of a wired microphone *(not included)* into the microphone input port on the front of the speaker. Switch the mic ON.
• Press and hold the [+4/ ECHO -] and [+) / ECHO +] buttons on the front of the

- Adjust microphone volume using the [MIC VOL] dial on the front of the speaker.
- Overall volume is still controlled by the [MAIN VOL/ POWER] dial on the speaker.

Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch it off when not in use.

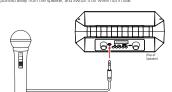

#### Compliance Information

FCC Information
This device compiles with Part 15 of the FCC Rules.

Note: This equipment has been tested and found to comply with the limits for a Class B signal device, pu-suest to part to first PCC. Plast. These Interest are designed to provide resourcised protection against harmful provided to the provided provided to the provided provided to the provided provided to the provided communication. However, there is no quantities that interest provided provided

If the experient does cause terminal inferences to rack or telescont receptive, which can be determined from the laboration of the control of the properties of the relaboration of the re

This symbol signifies the product must not be discarded as household vessle, and about be collaised to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

(BC) This symbol signifies and declares that this equipment has bettery charging which compiles with Cell formia CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. This symbol represents FCC Declaration of Conformity and compliance.

#### Warranty Information

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product of budget gave accessors in a field of in the original codesigning as susplied and datributed new by an authorized related in swarranted by Southern Telecons, Inc., to the original consumer purchaser against defects in materials and westermathly in "Warranty" in 8 of lows.

To obtain warranty service:

• Yish our website at www.southeretelecom.com

• Clock on Product Support

• Select the Brand of your device

• Select the Brand of your device

• Select Service Request and BI out the form to begin your inquiry

Warranty service not provided
This warranty service not provided
This warranty service not provided
This warranty does not cover demonst enabling from accident, misuse, abuse, improper installation of operation, task of
enabling and accident formation, and accident misuse, and accident formation,
enabling and accident formation, and accident for repair must be suitably packaged.

The authorized service center for require must be suitably packaged.

returned for the authorist service service for reper must be stately postaged.

Who weaponding, where provides content of the content part of the

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warmenings, so limitation or exclusions may not apply to you. The warmenty gives you specific legal origins, and you may have other rights that very from state to state or province to province. Contact your such cheesed

Polarrid, Polarrid & Priest, Polarrid Color Spectrum, and Polarrid Classic Border Logo are trademarks of PLR. IP Holdings,
LLC, used under Jecom

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc, used under Icense,

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this occument are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.





Designed in US Printed in China



Instruction Manual Wireless LED Speaker



### Before You Begin...

Customer Support
For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.




To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

- Do not disassemble, modify, or repair the device
- . Do not expose to extreme temperatures (heat or cold), open flames, humid, or

- Do not expose to extreme temperatures (heat or cold), open flames, humid, or vet conditions.
   Do not submerge in water.
   Low power may cause poor Bluetooth connection or sound distortion.
   Do not overdrarge battery.
   T using with a USB dapter, make sure the adapter is not damaged.
   Do not allow the USB port or the connections of the supplied USB cable to be exposed to dust or vetter, or to come into confact, with any conductive materials exposed to dust or vetter, or to come into confact, with any conductive materials. such as liquids, metallic powders, etc.
- In the Box
   PBT9518 Wireless Speaker (x1)
- USB Charging Cable (x1)
   User Manual (x1)

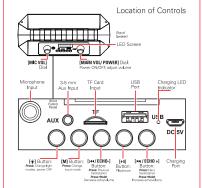

## Getting Started

Charging the Speaker Plug the small connector of the supplied USB charging cable into the charging port on the front of the speaker. Plug the large connector into the USB port on a computer, or into a 5V USB adapter in

The charging LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF
• Turn the [MAIN VOL/ POWER] dial clockwise until it clicks to power ON. A voice will be heard, and the speaker will enter Bluetooth paining mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.

• Turn the [MAIN VOL/ POWER] dial counter-clockwise

MAIN VOL / POWER

In all modes, overall volume can be adjusted with the [MAIN VOL/ POWER] dial on the front of the speaker.

In AUX and Bluetooth modes, volume can also be controlled by your connected

Changing Input Modes

ess the [M] button on the front of the speaker to switch input modes.

#### Using the Lights

Press the [\*] button on the speaker to change light modes and power OFF.

Bluetooth Pairing

1. Power the speaker ON. A voice will be heard and the speaker will enter
Bluetooth pairing mode. The LED screen viell flash "bLUE".

2. Set your mobile device to search for Bluetooth devices. When the list appears,
select PBTS918 fir firm the found devices. When the LED screen viell soldiely
display "bLUE" a successful pairing, a voice will be heard and the LED screen viell soldiely
display "bLUE".

In Bluetooth mode, playback and volume can be adjusted by the controls on the

front of the speaker, or by the controls on your paired device.

• Press the [ℍ] button to pause and resume playback.

• Press the [ℍ</ECHO -] and [►I/ECHO +] buttons to skip tracks.

## Using the 3.5 mm AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input port on the front of the speaker. Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device.

Switch input modes until you reach AUX mode. The LED screen will display the word 'AUX'.

In ALIX mode, all playback will be controlled by your connected device.

Note: For best power transfer, ensure cable is firmly connected to both devices

TF Card Input Insert aTF card into the TF card input port on the speaker with the metal contacts facing down. Push in until it clicks.

Note: You must have a TF card inserted to switch to TF input mode.

Change input modes until you enter TF card mode. The speaker will automatically begin playing music off the device.

In TF card mode, control playback with the controls on the speaker.

Press the [H] button to pause and resume playback.
Press the [H] and [H4/ ECHO -] buttons to skip tracks.

Using the FM Radio

Change input modes until you enter FM radio mode. The LED screen will display the current FM radio frequency.

In FM radio mode, playback will be controlled by the buttons on the front of the speaker.

• Press the [int] button to start or stop scanning and saving available radio stations.
The LED screen will show the scanning progress. If it is not stopped, the radio will make a complete scan and save of all nearby radio stations.

. Press the [►H/ ECHO +] and [HH/ ECHO -] buttons to skip through saved stations.

Using the USB Port

Oshing the Osb Fort. To charge or power a device, insert the USB connector of your device's USB cable (not included) into the USB Port on the speaker's control panel.

To play audio, plug in a USB drive containing audio files. The speaker will begin playing the audio automatically.