

INSTRUCTIONS FOR USE OF MICROPHONE

1. Wireless microphone usage

Open its switch, and adjust the distance between microphone and mouth to optimize the effect. If squeaking appears, please adjust the microphone volume accordingly or adjust the distance between microphone and speaker.

2. Attentions for wireless microphone:

- A. Low battery will lead to the shortening of receive distance, noise, distortion and even soundless. Please replace battery then. Please take out the battery, which is not used for a long period, in order to avoid the battery leakage damage to the microphone.
- B. Please try not to use wireless microphone in the thunderstorm weather, in order to avoid accidents or damage of wireless microphone.

3. Attentions for remote control

Low battery will lead to the shortening of receive distance, poor receiving or no receiving. Please replace battery then. Please take out the battery, which is not used for a long period, in order to avoid the battery leakage damage of the remote control.

Operating instructions

1. Connect left speaker (satellite speaker)

Left speaker connects to the audio output terminal on the back panel of the main speaker.

2. Connect sound source

Connect sound resource devices (TV, DVD, PC, MP3, etc.) to the audio input terminal on the back panel by RCA Cord.

3. Play

Plug the power cord in, and adjust the main volume knob to proper place. Switch on, and adjust Treble and Bass in accordance with your preferences. Then, you can enjoy the wonderful & professional sound brought by the product.

4. Karaoke performance

Plug in the microphone, and then turn the knobs to adjust microphone volume and reverberation for optimizing the performance. You only need to install the microphone battery and switch on. (The models with wireless microphone have this function)
Note: After using, please turn down the volume first. Then switch off the power and pull out the power plug.


GEARDON[®]
GD-DM613



PORTABLE RECHARGEABLE SPEAKER

(Please read this manual before using the detailed)

USER MANUAL

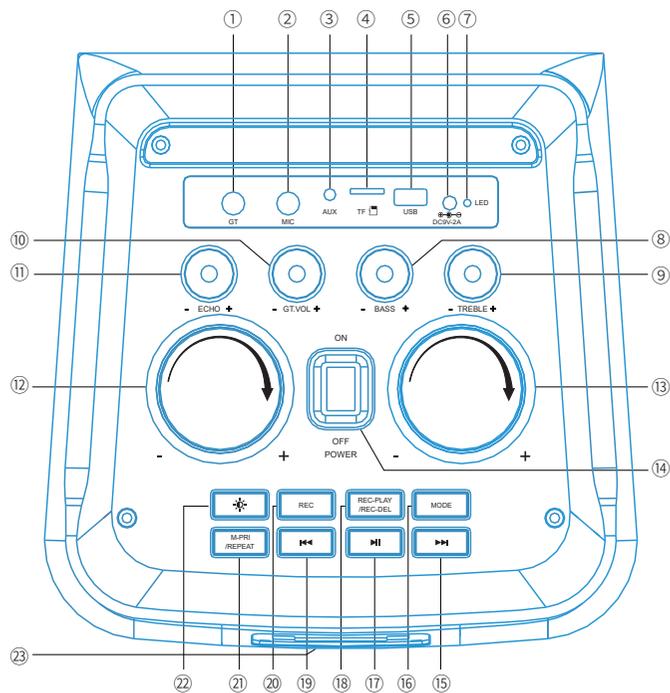


Control panel description

- 1. **GT:**
guitar input
- 2. **MIC:**
microphone input
- 3. **AUX:**
external audio input
- 4. **TF:**
TF card slot
- 5. **USB:**
USB interface
- 6. **9V IN:**
DC9V charging interface
- 7. **LED:**
charging indicator
- 8. **BASS:**
bass control knob
- 9. **TREBLE:**
bass control knob
- 10. **GT.VOL:**
guitar volume knob
- 11. **ECHO:**
echo knob(for microphone)
- 12. **MIC.VOL:**
microphone volume knob
- 13. **VOLUME:**
master volume knob
- 14. **OFF ON/POWER:**
power switch
- 15. **▶▶:**
next track/next channel
- 16. **MODE/UON/UOFF:**
change audio input settings (bluetooth/ FM/ music/ AUX)
long press:voice on/off
- 17. **⏮/TWS:**
play/pause
long press:play the recording
long press:tandem bluetooth speakers (bluetooth mode)
long press:run auto channel search(FM mode)
- 18. **REC-PLAY/REC-DEL:**
play/delete the recording
long press:delete the recording file
- 19. **⏮/UOC/OFF:**
previous track/previous channel
long press:remove vocals/cancel
- 20. **REC:**
record
- 21. **M-PRI/REPEAT:**
microphone priority/repeat
long press:repeat one track/shuffle play
play tracks from a folder/play all tracks
- 22. **⚙:**
flame lights switch(7 modes)
- 23. **Display:**
display

Remote control functions

- 1. **POWER:**
standby power button
- 2. **MUTE:**
mute button
- 3. **REPEAT:**
repeat one track/all tracks
- 4. **MODE:**
change audio input settings (bluetooth/ FM/ music/ AUX)
- 5. **number button:**
choose the track/channel
- 6. **sound:**
EQ modes button(rock/pop/jazz)
- 7. **RECORD:**
record
- 8. **⏮/⏭:**
play/pause
long press:play the recording
long press:run auto channel search(FM mode)
- 9. **VOL -:**
decrease master volume
- 10. **VOL +:**
increase master volume
- 11. **⏮:**
previous track/previous channel
- 12. **⏭:**
next track/next channel

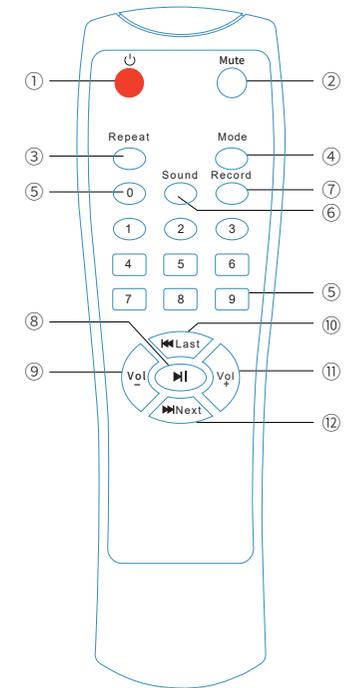

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.