


280*210mm 105G双铜 单色双面印刷+对折

Aitkenson.

MODE NO.:B122

BLUETOOTH SPEAKER INSTRUCTION MANUAL

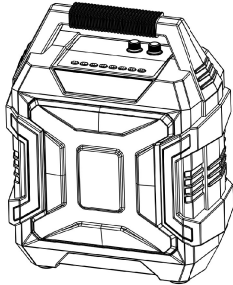

Functional Brief Description	
ON/OFF	Power Switch
MODE	Mode Switch
↺/CH	Repeat/Bluetooth Device Remove / FM Channel and Frequency Switch
EQ/ECHO	Mute Switch/Long press to reverb/adjustment
REC	Record (short press in random mode to record)
LIGHT	RGB Light Effect Switch
AUTO SCAN/ 	FM Auto-scanning / Play and pause
FM- 	Last Song / Backward FM Channel or Frequency
FM+ 	Next Song / Forward FM Channel or Frequency
-MIC VOL+	Microphone Volume Control up/Down
-VOLUME+	Volume Control up/Down
TF CARD	TF Card Socket
DC 5V	Micro USB Charge Socket
MIC	Microphone Socket
AUX	External Audio Input Socket
USB	USB Socket

MODE SWITCH ▾

Press "MODE" button to Switch "BT-|", "USB-|", "TF-|", "LINE" mode (Non human voice version warning tone)
The first time booting will enter into Bluetooth mode by default; booting again will enter the mode before power off.(Shutdown mode memory ,volume and channel search memory)

BLUETOOTH CONNECTING ▾

Press "MODE" button to switch Bluetooth mode (|, |, |, |) (Warning Tone :BT_MODE) , The Bluetooth signal light quick shining;
Mobile Phone or other device open the Bluetooth function , searching; **B122**. Click it and to connect.(the first time for connecting need to manual match)After connect successfully (Warning Tone: BT_CONNECT), the Bluetooth signal light long shining, then can play the music (Bluetooth signal light slow shining when playing); Music pause. Bluetooth signal light long shining. If you want to connect a new device to disconnect the current connection, and then according to the above steps to search the connection.
Bluetooth Player Under Bluetooth mode, press "|" can play/pause music, short press "↺" for next song; short press "↻" for last song; Press "|" for pause. press once again to replay, long press "↺"and "↻" useless.
Force Disconnect Bluetooth Device: Under in Bluetooth mode, long press "↺", can force disconnect the current Bluetooth device (Warning Tone: BT_DISCONNECT), the Bluetooth signal light will shining,at the meantime, other Bluetooth device can search the **B122**.
Warning Tone : Under in Bluetooth mode, long press "MODE" 5 second and the screen show " |, |, |, |" it can off/on the warning tone for mode switch, digital button useless .

MP3 MODE(USB/TF) ▾

1. MP3 Player (USB/TF)
1. Insert USB or TF card (|, |, |, |) (Warning Tone: USB-TF).will enter MP3 mode; it will play music from USB or TF card automatically; short press "↺" (when pause) long press "↺" (useless) ,press once again to replay; long press "↻" the music time fast forward, long press "↻" the music time fast rewind. When insert USB or TF, the last insert device will play priority.
2. Switch Player Mode: short press "↺" button to switch player mode (|, |) (loop playback, |, |) repeat playback, |, |, |, | random playback (LED screen Auto-exit after model name displaying for 2 seconds, default setting to complete. |

FM RADIO MODE ▾

1.Auto Scanning: Long press "|" for auto scanning from "87.5MHZ—108MHZ", then the scanned channel can be auto saved channel from CH1—50. And the screen will display " |, |, |, |" After auto scanning, short press "↺" button to switch the channel (Display " |, |, |, |"); short press "CH" button to switch the frequency (|, |, |, |) (|, |, |, |)
2. Semi-automatic Channel Selection : after auto scanning, in FM mode, short press "CH" buttons to switch channel and frequency, press "↺" button to switch the channel to semi-automatic Channel Selection, channel and frequency display forward or backward.

3. FM Frequency selection: in FM mode, short press "CH" button to switch channel and frequency, long press "↺" to switch channel forward; it will be stop and display after receive channel; long press "↺" to switch channel backward; it will be stop and display after receive channel.
A. FM Channel selection: The screen display CH for flashing 2 times, press "↺" button to switch the channel (display " |, |, |, |");
B. FM Frequency selection: The screen display FM frequency flashing 2 times, press "↺" to switch the frequency (display " |, |, |, |")
Remark: Under the FM mode, after auto scanning, the screen will display channel number and then change to frequency number after 3 seconds, short press "|" (display " |, |, |, |"), the amplifier will mute ; User memory mode: if press "CH" button is enter the frequency switch before power off, then the next time in FM mode, short press "↺" to frequency switch.

AUX MODE ▾

1. In any mode, speaker will enter AUX mode when insert AUX line (Display " |, |, |, |") (Warning Tone: AUX_MODE); return back to Bluetooth mode when take out the AUX line.
2. In AUX mode, short press "|" button is Mute (Display " |, |, |, |"), press once again "|" exit Mute.
3. Short press "MODE" button to switch next mode, other buttons doesn't work.

VOLUME CONTROL ▾

In playing state, press "-VOLUME+" to adjust volume up/down.

MICROPHONE VOLUME CONTROL ▾

Open the microphone, press "-MIC VOL+" to adjust volume up/down.

REVERBERATION ADJUSTMENT ▾

The microphone insert into the device (open the wireless microphone also can use), long press "EQ/ECHO" button to enter reverb size adjustment. (No Other button action for 3 seconds . exit to the original EQ mode) Display " |, |, |, |" . press "↺" , turn up reverb/adjustment (echo) volume . press "↻" turn down reverb/adjustment (echo) volume. Short press "EQ/ECHO" , exit to the original EQ mode.

EQ/CHOOSE ▾

Short press "EQ" button to switch sound effect (CLASS/JAZZ/POP/NORMAL) display " |, |, |, |" - " |, |, |, |" after completing adjustment, no operation after 2 seconds, it will automatically return to the volume status .

MICROPHONE INPUT ▾

In random mode, the microphone can insert into the device (open the wireless microphone also can use) the microphone volume and reverb/adjustment size can be adjusted by independent.

REC MODE:RECORDING FUNCTION (UNDER MICROPHONE INPUT STATES) ▾

REC: In random mode (insert USB or TF card), long press REC Button 3s to into recording mode directly, screen displays the REC and the recording time. Then short press REC Button to stop record (display PAUSE) press "|" to play a recording just now and show REC later. Long press REC Button when need to record, press MODE Button return to the mode before recording.
Delete the recording : short press REC to arrange the recording folder sequence; long press "AUTO SCAN" to delete the current recording file.

RECHARGE ▾

Please use the DC5V / 1A current safety standards charger or above to meet safety standards charger
When the symbol " |, |, |, |" is flashing (3.0V-3.3V), it needs to be charged immediately . Automatically shutdown the battery is below the protective voltage (Automatically shutdown below 3.0V), it will display " |, |, |, |" then display " |, |, |, |" , the device cannot enter standby mode.
Please turn down power switch to protect battery life if not charge timely. When charging, the symbol " |, |, |, |" light bright. The light goes off when the battery voltage reached 4.2 V. In full charge state, it will display " |, |, |, |" or top left corner (Accept to use the machine under the charging state)
In the charging state, the red charging indicator behind the machine will light up until in full charge

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.